

Note X: Covered *: New update

Volvo V10.0

Model Information					Diagnostic Function				
Market	Year	Model	Class	System	ECU Info.	DTC	Data List	Active Test	Special Func.
All	1996	850	B5202FS	Fuel System/ Combined System	X	X	X		
All	1996	850	B5204FS	Fuel System/ Combined System	X	X	X		
All	1996	850	B5204FT	Fuel System/ Combined System	X	X	X		
All	1996	850	B5204T2	Fuel System/ Combined System	X	X	X		
All	1996	850	B5234FS	Fuel System/ Combined System	X	X	X		
All	1996	850	B5234FT	Fuel System/ Combined System	X	X	X		
All	1996	850	B5234T2	Fuel System/ Combined System	X	X	X		
All	1996	850	B5234T4	Fuel System/ Combined System	X	X	X		
All	1996	850	B5234T5	Fuel System/ Combined System	X	X	X		
All	1996	850	B5252FS	Fuel System/ Combined System	X	X	X		
All	1996	850	B5252FS LH 3.2	Fuel System/ Combined System	X	X	X		
All	1996	850	B5252FS M4.4	Fuel System/ Combined System	X	X	X		
All	1996	850	D525T MSA 15.7	Fuel System/ Combined System	X	X	X		
All	1996	850	AW50-42	Transmission Control Module(TCM)	X	X	X	X	
All	1996	850		Anti-brake System Module(ABS/BCM)	X	X	X	X	
All	1996	850		Supplemental Restraint System Module(SRS)	X	X	X		
All	1996	850		Power Seat Module,Left(PSL)	X	X	X	X	
All	1996	850		Climate Control	X	X	X		
All	1996	850		Immobilizer	X	X	X	X	
All	1996	850		Resetting the service reminder indicator(SRI)					
All	1997	850	B5202FS	Fuel System/ Combined System	X	X	X		
All	1997	850	B5204FT	Fuel System/ Combined System	X	X	X		
All	1997	850	B5204T2	Fuel System/ Combined System	X	X	X		
All	1997	850	B5234FS	Fuel System/ Combined System	X	X	X		
All	1997	850	B5234FT	Fuel System/ Combined System	X	X	X		
All	1997	850	B5234T4	Fuel System/ Combined System	X	X	X		
All	1997	850	B5234T5	Fuel System/ Combined System	X	X	X		
All	1997	850	B5252FS	Fuel System/ Combined System	X	X	X		
All	1997	850	B5252FS M4.4	Fuel System/ Combined System	X	X	X		
All	1997	850	B5254T	Fuel System/ Combined System	X	X	X		
All	1997	850	D525T MSA 15.7	Fuel System/ Combined System	X	X	X		
All	1997	850	AW50-42	Transmission Control Module(TCM)	X	X	X	X	
All	1997	850		Anti-brake System Module(ABS/BCM)	X	X	X	X	
All	1997	850		Supplemental Restraint System Module(SRS)	X	X	X		

All	1997	850		Power Seat Module,Left(PSL)	X	X	X	X	
All	1997	850		Climate Control	X	X	X		
All	1997	850		Resetting the service reminder indicator(SRI)					
All	1997	850		Immobilizer	X	X	X	X	
All	1996	940	B6244FS	Fuel System/ Combined System	X	X	X		
All	1996	940	B6254FS	Fuel System/ Combined System	X	X	X		
All	1996	940	B6254GS	Fuel System/ Combined System	X	X	X		
All	1996	940	B6304FS	Fuel System/ Combined System	X	X	X		
All	1996	940	B6304GS	Fuel System/ Combined System	X	X	X		
All	1996	940	AW30-43	Transmission Control Module(TCM)	X	X	X		
All	1996	940		Anti-brake System Module(ABS/BCM)	X	X	X		
All	1996	940		Supplemental Restraint System Module(SRS)	X	X	X		
All	1996	940		Power Seat Module,Left(PSL)	X	X	X	X	
All	1996	940		Immobilizer	X	X	X	X	
All	1997	940	B6244FS	Fuel System/ Combined System	X	X	X		
All	1997	940	B6254FS	Fuel System/ Combined System	X	X	X		
All	1997	940	B6254GS	Fuel System/ Combined System	X	X	X		
All	1997	940	B6304FS	Fuel System/ Combined System	X	X	X		
All	1997	940	B6304GS	Fuel System/ Combined System	X	X	X		
All	1997	940	AW30-43	Transmission Control Module(TCM)	X	X	X		
All	1997	940		Anti-brake System Module(ABS/BCM)	X	X	X		
All	1997	940		Supplemental Restraint System Module(SRS)	X	X	X		
All	1997	940		Power Seat Module,Left(PSL)	X	X	X	X	
All	1997	940		Immobilizer	X	X	X	X	
All	1996	960	B6244FS	Fuel System/ Combined System	X	X	X		
All	1996	960	B6254FS	Fuel System/ Combined System	X	X	X		
All	1996	960	B6254GS	Fuel System/ Combined System	X	X	X		
All	1996	960	B6304FS	Fuel System/ Combined System	X	X	X		
All	1996	960	B6304GS	Fuel System/ Combined System	X	X	X		
All	1996	960	AW30-43	Transmission Control Module(TCM)	X	X	X		
All	1996	960		Anti-brake System Module(ABS/BCM)	X	X	X		
All	1996	960		Supplemental Restraint System Module(SRS)	X	X	X		
All	1996	960		Power Seat Module,Left(PSL)	X	X	X	X	
All	1996	960		Immobilizer	X	X	X	X	
All	1997	960	B6244FS	Fuel System/ Combined System	X	X	X		
All	1997	960	B6254FS	Fuel System/ Combined System	X	X	X		
All	1997	960	B6254GS	Fuel System/ Combined System	X	X	X		
All	1997	960	B6304FS	Fuel System/ Combined System	X	X	X		
All	1997	960	B6304GS	Fuel System/ Combined System	X	X	X		
All	1997	960	AW30-43	Transmission Control Module(TCM)	X	X	X		
All	1997	960		Anti-brake System Module(ABS/BCM)	X	X	X		
All	1997	960		Supplemental Restraint System Module(SRS)	X	X	X		
All	1997	960		Power Seat Module,Left(PSL)	X	X	X	X	

All	1997	960		Immobilizer	X	X	X	X	
All	1999	S40(-04)		Resetting the service reminder indicator(SRI)					X
All	1999	S40(-04)	B4164S	Anti-Spin System	X	X	X	X	
All	1999	S40(-04)	B4184S	Anti-Spin System	X	X	X	X	
All	1999	S40(-04)	B4184SM	Anti-Spin System	X	X	X	X	
All	1999	S40(-04)	B4194T	Anti-Spin System	X	X	X	X	
All	1999	S40(-04)	B4204S	Anti-Spin System	X	X	X	X	
All	1999	S40(-04)	B4204T	Anti-Spin System	X	X	X	X	
All	1999	S40(-04)	D4192T	Anti-Spin System	X	X	X	X	
All	1999	S40(-04)	D4192T2	Anti-Spin System	X	X	X	X	
All	1999	S40(-04)	B4164S	Fuel System/ Combined System	X	X	X	X	
All	1999	S40(-04)	B4184S	Fuel System/ Combined System	X	X	X	X	
All	1999	S40(-04)	B4184SM	Fuel System/ Combined System	X	X	X	X	
All	1999	S40(-04)	B4194T	Fuel System/ Combined System	X	X	X	X	
All	1999	S40(-04)	B4204S	Fuel System/ Combined System	X	X	X	X	
All	1999	S40(-04)	B4204T	Fuel System/ Combined System	X	X	X	X	
All	1999	S40(-04)	D4192T	Fuel System/ Combined System	X	X	X	X	
All	1999	S40(-04)	D4192T2	Fuel System/ Combined System	X	X	X	X	
All	1999	S40(-04)	AW50-42	Transmission Control Module(TCM)	X	X	X	X	
All	1999	S40(-04)		Anti-brake System Module(ABS/BCM)	X	X	X	X	
All	1999	S40(-04)		Supplemental Restraint System Module(SRS)	X	X	X		
All	1999	S40(-04)		Climate Control Module(CCM)	X	X	X	X	
All	1999	S40(-04)		Central Electronic Module(CEM)	X	X	X	X	
All	1999	S40(-04)		Driver Information Module(DIM)	X	X	X	X	
All	1999	S40(-04)		Immobilizer	X	X	X	X	
All	1999	S40(-04)		Lock and alarm	X	X	X	X	
All	2000	S40(-04)		Resetting the service reminder indicator(SRI)					X
All	2000	S40(-04)	B4164S2	Anti-Spin System	X	X	X	X	
All	2000	S40(-04)	B4184S2	Anti-Spin System	X	X	X	X	
All	2000	S40(-04)	B4184S3	Anti-Spin System	X	X	X	X	
All	2000	S40(-04)	B4184SM	Anti-Spin System	X	X	X	X	
All	2000	S40(-04)	B4194T2	Anti-Spin System	X	X	X	X	
All	2000	S40(-04)	B4204S2	Anti-Spin System	X	X	X	X	
All	2000	S40(-04)	D4192T2	Anti-Spin System	X	X	X	X	
All	2000	S40(-04)	B4164S2	Fuel System/ Combined System	X	X	X	X	
All	2000	S40(-04)	B4184S2	Fuel System/ Combined System	X	X	X	X	
All	2000	S40(-04)	B4184S3	Fuel System/ Combined System	X	X	X	X	
All	2000	S40(-04)	B4184SM	Fuel System/ Combined System	X	X	X	X	
All	2000	S40(-04)	B4194T2	Fuel System/ Combined System	X	X	X	X	
All	2000	S40(-04)	B4204S2	Fuel System/ Combined System	X	X	X	X	
All	2000	S40(-04)	D4192T2	Fuel System/ Combined System	X	X	X	X	
All	2000	S40(-04)	B4204T2	Fuel System/ Combined System	X	X	X	X	
All	2000	S40(-04)	B4204T2 CV/VT	Fuel System/ Combined System	X	X	X	X	

All	2000	S40(-04)	AW50-42	Transmission Control Module(TCM)	X	X	X	X	
All	2000	S40(-04)		Anti-brake System Module(ABS/BCM)	X	X	X	X	
All	2000	S40(-04)		Supplemental Restraint System Module(SRS)	X	X	X		
All	2000	S40(-04)		Climate Control Module(CCM)	X	X	X	X	
All	2000	S40(-04)		Central Electronic Module(CEM)	X	X	X	X	
All	2000	S40(-04)		Driver Information Module(DIM)	X	X	X	X	
All	2000	S40(-04)		Immobilizer	X	X	X	X	
All	2000	S40(-04)		Lock and alarm	X	X	X	X	
All	2001	S40(-04)		Resetting the service reminder indicator(SRI)					X
All	2001	S40(-04)	B4164S2	Anti-Spin System	X	X	X	X	
All	2001	S40(-04)	B4184S2	Anti-Spin System	X	X	X	X	
All	2001	S40(-04)	B4184S3	Anti-Spin System	X	X	X	X	
All	2001	S40(-04)	B4184S9	Anti-Spin System	X	X	X	X	
All	2001	S40(-04)	B4184S10	Anti-Spin System	X	X	X	X	
All	2001	S40(-04)	B4184SM	Anti-Spin System	X	X	X	X	
All	2001	S40(-04)	B4184SJ	Anti-Spin System	X	X	X	X	
All	2001	S40(-04)	B4204S2	Anti-Spin System	X	X	X	X	
All	2001	S40(-04)	B4204T3	Anti-Spin System	X	X	X	X	
All	2001	S40(-04)	B4204T5	Anti-Spin System	X	X	X	X	
All	2001	S40(-04)	D4192T3	Anti-Spin System	X	X	X	X	
All	2001	S40(-04)	D4192T4	Anti-Spin System	X	X	X	X	
All	2001	S40(-04)	B4164S2	Fuel System/ Combined System	X	X	X	X	
All	2001	S40(-04)	B4184S2	Fuel System/ Combined System	X	X	X	X	
All	2001	S40(-04)	B4184S3	Fuel System/ Combined System	X	X	X	X	
All	2001	S40(-04)	B4184S9	Fuel System/ Combined System	X	X	X	X	
All	2001	S40(-04)	B4184S10	Fuel System/ Combined System	X	X	X	X	
All	2001	S40(-04)	B4184SM	Fuel System/ Combined System	X	X	X	X	
All	2001	S40(-04)	B4184SJ	Fuel System/ Combined System	X	X	X	X	
All	2001	S40(-04)	B4204S2	Fuel System/ Combined System	X	X	X	X	
All	2001	S40(-04)	B4204T3	Fuel System/ Combined System	X	X	X	X	
All	2001	S40(-04)	B4204T5	Fuel System/ Combined System	X	X	X	X	
All	2001	S40(-04)	D4192T3	Fuel System/ Combined System	X	X	X	X	
All	2001	S40(-04)	D4192T4	Fuel System/ Combined System	X	X	X	X	
All	2001	S40(-04)	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	
All	2001	S40(-04)		Anti-brake System Module(ABS/BCM)	X	X	X	X	
All	2001	S40(-04)		Supplemental Restraint System Module(SRS)	X	X	X		
All	2001	S40(-04)		Climate Control Module(CCM)	X	X	X	X	
All	2001	S40(-04)		Central Electronic Module(CEM)	X	X	X	X	
All	2001	S40(-04)		Driver Information Module(DIM)	X	X	X	X	
All	2001	S40(-04)		Immobilizer	X	X	X	X	
All	2001	S40(-04)		Lock and alarm	X	X	X	X	
All	2002	S40(-04)		Resetting the service reminder indicator(SRI)					X
All	2002	S40(-04)	B4164S2	Anti-Spin System	X	X	X	X	

All	2002	S40(-04)	B4184S2	Anti-Spin System	X	X	X	X	
All	2002	S40(-04)	B4184S3	Anti-Spin System	X	X	X	X	
All	2002	S40(-04)	B4184S9	Anti-Spin System	X	X	X	X	
All	2002	S40(-04)	B4184S10	Anti-Spin System	X	X	X	X	
All	2002	S40(-04)	B4184SJ	Anti-Spin System	X	X	X	X	
All	2002	S40(-04)	B4204S2	Anti-Spin System	X	X	X	X	
All	2002	S40(-04)	B4204T3	Anti-Spin System	X	X	X	X	
All	2002	S40(-04)	B4204T5	Anti-Spin System	X	X	X	X	
All	2002	S40(-04)	D4192T3	Anti-Spin System	X	X	X	X	
All	2002	S40(-04)	D4192T4	Anti-Spin System	X	X	X	X	
All	2002	S40(-04)	B4164S2	Fuel System/ Combined System	X	X	X	X	
All	2002	S40(-04)	B4184S2	Fuel System/ Combined System	X	X	X	X	
All	2002	S40(-04)	B4184S3	Fuel System/ Combined System	X	X	X	X	
All	2002	S40(-04)	B4184S9	Fuel System/ Combined System	X	X	X	X	
All	2002	S40(-04)	B4184S10	Fuel System/ Combined System	X	X	X	X	
All	2002	S40(-04)	B4184SJ	Fuel System/ Combined System	X	X	X	X	
All	2002	S40(-04)	B4204S2	Fuel System/ Combined System	X	X	X	X	
All	2002	S40(-04)	B4204T3	Fuel System/ Combined System	X	X	X	X	
All	2002	S40(-04)	B4204T5	Fuel System/ Combined System	X	X	X	X	
All	2002	S40(-04)	D4192T3	Fuel System/ Combined System	X	X	X	X	
All	2002	S40(-04)	D4192T4	Fuel System/ Combined System	X	X	X	X	
All	2002	S40(-04)	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	
All	2002	S40(-04)		Anti-brake System Module(ABS/BCM)	X	X	X	X	
All	2002	S40(-04)		Supplemental Restraint System Module(SRS)	X	X	X		
All	2002	S40(-04)		Climate Control Module(CCM)	X	X	X	X	
All	2002	S40(-04)		Central Electronic Module(CEM)	X	X	X	X	
All	2002	S40(-04)		Driver Information Module(DIM)	X	X	X	X	
All	2002	S40(-04)		Immobilizer	X	X	X	X	
All	2002	S40(-04)		Lock and alarm	X	X	X	X	
All	2003	S40(-04)		Resetting the service reminder indicator(SRI)				X	
All	2003	S40(-04)	B4164S2	Anti-Spin System	X	X	X	X	
All	2003	S40(-04)	B4184S2	Anti-Spin System	X	X	X	X	
All	2003	S40(-04)	B4184S3	Anti-Spin System	X	X	X	X	
All	2003	S40(-04)	B4184S9	Anti-Spin System	X	X	X	X	
All	2003	S40(-04)	B4184S10	Anti-Spin System	X	X	X	X	
All	2003	S40(-04)	B4184SJ	Anti-Spin System	X	X	X	X	
All	2003	S40(-04)	B4204S2	Anti-Spin System	X	X	X	X	
All	2003	S40(-04)	B4204T3	Anti-Spin System	X	X	X	X	
All	2003	S40(-04)	B4204T5	Anti-Spin System	X	X	X	X	
All	2003	S40(-04)	D4192T3	Anti-Spin System	X	X	X	X	
All	2003	S40(-04)	D4192T4	Anti-Spin System	X	X	X	X	
All	2003	S40(-04)	B4164S2	Fuel System/ Combined System	X	X	X	X	
All	2003	S40(-04)	B4184S2	Fuel System/ Combined System	X	X	X	X	

All	2003	S40(-04)	B4184S3	Fuel System/ Combined System	X	X	X	X	
All	2003	S40(-04)	B4184S9	Fuel System/ Combined System	X	X	X	X	
All	2003	S40(-04)	B4184S10	Fuel System/ Combined System	X	X	X	X	
All	2003	S40(-04)	B4184SJ	Fuel System/ Combined System	X	X	X	X	
All	2003	S40(-04)	B4204S2	Fuel System/ Combined System	X	X	X	X	
All	2003	S40(-04)	B4204T3	Fuel System/ Combined System	X	X	X	X	
All	2003	S40(-04)	B4204T5	Fuel System/ Combined System	X	X	X	X	
All	2003	S40(-04)	D4192T3	Fuel System/ Combined System	X	X	X	X	
All	2003	S40(-04)	D4192T4	Fuel System/ Combined System	X	X	X	X	
All	2003	S40(-04)	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	
All	2003	S40(-04)		Anti-brake System Module(ABS/BCM)	X	X	X	X	
All	2003	S40(-04)		Supplemental Restraint System Module(SRS)	X	X	X		
All	2003	S40(-04)		Climate Control Module(CCM)	X	X	X	X	
All	2003	S40(-04)		Central Electronic Module(CEM)	X	X	X	X	
All	2003	S40(-04)		Driver Information Module(DIM)	X	X	X	X	
All	2003	S40(-04)		Immobilizer	X	X	X	X	
All	2003	S40(-04)		Lock and alarm	X	X	X	X	
All	2004	S40(-04)		Resetting the service reminder indicator(SRI)				X	
All	2004	S40(-04)	B4164S2	Anti-Spin System	X	X	X	X	
All	2004	S40(-04)	B4184S2	Anti-Spin System	X	X	X	X	
All	2004	S40(-04)	B4184S3	Anti-Spin System	X	X	X	X	
All	2004	S40(-04)	B4184S9	Anti-Spin System	X	X	X	X	
All	2004	S40(-04)	B4184S10	Anti-Spin System	X	X	X	X	
All	2004	S40(-04)	B4184SJ	Anti-Spin System	X	X	X	X	
All	2004	S40(-04)	B4204S2	Anti-Spin System	X	X	X	X	
All	2004	S40(-04)	B4204T3	Anti-Spin System	X	X	X	X	
All	2004	S40(-04)	D4192T3	Anti-Spin System	X	X	X	X	
All	2004	S40(-04)	D4192T4	Anti-Spin System	X	X	X	X	
All	2004	S40(-04)	B4164S2	Fuel System/ Combined System	X	X	X	X	
All	2004	S40(-04)	B4184S2	Fuel System/ Combined System	X	X	X	X	
All	2004	S40(-04)	B4184S3	Fuel System/ Combined System	X	X	X	X	
All	2004	S40(-04)	B4184S9	Fuel System/ Combined System	X	X	X	X	
All	2004	S40(-04)	B4184S10	Fuel System/ Combined System	X	X	X	X	
All	2004	S40(-04)	B4184SJ	Fuel System/ Combined System	X	X	X	X	
All	2004	S40(-04)	B4204S2	Fuel System/ Combined System	X	X	X	X	
All	2004	S40(-04)	B4204T3	Fuel System/ Combined System	X	X	X	X	
All	2004	S40(-04)	D4192T3	Fuel System/ Combined System	X	X	X	X	
All	2004	S40(-04)	D4192T4	Fuel System/ Combined System	X	X	X	X	
All	2004	S40(-04)	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	
All	2004	S40(-04)		Anti-brake System Module(ABS/BCM)	X	X	X	X	
All	2004	S40(-04)		Supplemental Restraint System Module(SRS)	X	X	X		
All	2004	S40(-04)		Climate Control Module(CCM)	X	X	X	X	
All	2004	S40(-04)		Central Electronic Module(CEM)	X	X	X	X	

All	2004	S40(04-)		Driver Information Module(DIM)	X	X	X	X	
All	2004	S40(04-)		Immobilizer	X	X	X	X	
All	2004	S40(04-)		Lock and alarm	X	X	X	X	
All	2004	S40(04-)		Resetting the service reminder indicator(SRI)					X
All	2004	S40(04-)	B5244S4	Engine Control Module(ECM)	X	X	X	X	1.Quick test of the fuel tank 2.Quick test of CRNE fuel tank system(USA/CDN)
All	2004	S40(04-)	B5244S5	Engine Control Module(ECM)	X	X	X	X	1.Quick test of the fuel tank 2.Quick test of CRNE fuel tank system(USA/CDN)
All	2004	S40(04-)	B5254T3	Engine Control Module(ECM)	X	X	X	X	1.Readiness Code 2.Adaptation of the throttle unit 3.Quick test of exhaust camshaft control 4.Quick test of intake camshaft control 5.Quick test of fuel pump(FP) 6.Quick test of the fuel tank system(USA/CDN)
All	2004	S40(04-)	D4204T	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve
All	2004	S40(04-)	D4204T2	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve
All	2004	S40(04-)	D4204T	Additive Dosing Module(ADM)	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
All	2004	S40(04-)	D4204T2	Additive Dosing Module(ADM)	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
All	2004	S40(04-)	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	1.Calibration of position sensor 2.Resetting adaptation 3.Resetting counter oil
All	2004	S40(04-)		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Calibration(Cars with DSTC)
All	2004	S40(04-)		Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position
All	2004	S40(04-)		Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2004	S40(04-)		Power Seat Module(PSM)	X	X	X	X	1.Programming the remote control setting
All	2004	S40(04-)		Supplemental Restraint System Module(SRS)	X	X	X		1.Calibration the occupant weight sensor(OWS)
All	2004	S40(04-)		Accessory Electronic Module(AEM)	X	X	X	X	
All	2004	S40(04-)		Audio Module(AUD)	X	X			
All	2004	S40(04-)		Central Electronic Module(CEM)	X	X	X	X	1.Calibration of position sensor,GDL lamps 2.Qick test of alternator function 3.Resetting low voltage counters 4.Resetting crash mode 5.Programming of rear window wiper when reversing
All	2004	S40(04-)		Driver Information Module(DIM)	X	X	X	X	1.Resetting the service reminder indicator

All	2004	S40(04-)		Phone Module(PHM)	X	X	X		1.Reinstalling the reserve battery
All	2004	S40(04-)		Steering Wheel Module(SWM)	X	X	X		
All	2004	S40(04-)		Infotainment Control Module(ICM)	X	X	X	X	1.Programming the infotainment control module(ICM)
All	2004	S40(04-)		Multimedia Module(MMM)	X	X	X	X	
All	2005	S40(04-)		Resetting the service reminder indicator(SRI)					X
All	2005	S40(04-)	B4164S3	Engine Control Module(ECM)	X	X	X	X	
All	2005	S40(04-)	B4184S11	Engine Control Module(ECM)	X	X	X	X	
All	2005	S40(04-)	B5244S4	Engine Control Module(ECM)	X	X	X	X	
All	2005	S40(04-)	B5244S5	Engine Control Module(ECM)	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
All	2005	S40(04-)	B5254T3	Engine Control Module(ECM)	X	X	X	X	1.Readiness Code 2.Adaptation of the throttle unit 3.Quick test of exhaust camshaft control 4.Quick test of intake camshaft control 5.Quick test of fuel pump(FP) 6.Quick test of the fuel tank system(USA/CDN)
All	2005	S40(04-)	D4164T	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters 2.Resetting the odometer particle trap 3.Adaptation of the exhaust gas recirculation(EGR) valve
All	2005	S40(04-)	D4204T	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve
All	2005	S40(04-)	D4204T2	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve
All	2005	S40(04-)	D4164T	Additive Dosing Module(ADM)	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
All	2005	S40(04-)	D4204T	Additive Dosing Module(ADM)	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
All	2005	S40(04-)	D4204T2	Additive Dosing Module(ADM)	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
All	2005	S40(04-)	AW50/51AWD	Transmission Control Module(TCM)	X	X	X	X	1.Calibration of position sensor 2.Resetting adaptation 3.Resetting counter oil
All	2005	S40(04-)	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	1.Calibration of position sensor 2.Resetting adaptation 3.Resetting counter oil
All	2005	S40(04-)	AW50/51AWD	Differential Electronic Module (DEM)	X	X	X		

All	2005	S40(04-)	M6AWD	Differential Electronic Module (DEM)	X	X	X		
All	2005	S40(04-)		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Calibration(Cars with DSTC)
All	2005	S40(04-)		Climate Control Module(CCM)	X	X	X		
All	2005	S40(04-)		Combustion preheater Module(CPM)	X	X	X	X	
All	2005	S40(04-)		Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position
All	2005	S40(04-)		Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2005	S40(04-)		Power Seat Module(PSM)	X	X	X	X	1.Programming the remote control setting
All	2005	S40(04-)		Supplemental Restraint System Module(SRS)	X	X	X		1.Calibration the occupant weight sensor(OWS)
All	2005	S40(04-)		Accessory Electronic Module(AEM)	X	X	X	X	
All	2005	S40(04-)		Audio Module(AUD)	X	X			
All	2005	S40(04-)		Central Electronic Module(CEM)	X	X	X	X	1.Calibration of position sensor,GDL lamps 2.Qick test of alternator function 3.Resetting low voltage counters 4.Resetting crash mode 5.Programming of rear window wiper when reversing
All	2005	S40(04-)		Driver Information Module(DIM)	X	X	X	X	1.Resetting the service reminder indicator
All	2005	S40(04-)		Phone Module(PHM)	X	X	X		1.Reinstalling the reserve battery
All	2005	S40(04-)		Steering Wheel Module(SWM)	X	X	X		
All	2005	S40(04-)		Infotainment Control Module(ICM)	X	X	X	X	1.Programming the infotainment control module(ICM)
All	2005	S40(04-)		Multimedia Module(MMM)	X	X	X	X	
All	2006	S40(04-)		Resetting the service reminder indicator(SRI)					X
All	2006	S40(04-)	B4164S3	Engine Control Module(ECM)	X	X	X	X	
All	2006	S40(04-)	B4184S11	Engine Control Module(ECM)	X	X	X	X	
All	2006	S40(04-)	B5244S4	Engine Control Module(ECM)	X	X	X	X	
All	2006	S40(04-)	B5244S5	Engine Control Module(ECM)	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
All	2006	S40(04-)	B5254T3	Engine Control Module(ECM)	X	X	X	X	1.Readiness Code 2.Adaptation of the throttle unit 3.Quick test of exhaust camshaft control 4.Quick test of intake camshaft control 5.Quick test of fuel pump(FP) 6.Quick test of the fuel tank system(USA/CDN)
All	2006	S40(04-)	D4164T	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters 2.Resetting the odometer particle trap 3.Adaptation of the exhaust gas recirculation(EGR) valve
All	2006	S40(04-)	D4204T	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve

All	2006	S40(04-)	D4204T2	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve
All	2006	S40(04-)	D4164T	Additive Dosing Module(ADM)	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
All	2006	S40(04-)	D4204T	Additive Dosing Module(ADM)	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
All	2006	S40(04-)	D4204T2	Additive Dosing Module(ADM)	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
All	2006	S40(04-)	AW50/51AWD	Transmission Control Module(TCM)	X	X	X	X	1.Calibration of position sensor 2.Resetting adaptation 3.Resetting counter oil
All	2006	S40(04-)	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	1.Calibration of position sensor 2.Resetting adaptation 3.Resetting counter oil
All	2006	S40(04-)	AW50/51AWD	Differential Electronic Module (DEM)	X	X	X		
All	2006	S40(04-)	M6AWD	Differential Electronic Module (DEM)	X	X	X		
All	2006	S40(04-)		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Calibration(Cars with DSTC)
All	2006	S40(04-)		Climate Control Module(CCM)	X	X	X		
All	2006	S40(04-)		Combustion preheater Module(CPM)	X	X	X	X	
All	2006	S40(04-)		Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position
All	2006	S40(04-)		Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2006	S40(04-)		Power Seat Module(PSM)	X	X	X	X	1.Programming the remote control setting
All	2006	S40(04-)		Supplemental Restraint System Module(SRS)	X	X	X		1.Calibration the occupant weight sensor(OWS)
All	2006	S40(04-)		Accessory Electronic Module(AEM)	X	X	X	X	
All	2006	S40(04-)		Audio Module(AUD)	X	X			
All	2006	S40(04-)		Central Electronic Module(CEM)	X	X	X	X	1.Calibration of position sensor,GDL lamps 2.Qick test of alternator function 3.Resetting low voltage counters 4.Resetting crash mode 5.Programming of rear window wiper when reversing
All	2006	S40(04-)		Driver Information Module(DIM)	X	X	X	X	1.Resetting the service reminder indicator
All	2006	S40(04-)		Phone Module(PHM)	X	X	X		1.Reinstalling the reserve battery
All	2006	S40(04-)		Steering Wheel Module(SWM)	X	X	X		
All	2006	S40(04-)		Infotainment Control Module(ICM)	X	X	X	X	1.Programming the infotainment control module(ICM)
All	2006	S40(04-)		Multimedia Module(MMM)	X	X	X	X	
All	2007	S40(04-)		Resetting the service reminder indicator(SRI)					X
All	2007	S40(04-)	B4164S3	Engine Control Module(ECM)	X	X	X	X	
All	2007	S40(04-)	B4184S11	Engine Control Module(ECM)	X	X	X	X	

All	2007	S40(04-)	B5244S4	Engine Control Module(ECM)	X	X	X	X	
All	2007	S40(04-)	B5244S5	Engine Control Module(ECM)	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
All	2007	S40(04-)	B5254T3	Engine Control Module(ECM)	X	X	X	X	1.Readiness Code 2.Adaptation of the throttle unit 3.Quick test of exhaust camshaft control 4.Quick test of intake camshaft control 5.Quick test of fuel pump(FP) 6.Quick test of the fuel tank system(USA/CDN)
All	2007	S40(04-)	D4164T	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters 2.Resetting the odometer particle trap 3.Adaptation of the exhaust gas recirculation(EGR) valve
All	2007	S40(04-)	D4204T	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve
All	2007	S40(04-)	D4204T2	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve
All	2007	S40(04-)	D4164T	Additive Dosing Module(ADM)	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
All	2007	S40(04-)	D4204T	Additive Dosing Module(ADM)	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
All	2007	S40(04-)	D4204T2	Additive Dosing Module(ADM)	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
All	2007	S40(04-)	AW50/51AWD	Transmission Control Module(TCM)	X	X	X	X	1.Calibration of position sensor 2.Resetting adaptation 3.Resetting counter oil
All	2007	S40(04-)	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	1.Calibration of position sensor 2.Resetting adaptation 3.Resetting counter oil
All	2007	S40(04-)	AW50/51AWD	Differential Electronic Module (DEM)	X	X	X		
All	2007	S40(04-)	M6AWD		X	X	X		
All	2007	S40(04-)		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Calibration(Cars with DSTC)
All	2007	S40(04-)		Climate Control Module(CCM)	X	X	X		
All	2007	S40(04-)		Combustion preheater Module(CPM)	X	X	X	X	
All	2007	S40(04-)		Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position
All	2007	S40(04-)		Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2007	S40(04-)		Power Seat Module(PSM)	X	X	X	X	1.Programming the remote control setting 1.Calibration the occupant weight sensor(OWS)
All	2007	S40(04-)		Supplemental Restraint System Module(SRS)	X	X	X		

All	2007	S40(04-)		Accessory Electronic Module(AEM)	X	X	X	X	
All	2007	S40(04-)		Audio Module(AUD)	X	X			
All	2007	S40(04-)		Central Electronic Module(CEM)	X	X	X	X	1.Calibration of position sensor,GDL lamps 2.Qick test of alternator function 3.Resetting low voltage counters 4.Resetting crash mode 5.Programming of rear window wiper when reversing
All	2007	S40(04-)		Driver Information Module(DIM)	X	X	X	X	1.Resetting the service reminder indicator
All	2007	S40(04-)		Phone Module(PHM)	X	X	X		1.Reinstalling the reserve battery
All	2007	S40(04-)		Steering Wheel Module(SWM)	X	X	X		
All	2007	S40(04-)		Infotainment Control Module(ICM)	X	X	X	X	1.Programming the infotainment control module(ICM)
All	2007	S40(04-)		Multimedia Module(MMM)	X	X	X	X	
All	2008	S40(04-)		Resetting the service reminder indicator(SRI)					X
All	2008	S40(04-)	B4164S3	Engine Control Module(ECM)	X	X	X	X	
All	2008	S40(04-)	B4184S11	Engine Control Module(ECM)	X	X	X	X	
All	2008	S40(04-)	B5244S4	Engine Control Module(ECM)	X	X	X	X	
All	2008	S40(04-)	B5244S5	Engine Control Module(ECM)	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
All	2008	S40(04-)	B5254T3	Engine Control Module(ECM)	X	X	X	X	1.Readiness Code 2.Adaptation of the throttle unit 3.Quick test of exhaust camshaft control 4.Quick test of intake camshaft control 5.Quick test of fuel pump(FP) 6.Quick test of the fuel tank system(USA/CDN)
All	2008	S40(04-)	D4164T	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters 2.Resetting the odometer particle trap 3.Adaptation of the exhaust gas recirculation(EGR) valve
All	2008	S40(04-)	D4204T	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve
All	2008	S40(04-)	D4204T2	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation(EGR) valve
All	2008	S40(04-)	D4164T	Additive Dosing Module(ADM)	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
All	2008	S40(04-)	D4204T	Additive Dosing Module(ADM)	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge

All	2008	S40(04-)	D4204T2	Additive Dosing Module(ADM)	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
All	2008	S40(04-)	AW50/51AWD	Transmission Control Module(TCM)	X	X	X	X	1.Calibration of position sensor 2.Resetting adaptation 3.Resetting counter oil
All	2008	S40(04-)	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	1.Calibration of position sensor 2.Resetting adaptation 3.Resetting counter oil
All	2008	S40(04-)	AW50/51AWD	Differential Electronic Module (DEM)	X	X	X		
All	2008	S40(04-)	M6AWD	Differential Electronic Module (DEM)	X	X	X		
All	2008	S40(04-)		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Calibration(Cars with DSTC)
All	2008	S40(04-)		Climate Control Module(CCM)	X	X	X		
All	2008	S40(04-)		Combustion preheater Module(CPM)	X	X	X	X	
All	2008	S40(04-)		Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position
All	2008	S40(04-)		Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2008	S40(04-)		Power Seat Module(PSM)	X	X	X	X	1.Programming the remote control setting
All	2008	S40(04-)		Supplemental Restraint System Module(SRS)	X	X	X		1.Calibration the occupant weight sensor(OWS)
All	2008	S40(04-)		Accessory Electronic Module(AEM)	X	X	X	X	
All	2008	S40(04-)		Audio Module(AUD)	X	X			
All	2008	S40(04-)		Central Electronic Module(CEM)	X	X	X	X	1.Calibration of position sensor,GDL lamps 2.Qick test of alternator function 3.Resetting low voltage counters 4.Resetting crash mode 5.Programming of rear window wiper when reversing
All	2008	S40(04-)		Driver Information Module(DIM)	X	X	X	X	1.Resetting the service reminder indicator
All	2008	S40(04-)		Phone Module(PHM)	X	X	X		1.Reinstalling the reserve battery
All	2008	S40(04-)		Steering Wheel Module(SWM)	X	X	X		
All	2008	S40(04-)		Infotainment Control Module(ICM)	X	X	X	X	1.Programming the infotainment control module(ICM)
All	2008	S40(04-)		Multimedia Module(MMM)	X	X	X	X	
All	2009	S40(04-)	B4164S3	Engine	X	X	X	X	1. Resetting adaptation
All	2009	S40(04-)	B4184S11	Engine	X	X	X	X	1.Resetting adaptation values
All	2009	S40(04-)	B4184S8	Engine	X	X	X	X	1.Resetting adaptation values
All	2009	S40(04-)	B4204S3	Engine	X	X	X	X	1.Resetting adaptation values
All	2009	S40(04-)	B5244S4	Engine	X	X	X	X	1.Resetting the adaptation values
All	2009	S40(04-)	B5244S5	Engine	X	X	X	X	1.Resetting the adaptation values
All	2009	S40(04-)	B5244S7	Engine	X	X	X	X	1.Resetting the adaptation values
All	2009	S40(04-)	B5254T7	Engine	X	X	X	X	1. Readiness Code 2. Adaptation of the throttle unit 3. Quick test of exhaust camshaft control 4. Quick test of intake camshaft control 5. Quick test of the fuel pump(FP)

All	2009	S40(04-)	D4164T	Engine		X	X	X	X	1. Adaptation of the exhaust gas recirculation (EGR) valve 2. Combustion of soot particles, particle trap 3. Resetting the odometer particle trap
All	2009	S40(04-)	D4204T	Engine		X	X	X	X	1. Programming the optimizing parameters 2. Resetting the adaptation values 3. Resetting the odometer particle trap 4. Adaptation of the exhaust gas recirculation (EGR) valve 5. Combustion of soot particle, particle trap 6. Quick-test injectors
All	2009	S40(04-)	D5244T13	Engine		X	X	X	X	
All	2009	S40(04-)	D5244T8	Engine		X	X	X	X	
All	2009	S40(04-)	D5244T9	Engine		X	X	X	X	
All	2009	S40(04-)	AW55-50/51SN	Transmission Control Module(TCM)		X	X	X	X	
All	2009	S40(04-)	AW50/51 AWD	Transmission Control Module(TCM)		X	X	X	X	
All	2009	S40(04-)	MPS6	Transmission Control Module(TCM)		X	X	X		
All	2009	S40(04-)	AW50/51 AWD	Differential Electronic Module (DEM)		X	X			
All	2009	S40(04-)	M66 AWD	Differential Electronic Module (DEM)		X	X			
All	2009	S40(04-)		Anti-brake System Module(ABS/BCM)		X	X	X	X	X1. Reading off the configuration X2. Calibration (cars with DSTC)
All	2009	S40(04-)		Climate Control Module(CCM)		X	X	X		X1. Calibrating the Climate Control module (CCM) X2. Identifying the Damper Motor Module
All	2009	S40(04-)		Power Seat Module (PSM)		X	X	X	X	X1.Programming remote control setting
All	2009	S40(04-)		Accessory electronic module (AEM)		X	X	X	X	X1.Reading off the configuration
All	2009	S40(04-)		Electric Power Steering (EPS)		X	X	X		
All	2009	S40(04-)		Park Assist Module (PAM)		X	X	X		
All	2009	S40(04-)		Audio module (AUD)		X	X	X		
All	2009	S40(04-)		Airbag (SRS)		X	X	X		
All	2009	S40(04-)		Driver door module (DDM)		X	X	X	X	
All	2009	S40(04-)		Passenger door module (PDM)		X	X	X	X	
All	2009	S40(04-)		Accessory USB Unit (AUU)		X	X	X		
All	2009	S40(04-)		Central electronic module (CEM-H)		X	X	X	X	X1.Resetting low voltage counters X2.Ignition switch key position X4.Resetting crash mode X5.Programming of rear window wiper when reversing
All	2009	S40(04-)		Central electronic module (CEM-L)		X	X	X	X	X1.Resetting low voltage counters X2.Ignition switch key position
All	2009	S40 (04-)		Trailer Module (TRM)		X	X	X		
All	2009	S40 (04-)		Steering wheel module (SWM)		X	X	X		
All	2009	S40 (04-)		Integrated Audio module (IAM)		X	X	X	X	

All	2009	S40 (04-)		Remote Digital Audio Receiver (RDAR)	X	X	X		
All	2009	S40 (04-)		Keyless vehicle module (KVM)	X	X	X	X	
All	2009	S40 (04-)		Bluetooth Phone Module (BPM)	X	X	X		
All	2009	S40 (04-)		Telephone (PHM)	X	X	X		
All	2009	S40 (04-)		Multimedia module (MMM)	X	X	X	X	
All	2009	S40 (04-)		Headlamp Control Module (HCM)	X	X	X		
All	2010	S40(04-)	B4164S3	Engine	X	X	X	X	1. Resetting adaptation
All	2010	S40(04-)	B4184S11	Engine	X	X	X	X	1. Resetting adaptation values
All	2010	S40(04-)	B4184S8	Engine	X	X	X	X	1. Resetting adaptation values
All	2010	S40(04-)	B4204S3	Engine	X	X	X	X	1. Resetting adaptation values
All	2010	S40(04-)	B5244S4	Engine	X	X	X	X	1. Resetting the adaptation values
All	2010	S40(04-)	B5244S5	Engine	X	X	X	X	1. Resetting the adaptation values
All	2010	S40(04-)	B5244S7	Engine	X	X	X	X	1. Resetting the adaptation values
All	2010	S40(04-)	B5254T7	Engine	X	X	X	X	1. Readiness Code 2. Adaptation of the throttle unit 3. Quick test of exhaust camshaft control 4. Quick test of intake camshaft control 5. Quick test of the fuel pump(FP)
All	2010	S40(04-)	D4164T	Engine	X	X	X	X	1. Adaptation of the exhaust gas recirculation (EGR) valve 2. Combustion of soot particles, particle trap 3. Resetting the odometer particle trap
All	2010	S40(04-)	D4204T	Engine	X	X	X	X	1. Programming the optimizing parameters 2. Resetting the adaptation values 3. Resetting the odometer particle trap 4. Adaptation of the exhaust gas recirculation (EGR) valve 5. Combustion of soot particle, particle trap 6. Quick-test injectors
All	2010	S40(04-)	D5244T13	Engine	X	X	X	X	
All	2010	S40(04-)	D5244T8	Engine	X	X	X	X	
All	2010	S40(04-)	D5244T9	Engine	X	X	X	X	
All	2010	S40(04-)	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	
All	2010	S40(04-)	AW50/51 AWD	Transmission Control Module(TCM)	X	X	X	X	
All	2010	S40(04-)	MPS6	Transmission Control Module(TCM)	X	X	X		
All	2010	S40(04-)	AW50/51 AWD	Differential Electronic Module (DEM)	X	X			
All	2010	S40(04-)	M66 AWD	Differential Electronic Module (DEM)	X	X			
All	2010	S40(04-)		Anti-brake System Module(ABS/BCM)	X	X	X	X	X1. Reading off the configuration X2. Calibration (cars with DSTC)
All	2010	S40(04-)		Climate Control Module(CCM)	X	X	X		
All	2010	S40(04-)		Driver Information Module(DIM)	X	X	X	X	
All	2010	S40(04-)		Power Seat Module (PSM)	X	X	X	X	X1. Programming remote control setting

All	2010	S40(04-)		Accessory electronic module (AEM)	X	X	X	X	X1.Reading off the configuration
All	2010	S40(04-)		Electric Power Steering (EPS)	X	X	X		
All	2010	S40(04-)		Park Assist Module (PAM)	X	X	X		
All	2010	S40(04-)		Audio module (AUD)	X	X	X		
All	2010	S40(04-)		Airbag (SRS)	X	X	X		
All	2010	S40(04-)		Driver door module (DDM)	X	X	X	X	
All	2010	S40(04-)		Passenger door module (PDM)	X	X	X	X	
All	2010	S40(04-)		Accessory USB Unit (AUU)	X	X	X		
All	2010	S40(04-)		Central electronic module (CEM-H)	X	X	X	X	X1.Resetting low voltage counters X2.Ignition switch key position X4.Resetting crash mode X5.Programming of rear window wiper when reversing
All	2010	S40(04-)		Central electronic module (CEM-L)	X	X	X	X	X1.Resetting low voltage counters X2.Ignition switch key position
All	2010	S40 (04-)		Trailer Module (TRM)	X	X	X		
All	2010	S40 (04-)		Steering wheel module (SWM)	X	X	X		
All	2010	S40 (04-)		Integrated Audio module (IAM)	X	X	X	X	
All	2010	S40 (04-)		Remote Digital Audio Receiver (RDAR)	X	X	X		
All	2010	S40 (04-)		Keyless vehicle module (KVM)	X	X	X	X	
All	2010	S40 (04-)		Bluetooth Phone Module (BPM)	X	X	X		
All	2010	S40 (04-)		Telephone (PHM)	X	X	X		
All	2010	S40 (04-)		Multimedia module (MMM)	X	X	X	X	
All	2010	S40 (04-)		Headlamp Control Module (HCM)	X	X	X		
All	2001	S60		Resetting the service reminder indicator(SRI)	X	X	X		X
All	2001	S60	B5204T5	Engine Control Module(ECM)	X	X	X	X	
All	2001	S60	B5234T3	Engine Control Module(ECM)	X	X	X	X	
All	2001	S60	B5234T7	Engine Control Module(ECM)	X	X	X	X	
All	2001	S60	B5244S	Engine Control Module(ECM)	X	X	X	X	
All	2001	S60	B5244S2	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
All	2001	S60	B5244T3	Engine Control Module(ECM)	X	X	X	X	
All	2001	S60	D5244T	Engine Control Module(ECM)	X	X	X	X	
All	2001	S60	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	1.Controller module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
All	2001	S60		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
All	2001	S60		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2001	S60		Climate Control Module(CCM)	X	X	X		1.Adjusting ECC parameters

All	2001	S60		Combustion Preheater Module(CPM)	X	X	X	X	
All	2001	S60		Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
All	2001	S60		Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2001	S60		Power Seat Module(PSM)	X	X	X	X	1.Programming the remote control setting
All	2001	S60		Supplemental Restraint System Module(SRS)	X	X	X		1.Calibrating the occupant weight sensor(OWS)
All	2001	S60		Accessory Electronic Module(AEM)	X	X	X	X	
All	2001	S60		Audio Module(AUM)	X	X			
All	2001	S60		Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2001	S60		Driver Information Module(DIM)	X	X	X	X	1.Resetting all needles and lamps in the dashboard 2.Programming the dirver information module(DIM)
All	2001	S60		Phone Module(PHM)	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
All	2001	S60		Rear Electronic Module(REM)	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
All	2001	S60		Upper Electronic Module(UEM)	X	X	X	X	
All	2001	S60		Road Traffic Information Module(RTI)	X	X			
All	2001	S60		Steering Wheel Module(SWM)	X	X	X		
All	2002	S60		Resetting the service reminder indicator(SRI)					X
All	2002	S60	B5204T5	Engine Control Module(ECM)	X	X	X	X	
All	2002	S60	B5234T3	Engine Control Module(ECM)	X	X	X	X	
All	2002	S60	B5234T7	Engine Control Module(ECM)	X	X	X	X	
All	2002	S60	B5244S	Engine Control Module(ECM)	X	X	X	X	
All	2002	S60	B5244S2	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
All	2002	S60	B5244SG	Engine Control Module(ECM)	X	X	X	X	
All	2002	S60	B5244SG2	Engine Control Module(ECM)	X	X	X	X	
All	2002	S60	B5244T3	Engine Control Module(ECM)	X	X	X	X	
All	2002	S60	D5244T	Engine Control Module(ECM)	X	X	X	X	
All	2002	S60	D5244T2	Engine Control Module(ECM)	X	X	X	X	
All	2002	S60	AW50/51 AWD	Transmission Control Module(TCM)	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change

All	2002	S60	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
All	2002	S60	AW50/51 AWD	Differential Electronic Module (DEM)	X	X	X		
All	2002	S60		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
All	2002	S60		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2002	S60		Climate Control Module(CCM)	X	X	X		1.Adjusting ECC parameters
All	2002	S60		Combustion Preheater Module(CPM)	X	X	X	X	
All	2002	S60		Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
All	2002	S60		Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2002	S60		Power Seat Module(PSM)	X	X	X	X	1.Programming the remote control setting
All	2002	S60		Supplemental Restraint System Module(SRS)	X	X	X		1.Calibrating the occupant weight sensor(OWS)
All	2002	S60		Accessory Electronic Module(AEM)	X	X	X	X	
All	2002	S60		Audio Module(AUM)	X	X			
All	2002	S60		Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2002	S60		Driver Information Module(DIM)	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
All	2002	S60		Phone Module(PHM)	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
All	2002	S60		Rear Electronic Module(REM)	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
All	2002	S60		Upper Electronic Module(UEM)	X	X	X	X	
All	2002	S60		Road Traffic Information Module(RTI)	X	X			
All	2002	S60		Steering Wheel Module(SWM)	X	X	X		
All	2003	S60		Resetting the service reminder indicator(SRI)				X	
All	2003	S60	B5204T5	Engine Control Module(ECM)	X	X	X	X	
All	2003	S60	B5234T3	Engine Control Module(ECM)	X	X	X	X	
All	2003	S60	B5234T7	Engine Control Module(ECM)	X	X	X	X	
All	2003	S60	B5244S	Engine Control Module(ECM)	X	X	X	X	
All	2003	S60	B5244S2	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
All	2003	S60	B5244SG	Engine Control Module(ECM)	X	X	X	X	
All	2003	S60	B5244SG2	Engine Control Module(ECM)	X	X	X	X	

All	2003	S60	B5244T3	Engine Control Module(ECM)	X	X	X	X	
All	2003	S60	B5254T2	Engine Control Module(ECM)	X	X	X	X	
All	2003	S60	D5244T	Engine Control Module(ECM)	X	X	X	X	
All	2003	S60	D5244T2	Engine Control Module(ECM)	X	X	X	X	
All	2003	S60	AW50/51 AWD	Transmission Control Module(TCM)	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
All	2003	S60	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
All	2003	S60	AW50/51 AWD	Differential Electronic Module (DEM)	X	X	X		
All	2003	S60		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
All	2003	S60		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2003	S60		Climate Control Module(CCM)	X	X	X		1.Adjusting ECC parameters
All	2003	S60		Combustion Preheater Module(CPM)	X	X	X	X	
All	2003	S60		Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
All	2003	S60		Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2003	S60		Power Seat Module(PSM)	X	X	X	X	1.Programming the remote control setting
All	2003	S60		Supplemental Restraint System Module(SRS)	X	X	X		1.Calibrating the occupant weight sensor(OWS)
All	2003	S60		Accessory Electronic Module(AEM)	X	X	X	X	
All	2003	S60		Audio Module(AUM)	X	X			
All	2003	S60		Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2003	S60		Driver Information Module(DIM)	X	X	X	X	1.Resetting all needles and lamps in the dashboard 2.Programming the dirver information module(DIM)
All	2003	S60		Phone Module(PHM)	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
All	2003	S60		Rear Electronic Module(REM)	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
All	2003	S60		Upper Electronic Module(UEM)	X	X	X	X	
All	2003	S60		Road Traffic Information Module(RTI)	X	X			
All	2003	S60		Steering Wheel Module(SWM)	X	X	X		
All	2004	S60		Resetting the service reminder indicator(SRI)				X	
All	2004	S60	B5204T5	Engine Control Module(ECM)	X	X	X	X	
All	2004	S60	B5234T3	Engine Control Module(ECM)	X	X	X	X	
All	2004	S60	B5234T7	Engine Control Module(ECM)	X	X	X	X	

All	2004	S60	B5244S	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
All	2004	S60	B5244S2	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
All	2004	S60	B5244SG	Engine Control Module(ECM)	X	X	X	X	
All	2004	S60	B5244SG2	Engine Control Module(ECM)	X	X	X	X	
All	2004	S60	B5254T2	Engine Control Module(ECM)	X	X	X	X	
All	2004	S60	B5254T4	Engine Control Module(ECM)	X	X	X	X	
All	2004	S60	D5244T	Engine Control Module(ECM)	X	X	X	X	
All	2004	S60	D5244T2	Engine Control Module(ECM)	X	X	X	X	
All	2004	S60	D5244T3	Engine Control Module(ECM)	X	X	X	X	
All	2004	S60	AW50/51 AWD	Transmission Control Module(TCM)	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
All	2004	S60	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
All	2004	S60	AW50/51 AWD	Differential Electronic Module (DEM)	X	X	X		
All	2004	S60		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
All	2004	S60		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2004	S60		Climate Control Module(CCM)	X	X	X		1.Adjusting ECC parameters
All	2004	S60		Combustion Preheater Module(CPM)	X	X	X	X	
All	2004	S60		Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
All	2004	S60		Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2004	S60		Power Seat Module(PSM)	X	X	X	X	1.Programming the remote control setting
All	2004	S60		Supplemental Restraint System Module(SRS)	X	X	X		1.Calibrating the occupant weight sensor(OWS)
All	2004	S60		Accessory Electronic Module(AEM)	X	X	X	X	
All	2004	S60		Audio Module(AUM)	X	X			
All	2004	S60		Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2004	S60		Driver Information Module(DIM)	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the dirver information module(DIM)

All	2004	S60		Phone Module(PHM)	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
All	2004	S60		Rear Electronic Module(REM)	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
All	2004	S60		Upper Electronic Module(UEM)	X	X	X	X	
All	2004	S60		Road Traffic Information Module(RTI)	X	X			
All	2004	S60		Steering Wheel Module(SWM)	X	X	X		
All	2004	S60		Suspension Module(SUM)	X	X	X		
All	2005	S60		Resetting the service reminder indicator(SRI)					X
All	2005	S60	B5204T5	Engine Control Module(ECM)	X	X	X	X	
All	2005	S60	B5244S	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
All	2005	S60	B5244S2	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
All	2005	S60	B5244SG	Engine Control Module(ECM)	X	X	X	X	
All	2005	S60	B5244SG2	Engine Control Module(ECM)	X	X	X	X	
All	2005	S60	B5244T4	Engine Control Module(ECM)	X	X	X	X	
All	2005	S60	B5244T5	Engine Control Module(ECM)	X	X	X	X	
All	2005	S60	B5254T2	Engine Control Module(ECM)	X	X	X	X	
All	2005	S60	B5254T4	Engine Control Module(ECM)	X	X	X	X	
All	2005	S60	D5244T	Engine Control Module(ECM)	X	X	X	X	
All	2005	S60	D5244T2	Engine Control Module(ECM)	X	X	X	X	
All	2005	S60	D5244T3	Engine Control Module(ECM)	X	X	X	X	
All	2005	S60	AW50/51 AWD	Transmission Control Module(TCM)	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
All	2005	S60	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
All	2005	S60	AW50/51 AWD	Differential Electronic Module (DEM)	X	X	X		
All	2005	S60	M66AWD		X	X	X		
All	2005	S60		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
All	2005	S60		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2005	S60		Climate Control Module(CCM)	X	X	X		1.Adjusting ECC parameters
All	2005	S60		Combustion Preheater Module(CPM)	X	X	X	X	

All	2005	S60		Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
All	2005	S60		Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2005	S60		Power Seat Module(PSM)	X	X	X	X	1.Programming the remote control setting
All	2005	S60		Supplemental Restraint System Module(SRS)	X	X	X		1.Calibrating the occupant weight sensor(OWS)
All	2005	S60		Accessory Electronic Module(AEM)	X	X	X	X	
All	2005	S60		Audio Module(AUM)	X	X			
All	2005	S60		Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2005	S60		Driver Information Module(DIM)	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
All	2005	S60		Phone Module(PHM)	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the cellphone code
All	2005	S60		Rear Electronic Module(REM)	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
All	2005	S60		Upper Electronic Module(UEM)	X	X	X	X	
All	2005	S60		Road Traffic Information Module(RTI)	X	X			
All	2005	S60		Suspension Module(SUM)	X	X	X		
All	2006	S60		Resetting the service reminder indicator(SRI)					X
All	2006	S60	B5204T5	Engine Control Module(ECM)	X	X	X	X	
All	2006	S60	B5234T3	Engine Control Module(ECM)	X	X	X	X	
All	2006	S60	B5234T7	Engine Control Module(ECM)	X	X	X	X	
All	2006	S60	B5244S	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
All	2006	S60	B5244S2	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
All	2006	S60	B5244SG	Engine Control Module(ECM)	X	X	X	X	
All	2006	S60	B5244SG2	Engine Control Module(ECM)	X	X	X	X	
All	2006	S60	B5244T4	Engine Control Module(ECM)	X	X	X	X	
All	2006	S60	B5244T4	Engine Control Module(ECM)	X	X	X	X	
All	2006	S60	B5254T2	Engine Control Module(ECM)	X	X	X	X	
All	2006	S60	B5254T4	Engine Control Module(ECM)	X	X	X	X	
All	2006	S60	D5244T	Engine Control Module(ECM)	X	X	X	X	

All	2006	S60	D5244T2	Engine Control Module(ECM)	X	X	X	X	
All	2006	S60	D5244T3	Engine Control Module(ECM)	X	X	X	X	
All	2006	S60	AW50/51 AWD	Transmission Control Module(TCM)	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
All	2006	S60	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
All	2006	S60	AW50/51 AWD	Differential Electronic Module (DEM)	X	X	X		
All	2006	S60	M66AWD		X	X	X		
All	2006	S60		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
All	2006	S60		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2006	S60		Climate Control Module(CCM)	X	X	X		1.Adjusting ECC parameters
All	2006	S60		Combustion Preheater Module(CPM)	X	X	X	X	
All	2006	S60		Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
All	2006	S60		Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2006	S60		Power Seat Module(PSM)	X	X	X	X	1.Programming the remote control setting
All	2006	S60		Supplemental Restraint System Module(SRS)	X	X	X		1.Calibrating the occupant weight sensor(OWS)
All	2006	S60		Accessory Electronic Module(AEM)	X	X	X	X	
All	2006	S60		Audio Module(AUM)	X	X			
All	2006	S60		Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2006	S60		Driver Information Module(DIM)	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
All	2006	S60		Phone Module(PHM)	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
All	2006	S60		Rear Electronic Module(REM)	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
All	2006	S60		Upper Electronic Module(UEM)	X	X	X	X	
All	2006	S60		Road Traffic Information Module(RTI)	X	X			
All	2006	S60		Suspension Module(SUM)	X	X	X		
All	2007	S60		Resetting the service reminder indicator(SRI)					X
All	2007	S60	B5204T5	Engine Control Module(ECM)	X	X	X	X	
All	2007	S60	B5234T3	Engine Control Module(ECM)	X	X	X	X	
All	2007	S60	B5234T7	Engine Control Module(ECM)	X	X	X	X	

All	2007	S60	B5244S	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
All	2007	S60	B5244S2	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
All	2007	S60	B5244SG	Engine Control Module(ECM)	X	X	X	X	
All	2007	S60	B5244SG2	Engine Control Module(ECM)	X	X	X	X	
All	2007	S60	B5244T4	Engine Control Module(ECM)	X	X	X	X	
All	2007	S60	B5244T4	Engine Control Module(ECM)	X	X	X	X	
All	2007	S60	B5254T2	Engine Control Module(ECM)	X	X	X	X	
All	2007	S60	B5254T4	Engine Control Module(ECM)	X	X	X	X	
All	2007	S60	D5244T	Engine Control Module(ECM)	X	X	X	X	
All	2007	S60	D5244T2	Engine Control Module(ECM)	X	X	X	X	
All	2007	S60	D5244T3	Engine Control Module(ECM)	X	X	X	X	
All	2007	S60	AW50/51 AWD	Transmission Control Module(TCM)	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
All	2007	S60	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
All	2007	S60	AW50/51 AWD	Differential Electronic Module (DEM)	X	X	X		
All	2007	S60	M66AWD		X	X	X		
All	2007	S60		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
All	2007	S60		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2007	S60		Climate Control Module(CCM)	X	X	X		1.Adjusting ECC parameters
All	2007	S60		Combustion Preheater Module(CPM)	X	X	X	X	
All	2007	S60		Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
All	2007	S60		Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2007	S60		Power Seat Module(PSM)	X	X	X	X	1.Programming the remote control setting
All	2007	S60		Supplemental Restraint System Module(SRS)	X	X	X		1.Calibrating the occupant weight sensor(OWS)
All	2007	S60		Accessory Electronic Module(AEM)	X	X	X	X	
All	2007	S60		Audio Module(AUM)	X	X			
All	2007	S60		Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car

All	2007	S60		Driver Information Module(DIM)	X	X	X	X	1.Resting all needles and lamps in the dashboard 2.Programming the dirver information module(DIM)
All	2007	S60		Phone Module(PHM)	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
All	2007	S60		Rear Electronic Module(REM)	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
All	2007	S60		Upper Electronic Module(UEM)	X	X	X	X	
All	2007	S60		Road Traffic Information Module(RTI)	X	X			
All	2007	S60		Suspension Module(SUM)	X	X	X		
All	2008	S60		Resetting the service reminder indicator(SRI)					X
All	2008	S60	B5204T5	Engine Control Module(ECM)	X	X	X	X	
All	2008	S60	B5234T3	Engine Control Module(ECM)	X	X	X	X	
All	2008	S60	B5234T7	Engine Control Module(ECM)	X	X	X	X	
All	2008	S60	B5244S	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
All	2008	S60	B5244S2	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
All	2008	S60	B5244SG	Engine Control Module(ECM)	X	X	X	X	
All	2008	S60	B5244SG2	Engine Control Module(ECM)	X	X	X	X	
All	2008	S60	B5244T4	Engine Control Module(ECM)	X	X	X	X	
All	2008	S60	B5244T4	Engine Control Module(ECM)	X	X	X	X	
All	2008	S60	B5254T2	Engine Control Module(ECM)	X	X	X	X	
All	2008	S60	B5254T4	Engine Control Module(ECM)	X	X	X	X	
All	2008	S60	D5244T	Engine Control Module(ECM)	X	X	X	X	
All	2008	S60	D5244T2	Engine Control Module(ECM)	X	X	X	X	
All	2008	S60	D5244T3	Engine Control Module(ECM)	X	X	X	X	
All	2008	S60	AW50/51 AWD	Transmission Control Module(TCM)	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
All	2008	S60	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
All	2008	S60	AW50/51 AWD	Differential Electronic Module (DEM)	X	X	X		
All	2008	S60	M66AWD		X	X	X		

All	2008	S60		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
All	2008	S60		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2008	S60		Climate Control Module(CCM)	X	X	X		1.Adjusting ECC parameters
All	2008	S60		Combustion Preheater Module(CPM)	X	X	X	X	
All	2008	S60		Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
All	2008	S60		Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2008	S60		Power Seat Module(PSM)	X	X	X	X	1.Programming the remote control setting
All	2008	S60		Supplemental Restraint System Module(SRS)	X	X	X		1.Calibrating the occupant weight sensor(OWS)
All	2008	S60		Accessory Electronic Module(AEM)	X	X	X	X	
All	2008	S60		Audio Module(AUM)	X	X			
All	2008	S60		Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2008	S60		Driver Information Module(DIM)	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
All	2008	S60		Phone Module(PHM)	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
All	2008	S60		Rear Electronic Module(REM)	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
All	2008	S60		Upper Electronic Module(UEM)	X	X	X	X	
All	2008	S60		Road Traffic Information Module(RTI)	X	X			
All	2008	S60		Suspension Module(SUM)	X	X	X		
All	2009	S60	B5204T5	Engine Control Module(ECM)	X	X	X	X	
All	2009	S60	B5244S	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
All	2009	S60	B5244S2	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system(USA/CDN) 5.Readiness Code
All	2009	S60	B5244T5	Engine Control Module(ECM)	X	X	X	X	
All	2009	S60	B5254T2	Engine Control Module(ECM)	X	X	X	X	
All	2009	S60	D5244T4	Engine Control Module(ECM)	X	X	X	X	
All	2009	S60	D5244T5	Engine Control Module(ECM)	X	X	X	X	
All	2009	S60	D5244T7	Engine Control Module(ECM)	X	X	X	X	

All	2009	S60	AW50/51 AWD	Transmission Control Module(TCM)	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
All	2009	S60	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
All	2009	S60	TF-80SC	Transmission Control Module(TCM)	X	X	X	X	
All	2009	S60	AW50/51 AWD	Differential Electronic Module (DEM)	X	X	X		
All	2009	S60	M66AWD		X	X	X		
All	2009	S60		Anti-brake System Module(ABS/BCM)	X	X	X	X	
All	2009	S60		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2009	S60		Climate Control Module(CCM)	X	X	X		
All	2009	S60		Combustion Preheater Module(CPM)	X	X	X	X	
All	2009	S60		Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
All	2009	S60		Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2009	S60		Power Seat Module(PSM)	X	X	X	X	1.Programming the remote control setting
All	2009	S60		Supplemental Restraint System Module(SRS)	X	X	X		1.Calibrating the occupant weight sensor(OWS)
All	2009	S60		Accessory Electronic Module(AEM)	X	X	X	X	
All	2009	S60		Audio Module(AUM)	X	X			
All	2009	S60		Central Electronic Module(CEM)	X	X	X	X	
All	2009	S60		Driver Information Module(DIM)	X	X	X	X	1.Resetting all needles and lamps in the dashboard 2.Programming the dirver information module(DIM)
All	2009	S60		Phone Module(PHM)	X	X	X		
All	2009	S60		Rear Electronic Module(REM)	X	X	X	X	
All	2009	S60		Upper Electronic Module(UEM)	X	X	X	X	
All	2009	S60		Road Traffic Information Module(RTI)	X	X			
All	2009	S60		Suspension Module(SUM)	X	X	X		
All	1997	S70		Resetting the service reminder indicator(SRI)				X	
All	1997	S70	B5202FS	Fuel System/ Combined System	X	X	X	X	
All	1997	S70	B5204T2	Fuel System/ Combined System	X	X	X	X	
All	1997	S70	B5204T3	Fuel System/ Combined System	X	X	X	X	
All	1997	S70	B5234FS	Fuel System/ Combined System	X	X	X	X	
All	1997	S70	B5234T2	Fuel System/ Combined System	X	X	X	X	
All	1997	S70	B5234T3	Fuel System/ Combined System	X	X	X	X	
All	1997	S70	B5252FS	Fuel System/ Combined System	X	X	X	X	
All	1997	S70	B5254FS M4.4	Fuel System/ Combined System	X	X	X	X	
All	1997	S70	B5254T	Fuel System/ Combined System	X	X	X	X	
All	1997	S70	D5252T MSA 15.7	Fuel System/ Combined System	X	X	X		
All	1997	S70	AW50-42	Transmission Control Module(TCM)	X	X	X		
All	1997	S70		Anti-brake System Module(ABS/BCM)	X	X	X		
All	1997	S70		Supplemental Restraint System Module(SRS)	X	X	X		

All	1997	S70		Power Seat Module,Left(PSL)	X	X	X	X	
All	1997	S70		Road Traffic Information Module(RTI)	X	X	X	X	
All	1997	S70		Immobilizer	X	X	X	X	
All	1998	S70		Resetting the service reminder indicator(SRI)					X
All	1998	S70	B5202FS	Fuel System/ Combined System	X	X	X	X	
All	1998	S70	B5204T2	Fuel System/ Combined System	X	X	X	X	
All	1998	S70	B5204T3	Fuel System/ Combined System	X	X	X	X	
All	1998	S70	B5234FS	Fuel System/ Combined System	X	X	X	X	
All	1998	S70	B5234T2	Fuel System/ Combined System	X	X	X	X	
All	1998	S70	B5234T3	Fuel System/ Combined System	X	X	X	X	
All	1998	S70	B5234T4	Fuel System/ Combined System	X	X	X	X	
All	1998	S70	B5234T7	Fuel System/ Combined System	X	X	X	X	
All	1998	S70	B5252FS	Fuel System/ Combined System	X	X	X	X	
All	1998	S70	B5254FS M4.4	Fuel System/ Combined System	X	X	X	X	
All	1998	S70	B5254T	Fuel System/ Combined System	X	X	X	X	
All	1998	S70	D5252T MSA 15.7	Fuel System/ Combined System	X	X	X		
All	1998	S70	GB5252S	Fuel System/ Combined System	X	X	X	X	
All	1998	S70	AW50-42	Transmission Control Module(TCM)	X	X	X		
All	1998	S70		Anti-brake System Module(ABS/BCM)	X	X	X		
All	1998	S70		Supplemental Restraint System Module(SRS)	X	X	X		
All	1998	S70		Power Seat Module,Left(PSL)	X	X	X	X	
All	1998	S70		Road Traffic Information Module(RTI)	X	X	X	X	
All	1998	S70		Immobilizer	X	X	X	X	
All	1999	S70		Resetting the service reminder indicator(SRI)					
All	1999	S70	B5202FS	Central Electronic Module(CEM)	X	X	X	X	
All	1999	S70	B5204T3	Central Electronic Module(CEM)	X	X	X	X	
All	1999	S70	B5204T4	Central Electronic Module(CEM)	X	X	X	X	
All	1999	S70	B5234FS	Central Electronic Module(CEM)	X	X	X	X	
All	1999	S70	B5234T3	Central Electronic Module(CEM)	X	X	X	X	
All	1999	S70	B5234T7	Central Electronic Module(CEM)	X	X	X	X	
All	1999	S70	B5252FS DENSO	Central Electronic Module(CEM)	X	X	X	X	
All	1999	S70	B5254T	Central Electronic Module(CEM)	X	X	X	X	
All	1999	S70	D5252T MSA 15.7	Central Electronic Module(CEM)	X	X	X		
All	1999	S70	D5252T MSA 15.8	Central Electronic Module(CEM)	X	X	X		
All	1999	S70	GB5252S	Central Electronic Module(CEM)	X	X	X	X	
All	1999	S70	GB5252S2	Central Electronic Module(CEM)	X	X	X	X	
All	1999	S70	AW42AWD	Transmission Control Module(TCM)	X	X	X		
All	1999	S70	AW50-42	Transmission Control Module(TCM)	X	X	X		
All	1999	S70		Anti-brake System Module(ABS/BCM)	X	X	X	X	
All	1999	S70		Climate Control Module(CCM)	X	X	X		
All	1999	S70		Combustion Preheater Module(CPM)	X	X	X	X	
All	1999	S70		Supplemental Restraint System Module(SRS)	X	X	X		
All	1999	S70		Power Seat Module,Left(PSL)	X	X	X	X	

All	1999	S70		Power Seat Module,Right(PSR)	X	X	X	X	
All	1999	S70		Road Traffic Information Module(RTI)	X	X	X	X	
All	1999	S70		Immobilizer	X	X	X	X	
All	1999	S70		Lock and alarm	X	X	X	X	
All	2000	S70		Resetting the service reminder indicator(SRI)					
All	2000	S70	B5204T3	Central Electronic Module(CEM)	X	X	X	X	
All	2000	S70	B5204T4	Central Electronic Module(CEM)	X	X	X	X	
All	2000	S70	B5234T3	Central Electronic Module(CEM)	X	X	X	X	
All	2000	S70	B5234T7	Central Electronic Module(CEM)	X	X	X	X	
All	2000	S70	B5244S	Central Electronic Module(CEM)	X	X	X		
All	2000	S70	B5244S2	Central Electronic Module(CEM)	X	X	X		
All	2000	S70	B5244SG	Central Electronic Module(CEM)	X	X	X		
All	2000	S70	B5244SG2	Central Electronic Module(CEM)	X	X	X		
All	2000	S70	B5244T	Central Electronic Module(CEM)	X	X	X	X	
All	2000	S70	D5252T MSA 15.8	Central Electronic Module(CEM)	X	X	X		
All	2000	S70	AW42AWD	Transmission Control Module(TCM)	X	X	X		
All	2000	S70	AW50-42	Transmission Control Module(TCM)	X	X	X		
All	2000	S70		Anti-brake System Module(ABS/BCM)	X	X	X	X	
All	2000	S70		Climate Control Module(CCM)	X	X	X		
All	2000	S70		Combustion Preheater Module(CPM)	X	X	X	X	
All	2000	S70		Supplemental Restraint System Module(SRS)	X	X	X		
All	2000	S70		Power Seat Module,Left(PSL)	X	X	X	X	
All	2000	S70		Power Seat Module,Right(PSR)	X	X	X	X	
All	2000	S70		Road Traffic Information Module(RTI)	X	X	X	X	
All	2000	S70		Immobilizer	X	X	X	X	
All	2000	S70		Lock and alarm	X	X	X	X	
All	1999	S80		Resetting the service reminder indicator(SRI)					X
All	1999	S80	B5204T3	Engine Control Module(ECM)	X	X	X	X	
All	1999	S80	B5204T4	Engine Control Module(ECM)	X	X	X	X	
All	1999	S80	B5244S	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
All	1999	S80	B5244S2	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code

All	1999	S80	B6284T	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
All	1999	S80	B6304S3	Engine Control Module(ECM)	X	X	X	X	
All	1999	S80	D5252T MSA 15.8	Engine Control Module(ECM)	X	X	X		1.Programming optimising parameters 2.Resetting adaptation to zero
All	1999	S80	4T65EV	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
All	1999	S80	4T65EV-GT	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change
All	1999	S80	AW50-42	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaption
All	1999	S80	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaptation to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaption
All	1999	S80		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
All	1999	S80		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	1999	S80		Climate Control Module(CCM)	X	X	X		1.Adjusting ECC parameters
All	1999	S80		Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
All	1999	S80		Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	1999	S80		Power Seat Module(PSM)	X	X	X	X	1.Programming the remote control setting
All	1999	S80		Supplemental Restraint System Module(SRS)	X	X	X		1.Calibrating the occupant weight sensor(OWS)
All	1999	S80		Audio Module(AUM)	X	X	X		
All	1999	S80		Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	1999	S80		Driver Information Module(DIM)	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the dirver information module(DIM)
All	1999	S80		Phone Module(PHM)	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
All	1999	S80		Rear Electronic Module(REM)	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
All	1999	S80		Road Traffic Information Module(RTI)	X	X			
All	1999	S80		Steering Wheel Module(SWM)	X	X	X		
All	1999	S80		Upper Electronic Module(UEM)	X	X	X	X	
All	2000	S80		Resetting the service reminder indicator(SRI)					X

All	2000	S80	B5204T3	Engine Control Module(ECM)	X	X	X	X	
All	2000	S80	B5204T4	Engine Control Module(ECM)	X	X	X	X	
All	2000	S80	B5204T5	Engine Control Module(ECM)	X	X	X	X	
All	2000	S80	B5234T7	Engine Control Module(ECM)	X	X	X	X	
All	2000	S80	B5244S	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
All	2000	S80	B5244S2	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
All	2000	S80	B6284T	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
All	2000	S80	B6294S	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
All	2000	S80	D5252T MSA 15.8	Engine Control Module(ECM)	X	X	X		1.Programming optimising parameters
All	2000	S80	4T65EV	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change
All	2000	S80	4T65EV-GT	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change
All	2000	S80	AW50-42	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaption
All	2000	S80	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaption
All	2000	S80		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
All	2000	S80		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2000	S80		Climate Control Module(CCM)	X	X	X		1.Adjusting ECC parameters
All	2000	S80		Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
All	2000	S80		Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2000	S80		Power Seat Module(PSM)	X	X	X	X	1.Programming the remote control setting

All	2000	S80		Supplemental Restraint System Module(SRS)	X	X	X		1.Calibrating the occupant weight sensor(OWS)
All	2000	S80		Audio Module(AUM)	X	X	X		
All	2000	S80		Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2000	S80		Driver Information Module(DIM)	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the dirver information module(DIM)
All	2000	S80		Phone Module(PHM)	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
All	2000	S80		Rear Electronic Module(REM)	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
All	2000	S80		Road Traffic Information Module(RTI)	X	X			
All	2000	S80		Steering Wheel Module(SWM)	X	X	X		
All	2000	S80		Upper Electronic Module(UEM)	X	X	X	X	
All	2001	S80		Resetting the service reminder indicator(SRI)					X
All	2001	S80	B5204T5	Engine Control Module(ECM)	X	X	X	X	
All	2001	S80	B5234T7	Engine Control Module(ECM)	X	X	X	X	
All	2001	S80	B5244S	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
All	2001	S80	B5244S2	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
All	2001	S80	B5244SG	Engine Control Module(ECM)	X	X	X	X	
All	2001	S80	B5244SG2	Engine Control Module(ECM)	X	X	X	X	
All	2001	S80	B5244T3	Engine Control Module(ECM)	X	X	X	X	
All	2001	S80	B6284T	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
All	2001	S80	B6294S	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code

All	2001	S80	D5244T	Engine Control Module(ECM)	X	X	X		1.Programming optimising parameters
All	2001	S80	D5252T MSA 15.8	Engine Control Module(ECM)	X	X	X		1.Programming optimising parameters
All	2001	S80	4T65EV	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change
All	2001	S80	4T65EV-GT	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change
All	2001	S80	AW50-42	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaption
All	2001	S80	AW50/51AWD	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaption
All	2001	S80	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaption
All	2001	S80		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
All	2001	S80		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2001	S80		Climate Control Module(CCM)	X	X	X		1.Adjusting ECC parameters
All	2001	S80		Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
All	2001	S80		Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2001	S80		Power Seat Module(PSM)	X	X	X	X	1.Programming the remote control setting
All	2001	S80		Supplemental Restraint System Module(SRS)	X	X	X		1.Calibrating the occupant weight sensor(OWS)
All	2001	S80		Audio Module(AUM)	X	X	X		
All	2001	S80		Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2001	S80		Driver Information Module(DIM)	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the dirver information module(DIM)
All	2001	S80		Phone Module(PHM)	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
All	2001	S80		Rear Electronic Module(REM)	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
All	2001	S80		Road Traffic Information Module(RTI)	X	X			
All	2001	S80		Steering Wheel Module(SWM)	X	X	X		
All	2001	S80		Upper Electronic Module(UEM)	X	X	X	X	
All	2002	S80		Resetting the service reminder indicator(SRI)					X
All	2002	S80	B5204T5	Engine Control Module(ECM)	X	X	X	X	
All	2002	S80	B5234T7	Engine Control Module(ECM)	X	X	X	X	

All	2002	S80	B5244S	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
All	2002	S80	B5244S2	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
All	2002	S80	B5244SG	Engine Control Module(ECM)	X	X	X	X	
All	2002	S80	B5244SG2	Engine Control Module(ECM)	X	X	X	X	
All	2002	S80	B5244T3	Engine Control Module(ECM)	X	X	X	X	
All	2002	S80	B6294S2	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
All	2002	S80	B6294T	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
All	2002	S80	D5244T	Engine Control Module(ECM)	X	X	X		1.Programming optimising parameters
All	2002	S80	D5244T2	Engine Control Module(ECM)	X	X	X		1.Programming optimising parameters
All	2002	S80	4T65EV	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change
All	2002	S80	4T65EV-GT	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change
All	2002	S80	AW50/51AWD	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaption
All	2002	S80	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaption
All	2002	S80		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
All	2002	S80		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2002	S80		Climate Control Module(CCM)	X	X	X		1.Adjusting ECC parameters
All	2002	S80		Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
All	2002	S80		Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2002	S80		Power Seat Module(PSM)	X	X	X	X	1.Programming the remote control setting

All	2002	S80		Supplemental Restraint System Module(SRS)	X	X	X		1.Calibrating the occupant weight sensor(OWS)
All	2002	S80		Audio Module(AUM)	X	X	X		
All	2002	S80		Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2002	S80		Driver Information Module(DIM)	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the dirver information module(DIM)
All	2002	S80		Phone Module(PHM)	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
All	2002	S80		Rear Electronic Module(REM)	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
All	2002	S80		Road Traffic Information Module(RTI)	X	X			
All	2002	S80		Steering Wheel Module(SWM)	X	X	X		
All	2002	S80		Upper Electronic Module(UEM)	X	X	X	X	
All	2003	S80		Resetting the service reminder indicator(SRI)					X
All	2003	S80	B5204T5	Engine Control Module(ECM)	X	X	X	X	
All	2003	S80	B5234T7	Engine Control Module(ECM)	X	X	X	X	
All	2003	S80	B5244S	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
All	2003	S80	B5244S2	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
All	2003	S80	B5244SG	Engine Control Module(ECM)	X	X	X	X	
All	2003	S80	B5244SG2	Engine Control Module(ECM)	X	X	X	X	
All	2003	S80	B5244T3	Engine Control Module(ECM)	X	X	X	X	
All	2003	S80	B5254T2	Engine Control Module(ECM)	X	X	X	X	
All	2003	S80	B6294T	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
All	2003	S80	D5244T	Engine Control Module(ECM)	X	X	X		1.Programming optimising parameters
All	2003	S80	D5244T2	Engine Control Module(ECM)	X	X	X		1.Programming optimising parameters
All	2003	S80	4T65EV	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change

All	2003	S80	4T65EV-GT	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaption
All	2003	S80	AW50/51AWD	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaption
All	2003	S80	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaption
All	2003	S80		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
All	2003	S80		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2003	S80		Climate Control Module(CCM)	X	X	X		1.Adjusting ECC parameters
All	2003	S80		Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
All	2003	S80		Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2003	S80		Power Seat Module(PSM)	X	X	X	X	1.Programming the remote control setting
All	2003	S80		Supplemental Restraint System Module(SRS)	X	X	X		1.Calibrating the occupant weight sensor(OWS)
All	2003	S80		Audio Module(AUM)	X	X	X		
All	2003	S80		Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2003	S80		Driver Information Module(DIM)	X	X	X	X	1.Resetting all needles and lamps in the dashboard 2.Programming the dirver information module(DIM)
All	2003	S80		Phone Module(PHM)	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
All	2003	S80		Rear Electronic Module(REM)	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
All	2003	S80		Road Traffic Information Module(RTI)	X	X			
All	2003	S80		Steering Wheel Module(SWM)	X	X	X		
All	2003	S80		Upper Electronic Module(UEM)	X	X	X	X	
All	2004	S80		Resetting the service reminder indicator(SRI)					X
All	2004	S80	B5204T5	Engine Control Module(ECM)	X	X	X	X	
All	2004	S80	B5234T7	Engine Control Module(ECM)	X	X	X	X	
All	2004	S80	B5244S	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code

All	2004	S80	B5244S2	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
All	2004	S80	B5244SG	Engine Control Module(ECM)	X	X	X	X	
All	2004	S80	B5244SG2	Engine Control Module(ECM)	X	X	X	X	
All	2004	S80	B5254T2	Engine Control Module(ECM)	X	X	X	X	
All	2004	S80	B6294S2	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
All	2004	S80	B6294T	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
All	2004	S80	D5244T	Engine Control Module(ECM)	X	X	X		1.Programming optimising parameters
All	2004	S80	D5244T2	Engine Control Module(ECM)	X	X	X		1.Programming optimising parameters
All	2004	S80	4T65EV	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change
All	2004	S80	4T65EV-GT	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change
All	2004	S80	AW50/51AWD	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaption
All	2004	S80	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaption
All	2004	S80		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
All	2004	S80		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2004	S80		Climate Control Module(CCM)	X	X	X		1.Adjusting ECC parameters
All	2004	S80		Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
All	2004	S80		Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2004	S80		Power Seat Module(PSM)	X	X	X	X	1.Programming the remote control setting
All	2004	S80		Supplemental Restraint System Module(SRS)	X	X	X		1.Calibrating the occupant weight sensor(OWS)
All	2004	S80		Audio Module(AUM)	X	X	X		

All	2004	S80		Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2004	S80		Driver Information Module(DIM)	X	X	X	X	1.Resetting all needles and lamps in the dashboard 2.Programming the dirver information module(DIM)
All	2004	S80		Phone Module(PHM)	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
All	2004	S80		Rear Electronic Module(REM)	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
All	2004	S80		Road Traffic Information Module(RTI)	X	X			
All	2004	S80		Steering Wheel Module(SWM)	X	X	X		
All	2004	S80		Upper Electronic Module(UEM)	X	X	X	X	
All	2005	S80		Resetting the service reminder indicator(SRI)					X
All	2005	S80	B5204T5	Engine Control Module(ECM)	X	X	X	X	
All	2005	S80	B5244S	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
All	2005	S80	B5244S2	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
All	2005	S80	B5244SG	Engine Control Module(ECM)	X	X	X	X	
All	2005	S80	B5244SG2	Engine Control Module(ECM)	X	X	X	X	
All	2005	S80	B5244T4	Engine Control Module(ECM)	X	X	X	X	
All	2005	S80	B5254T2	Engine Control Module(ECM)	X	X	X	X	
All	2005	S80	B6294S2	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
All	2005	S80	B6294T	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
All	2005	S80	D5244T	Engine Control Module(ECM)	X	X	X		1.Programming optimising parameters
All	2005	S80	D5244T2	Engine Control Module(ECM)	X	X	X		1.Programming optimising parameters

All	2005	S80	4T65EV	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change
All	2005	S80	4T65EV-GT	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change
All	2005	S80	AW50/51AWD	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaption
All	2005	S80	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaption
All	2005	S80		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
All	2005	S80		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2005	S80		Climate Control Module(CCM)	X	X	X		
All	2005	S80		Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
All	2005	S80		Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2005	S80		Power Seat Module(PSM)	X	X	X	X	1.Programming the remote control setting
All	2005	S80		Supplemental Restraint System Module(SRS)	X	X	X		1.Calibrating the occupant weight sensor(OWS)
All	2005	S80		Audio Module(AUM)	X	X	X		
All	2005	S80		Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2005	S80		Driver Information Module(DIM)	X	X	X	X	
All	2005	S80		Phone Module(PHM)	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
All	2005	S80		Rear Electronic Module(REM)	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
All	2005	S80		Road Traffic Information Module(RTI)	X	X			
All	2005	S80		Steering Wheel Module(SWM)	X	X	X		
All	2005	S80		Upper Electronic Module(UEM)	X	X	X	X	
All	2006	S80		Resetting the service reminder indicator(SRI)					X
All	2006	S80	B5204T5	Engine Control Module(ECM)	X	X	X	X	
All	2006	S80	B5244S	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code

All	2006	S80	B5244S2	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
All	2006	S80	B5244SG	Engine Control Module(ECM)	X	X	X	X	
All	2006	S80	B5244SG2	Engine Control Module(ECM)	X	X	X	X	
All	2006	S80	B5244T4	Engine Control Module(ECM)	X	X	X	X	
All	2006	S80	B5254T2	Engine Control Module(ECM)	X	X	X	X	
All	2006	S80	B6294S2	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
All	2006	S80	B6294T	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
All	2006	S80	D5244T	Engine Control Module(ECM)	X	X	X		1.Programming optimising parameters
All	2006	S80	D5244T2	Engine Control Module(ECM)	X	X	X		1.Programming optimising parameters
All	2006	S80	4T65EV	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change
All	2006	S80	4T65EV-GT	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change
All	2006	S80	AW50/51AWD	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaption
All	2006	S80	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaption
All	2006	S80		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
All	2006	S80		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2006	S80		Climate Control Module(CCM)	X	X	X		1.Adjusting ECC parameters
All	2006	S80		Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
All	2006	S80		Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2006	S80		Power Seat Module(PSM)	X	X	X	X	1.Programming the remote control setting
All	2006	S80		Supplemental Restraint System Module(SRS)	X	X	X		1.Calibrating the occupant weight sensor(OWS)
All	2006	S80		Audio Module(AUM)	X	X	X		

All	2006	S80		Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2006	S80		Driver Information Module(DIM)	X	X	X	X	1.Resetting all needles and lamps in the dashboard 2.Programming the dirver information module(DIM)
All	2006	S80		Phone Module(PHM)	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
All	2006	S80		Rear Electronic Module(REM)	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
All	2006	S80		Road Traffic Information Module(RTI)	X	X			
All	2006	S80		Steering Wheel Module(SWM)	X	X	X		
All	2006	S80		Upper Electronic Module(UEM)	X	X	X	X	
All	2007	S80		Resetting the service reminder indicator(SRI)					X
All	2007	S80	B5254T6	Engine Control Module(ECM)	X	X	X	X	
All	2007	S80	B8444S	Engine Control Module(ECM)	X	X	X	X	
All	2007	S80	B6324S	Engine Control Module(ECM)	X	X	X	X	
All	2007	S80	TF-80SC	Transmission Control Module(TCM)	X	X	X	X	
All	2007	S80	TF-80SC AWD	Transmission Control Module(TCM)	X	X	X	X	
All	2007	S80		Anti-brake System Module(ABS/BCM)	X	X	X	X	
All	2007	S80		Steering Wheel Angle Sensor Module(SAS)	X	X			
All	2007	S80		Park Brake Module(PBM)	X	X			
All	2007	S80		Climate Control Module(CCM)	X	X	X	X	
All	2007	S80		Driver Door Module(DDM)	X	X			
All	2007	S80		Passenger Door Module(PDM)	X	X			
All	2007	S80		Power Seat Module(PSM)	X	X			
All	2007	S80		Supplemental Restraint System Module(SRS)	X	X	X		
All	2007	S80		Combustion Preheater Module(CPM)	X	X			
All	2007	S80		Trailer Module(TRM)	X	X			
All	2007	S80		Central Electronic Module(CEM)	X	X	X	X	
All	2007	S80		Driver Information Module(DIM)	X	X	X		
All	2007	S80		Phone Module(PHM)	X	X			
All	2007	S80		Forward Sensing Module(FSM)	X	X			
All	2007	S80		Headlamp Control Module(HCM)	X	X			
All	2007	S80		High level Display Front(HLDF)	X	X			
All	2007	S80		Parking Assistance Camera(PAC)	X	X			
All	2007	S80		Suspension Module(SUM)	X	X			
All	2007	S80		Integrated Audio Module(IAM)	X	X			
All	2007	S80		Infotainment Control Module(ICM)	X	X			
All	2007	S80		Keyless Vehicle Module(KVM)	X	X	X		
All	2007	S80		Park Assist Module(PAM)	X	X			

All	2008	S80	B5254T6	Engine Control Module(ECM)	X	X	X	X	
All	2008	S80	B8444S	Engine Control Module(ECM)	X	X	X	X	
All	2008	S80	B6324S	Engine Control Module(ECM)	X	X	X	X	
All	2008	S80	TF-80SC	Transmission Control Module(TCM)	X	X	X	X	
All	2008	S80	TF-80SC AWD	Transmission Control Module(TCM)	X	X	X	X	
All	2008	S80		Anti-brake System Module(ABS/BCM)	X	X	X	X	
All	2008	S80		Steering Wheel Angle Sensor Module(SAS)	X	X			
All	2008	S80		Park Brake Module(PBM)	X	X			
All	2008	S80		Climate Control Module(CCM)	X	X	X	X	
All	2008	S80		Driver Door Module(DDM)	X	X			
All	2008	S80		Passenger Door Module(PDM)	X	X			
All	2008	S80		Power Seat Module(PSM)	X	X			
All	2008	S80		Supplemental Restraint System Module(SRS)	X	X	X		
All	2008	S80		Combustion Preheater Module(CPM)	X	X			
All	2008	S80		Trailer Module(TRM)	X	X			
All	2008	S80		Central Electronic Module(CEM)	X	X	X	X	
All	2008	S80		Driver Information Module(DIM)	X	X	X		
All	2008	S80		Phone Module(PHM)	X	X			
All	2008	S80		Forward Sensing Module(FSM)	X	X			
All	2008	S80		Headlamp Control Module(HCM)	X	X			
All	2008	S80		High level Display Front(HLDF)	X	X			
All	2008	S80		Parking Assistance Camera(PAC)	X	X			
All	2008	S80		Suspension Module(SUM)	X	X			
All	2008	S80		Integrated Audio Module(IAM)	X	X			
All	2008	S80		Infotainment Control Module(ICM)	X	X			
All	2008	S80		Keyless Vehicle Module(KVM)	X	X	X		
All	2008	S80		Park Assist Module(PAM)	X	X			
All	2009	S80	B4204S3	Engine Control Module(ECM)	X	X	X		1.Resetting Adaptation
All	2009	S80	B4204S4	Engine Control Module(ECM)	X	X	X		1.Resetting Adaptation
All	2009	S80	B4204S4	Engine Control Module(ECM)	X	X	X	X	
All	2009	S80	B6304T2	Engine Control Module(ECM)	X	X	X	X	
All	2009	S80	B6324S	Engine Control Module(ECM)	X	X	X	X	
All	2009	S80	B8444S	Engine Control Module(ECM)	X	X	X	X	
All	2009	S80	D4204T	Engine Control Module(ECM)	X	X	X		
All	2009	S80	D5244T10	Engine Control Module(ECM)	X	X	X	X	
All	2009	S80	D5244T4	Engine Control Module(ECM)	X	X	X	X	
All	2009	S80		Driver Information Module(DIM)	X	X	X		
All	2009	S80		Telephone (PHM)	X	X	X		
All	2009	S80		Infotainment Control Module(ICM)	X	X	X	X	
All	2009	S80		Forward Sensing Module(FSM)	X	X	X		
All	2009	S80		Brake Control Module (BCM)	X	X	X		
All	2009	S80		Differential Electronic Module(DEM)	X	X	X		
All	2009	S80		Park Brake Module(PBM)	X	X	X		1.Activation and service

All	2009	S80		Power Seat Module(PSM)	X	X	X		
All	2009	S80		Supplemental Restraint System Module(SRS)	X	X	X		
All	2009	S80		Parking Assistance Camera(PAC)	X	X	X		
All	2010	S80	B4204S3	Engine Control Module(ECM)	X	X	X		1.Resetting Adaptation
All	2010	S80	B4204S4	Engine Control Module(ECM)	X	X	X		1.Resetting Adaptation
All	2010	S80	B4204S4	Engine Control Module(ECM)	X	X	X	X	
All	2010	S80	B6304T2	Engine Control Module(ECM)	X	X	X	X	
All	2010	S80	B6324S	Engine Control Module(ECM)	X	X	X	X	
All	2010	S80	B8444S	Engine Control Module(ECM)	X	X	X	X	
All	2010	S80	D4204T	Engine Control Module(ECM)	X	X	X		
All	2010	S80	D5244T10	Engine Control Module(ECM)	X	X	X	X	
All	2010	S80	D5244T4	Engine Control Module(ECM)	X	X	X	X	
All	2010	S80		Driver Information Module(DIM)	X	X	X		
All	2010	S80		Telephone (PHM)	X	X	X		
All	2010	S80		Infotainment Control Module(ICM)	X	X	X	X	
All	2010	S80		Forward Sensing Module(FSM)	X	X	X		
All	2010	S80		Brake Control Module (BCM)	X	X	X		
All	2010	S80		Differential Electronic Module(DEM)	X	X	X		
All	2010	S80		Park Brake Module(PBM)	X	X	X		1.Activation and service
All	2010	S80		Power Seat Module(PSM)	X	X	X		
All	2010	S80		Supplemental Restraint System Module(SRS)	X	X	X		
All	2010	S80		Parking Assistance Camera(PAC)	X	X	X		
All	2011	S80	B8444S	Engine Control Module(ECM)	X	X	X	X	
All	2011	S80	D4164T	Engine Control Module(ECM)	X	X	X		
All	2011	S80	B4204S3	Engine Control Module(ECM)	X	X	X		1.Resetting adaptation
All	2011	S80	B4204S4	Engine Control Module(ECM)	X	X	X		1.Resetting adaptation
All	2011	S80	B5254T8	Engine Control Module(ECM)	X	X	X	X	
All	2011	S80	D5244T10	Engine Control Module(ECM)	X	X	X	X	
All	2011	S80	B4204T6	Engine Control Module(ECM)	X	X	X		1.Resetting adaptation
All	2011	S80	B5254T10	Engine Control Module(ECM)	X	X	X	X	
All	2011	S80	B5254T11	Engine Control Module(ECM)	X	X	X	X	
All	2011	S80	B6304T4	Engine Control Module(ECM)	X	X	X	X	
All	2011	S80	B6324S4	Engine Control Module(ECM)	X	X	X	X	
All	2011	S80	B6324S5	Engine Control Module(ECM)	X	X	X	X	
All	2011	S80	D5204T	Engine Control Module(ECM)	X	X	X	X	
All	2011	S80	D5204T2	Engine Control Module(ECM)	X	X	X	X	
All	2011	S80		Suspension Module(SUM)	X	X			
All	2011	S80		Audio Module(AUD)	X	X			
All	2011	S80		Headlamp Control Module(HCM)	X	X			
All	2011	S80		High level Display Front(HLDF)	X	X			
All	2011	S80		Park Assist Module (PAM)	X	X			
All	2011	S80		Accessory USB Unit (AUU)	X	X	X		
All	2011	S80		Parking Assistance Camera(PAC)	X	X	X		

All	2011	S80		Remote Digital Audio Receiver (RDAR)	X	X	X		
All	2011	S80		Infotainment Control Module(ICM)	X	X	X	X	
All	2011	S80		Keyless Vehicle Module(KVM)	X	X	X		
All	2011	S80		Integrated Audio Module(IAM)	X	X			
All	2011	S80		Forward Sensing Module(FSM)	X	X	X		
All	2011	S80		Multimedia Module(MMM)	X	X			
All	2011	S80		Central Electronic Module(CEM)	X	X	X	X	
All	2011	S80		Driver Information Module(DIM)	X	X	X		
All	2011	S80		Phone Module(PHM)	X	X	X		
All	2011	S80		Power Steering Control Module(PSCM)	X	X	X		
All	2011	S80	TF-80SC AWD	Transmission Control Module(TCM)	X	X	X	X	
All	2011	S80	TF-80SC	Transmission Control Module(TCM)	X	X	X	X	
All	2011	S80	MPS6	Transmission Control Module(TCM)	X	X	X		1.Initial adaptation
All	2011	S80	TF-80SC AWD	Differential Electronic Module (DEM)	X	X	X		
All	2011	S80		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2011	S80		Park Brake Module(PBM)	X	X	X		
All	2011	S80		Brake Control Module (BCM)	X	X	X	X	
All	2011	S80		Combustion Preheater Module(CPM)	X	X			
All	2011	S80		Trailer Module(TRM)	X	X			
All	2011	S80		Power Seat Module(PSM)	X	X	X		
All	2011	S80		Supplemental Restraint System Module(SRS)	X	X	X		
All	2011	S80		Driver Door Module(DDM)	X	X	X		
All	2011	S80		Passenger Door Module(PDM)	X	X	X		
All	2011	S80		Climate Control Module(CCM)	X	X	X	X	
All	2009	S80L	B5254T6	Engine Control Module(ECM)	X	X	X	X	
All	2009	S80L	B6304T2	Engine Control Module(ECM)	X	X	X	X	
All	2009	S80L		Suspension Module(SUM)	X	X			
All	2009	S80L		Keyless Vehicle Module(KVM)	X	X	X		
All	2009	S80L		Headlamp Control Module(HCM)	X	X			
All	2009	S80L		Park Assist Module(PAM)	X	X			
All	2009	S80L		High level Display Front(HLDF)	X	X			
All	2009	S80L		Accessory USB Unit (AUU)	X	X	X		
All	2009	S80L		Audio Module(AUD)	X	X			
All	2009	S80L		Forward Sensing Module(FSM)	X	X	X		
All	2009	S80L		Parking Assistance Camera(PAC)	X	X	X		
All	2009	S80L		Central Electronic Module(CEM)	X	X	X		
All	2009	S80L		Driver Information Module(DIM)	X	X	X		
All	2009	S80L		Integrated Audio Module(IAM)	X	X			
All	2009	S80L		Multimedia Module(MMM)	X	X			
All	2009	S80L		Phone Module(PHM)	X	X	X		
All	2009	S80L		Infotainment Control Module(ICM)	X	X	X	X	
All	2009	S80L	TF-80SC	Transmission Control Module(TCM)	X	X	X	X	
All	2009	S80L	TF-80SC AWD	Transmission Control Module(TCM)	X	X	X	X	

All	2009	S80L		Differential Electronic Module(DEM)	X	X	X		
All	2009	S80L		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2009	S80L		Park Brake Module(PBM)	X	X	X		X
All	2009	S80L		Brake Control Module (BCM)	X	X	X		
All	2009	S80L		Driver Door Module(DDM)	X	X	X	X	
All	2009	S80L		Passenger Door Module(PDM)	X	X	X	X	
All	2009	S80L		Combustion Preheater Module(CPM)	X	X			
All	2009	S80L		Supplemental Restraint System Module(SRS)	X	X	X		
All	2009	S80L		Trailer Module(TRM)	X	X			
All	2009	S80L		Climate Control Module(CCM)	X	X	X	X	
All	2010	S80L	B5254T6	Engine Control Module(ECM)	X	X	X	X	
All	2010	S80L	B6304T2	Engine Control Module(ECM)	*	*	*	*	
All	2010	S80L		Suspension Module(SUM)	*	*	*		
All	2010	S80L		Audio Module(AUD)	X	X			
All	2010	S80L		Headlamp Control Module(HCM)	X	X			
All	2010	S80L		Park Assist Module(PAM)	X	X			
All	2010	S80L		High level Display Front(HLDF)	X	X			
All	2010	S80L		Accessory USB Unit (AUU)	*	*			
All	2010	S80L		Bluetooth Phone Module (BPM)	*	*			
All	2010	S80L		Forward Sensing Module(FSM)	X	X	X		
All	2010	S80L		Parking Assistance Camera(PAC)	X	X	X		
All	2010	S80L		Central Electronic Module(CEM)	X	X	X		
All	2010	S80L		Multimedia Module(MMM)	X	X			
All	2010	S80L		Phone Module(PHM)	X	X	X		
All	2010	S80L		Infotainment Control Module(ICM)	X	X	X	X	
All	2010	S80L		Keyless Vehicle Module(KVM)	X	X	X		
All	2010	S80L		Digital Audio Broadcast Module(DABM)	*	*			
All	2010	S80L		Driver Information Module(DIM)	X	X	X		
All	2010	S80L		Integrated Audio Module(IAM)	*	*			
All	2010	S80L	TF-80SC	Transmission Control Module(TCM)	X	X	X	X	
All	2010	S80L	TF-80SC AWD	Transmission Control Module(TCM)	X	X	X	X	
All	2010	S80L		Differential Electronic Module(DEM)	X	X	X		
All	2010	S80L		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2010	S80L		Park Brake Module(PBM)	X	X	X		
All	2010	S80L		Brake Control Module (BCM)	X	X	X		
All	2010	S80L		Driver Door Module(DDM)	X	X	X	X	
All	2010	S80L		Passenger Door Module(PDM)	X	X	X	X	
All	2010	S80L		Combustion Preheater Module(CPM)	X	X			
All	2010	S80L		Supplemental Restraint System Module(SRS)	X	X	X		
All	2010	S80L		Trailer Module(TRM)	X	X			
All	2010	S80L		Climate Control Module(CCM)	X	X	X	X	
All	2010	S80L		Power Seat Module(PSM)	X	X	X		
All	2011	S80L	B4204T6	Engine Control Module(ECM)	*	*	*	*	

All	2011	S80L	B6304T4	Engine Control Module(ECM)	X	X	X	X	
All	2011	S80L		Suspension Module(SUM)	X	X	X		
All	2011	S80L		Audio Module(AUD)	X	X			
All	2011	S80L		Headlamp Control Module(HCM)	X	X			
All	2011	S80L		Park Assist Module(PAM)	X	X			
All	2011	S80L		High level Display Front(HLDF)	X	X			
All	2011	S80L		Accessory USB Unit (AUU)	X	X			
All	2011	S80L		Bluetooth Phone Module (BPM)	X	X			
All	2011	S80L		Forward Sensing Module(FSM)	X	X	X		
All	2011	S80L		Parking Assistance Camera(PAC)	X	X	X		
All	2011	S80L		Central Electronic Module(CEM)	X	X	X		
All	2011	S80L		Multimedia Module(MMM)	X	X			
All	2011	S80L		Phone Module(PHM)	X	X	X		
All	2011	S80L		Infotainment Control Module(ICM)	X	X	X	X	
All	2011	S80L		Keyless Vehicle Module(KVM)	X	X	X		
All	2011	S80L		Digital Audio Broadcast Module(DABM)	X	X			
All	2011	S80L		Driver Information Module(DIM)	X	X	X		
All	2011	S80L		Integrated Audio Module(IAM)	X	X			
All	2011	S80L	MPS6	Transmission Control Module(TCM)	X	X	X	X	
All	2011	S80L	TF-80SC AWD	Transmission Control Module(TCM)	X	X	X	X	
All	2011	S80L		Differential Electronic Module(DEM)	X	X	X		
All	2011	S80L		Power Steering Control Module(PSCM)	X	X	X		
All	2011	S80L		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2011	S80L		Park Brake Module(PBM)	X	X	X		
All	2011	S80L		Brake Control Module (BCM)	X	X	X		
All	2011	S80L		Driver Door Module(DDM)	X	X	X	X	
All	2011	S80L		Passenger Door Module(PDM)	X	X	X	X	
All	2011	S80L		Combustion Preheater Module(CPM)	X	X			
All	2011	S80L		Supplemental Restraint System Module(SRS)	X	X	X		
All	2011	S80L		Trailer Module(TRM)	X	X			
All	2011	S80L		Climate Control Module(CCM)	X	X	X	X	
All	2011	S80L		Power Seat Module(PSM)	X	X	X		
All	1997	S90	B6244FS	Fuel System/ Combined System	X	X	X		
All	1997	S90	B6254FS	Fuel System/ Combined System	X	X	X		
All	1997	S90	B6304FS	Fuel System/ Combined System	X	X	X		
All	1997	S90	B6304FS2	Fuel System/ Combined System	X	X	X		
All	1997	S90	AW30-40	Transmission Control Module(TCM)	X	X	X		
All	1997	S90	AW30-43	Transmission Control Module(TCM)	X	X	X		
All	1997	S90		Anti-brake System Module(ABS/BCM)	X	X	X		
All	1997	S90		Supplemental Restraint System Module(SRS)	X	X	X		
All	1997	S90		Power Seat Module,Left(PSL)	X	X	X	X	
All	1997	S90		Immobilizer	X	X	X	X	
All	1998	S90	B6244FS	Fuel System/ Combined System	X	X	X		

All	1998	S90	B6254FS	Fuel System/ Combined System	X	X	X		
All	1998	S90	B6304FS	Fuel System/ Combined System	X	X	X		
All	1998	S90	B6304FS2	Fuel System/ Combined System	X	X	X		
All	1998	S90	AW30-40	Transmission Control Module(TCM)	X	X	X		
All	1998	S90	AW30-43		X	X	X		
All	1998	S90		Anti-brake System Module(ABS/BCM)	X	X	X		
All	1998	S90		Supplemental Restraint System Module(SRS)	X	X	X		
All	1998	S90		Power Seat Module,Left(PSL)	X	X	X	X	
All	1998	S90		Immobilizer	X	X	X	X	
All	1998	V40		Resetting the service reminder indicator(SRI)					X
All	1998	V40	B4164S	Fuel System/ Combined System	X	X	X	X	
All	1998	V40	B4184S	Fuel System/ Combined System	X	X	X	X	
All	1998	V40	B4184SM	Fuel System/ Combined System	X	X	X	X	
All	1998	V40	B4194T	Fuel System/ Combined System	X	X	X	X	
All	1998	V40	B4204S	Fuel System/ Combined System	X	X	X	X	
All	1998	V40	B4204T	Fuel System/ Combined System	X	X	X	X	
All	1998	V40	D4192T	Fuel System/ Combined System	X	X	X	X	
All	1998	V40	AW50-42	Transmission Control Module(TCM)	X	X	X	X	
All	1998	V40		Anti-brake System Module(ABS/BCM)	X	X	X	X	
All	1998	V40		Climate Control Module(CCM)	X	X	X	X	
All	1998	V40		Supplemental Restraint System Module(SRS)	X	X	X		
All	1998	V40		Immobilizer	X	X	X	X	
All	1999	V40		Resetting the service reminder indicator(SRI)					X
All	1999	V40	B4164S	Fuel System/ Combined System	X	X	X	X	
All	1999	V40	B4184S	Fuel System/ Combined System	X	X	X	X	
All	1999	V40	B4184SM	Fuel System/ Combined System	X	X	X	X	
All	1999	V40	B4194T	Fuel System/ Combined System	X	X	X	X	
All	1999	V40	B4204S	Fuel System/ Combined System	X	X	X	X	
All	1999	V40	B4204T	Fuel System/ Combined System	X	X	X	X	
All	1999	V40	D4192T	Fuel System/ Combined System	X	X	X	X	
All	1999	V40	D4192T2	Fuel System/ Combined System	X	X	X	X	
All	1999	V40	AW50-42	Transmission Control Module(TCM)	X	X	X	X	
All	1999	V40		Anti-brake System Module(ABS/BCM)	X	X	X	X	
All	1999	V40		Climate Control Module(CCM)	X	X	X	X	
All	1999	V40		Supplemental Restraint System Module(SRS)	X	X	X		
All	1999	V40		Driver Information Module(DIM)	X	X	X	X	
All	1999	V40		Immobilizer	X	X	X	X	
All	1999	V40		Lock and alarm	X	X	X	X	
All	2000	V40		Resetting the service reminder indicator(SRI)					X
All	2000	V40	B4164S2	Fuel System/ Combined System	X	X	X	X	
All	2000	V40	B4184S2	Fuel System/ Combined System	X	X	X	X	
All	2000	V40	B4184S3	Fuel System/ Combined System	X	X	X	X	
All	2000	V40	B4184SM	Fuel System/ Combined System	X	X	X	X	

All	2000	V40	B4194T2	Fuel System/ Combined System	X	X	X	X	
All	2000	V40	B4204S2	Fuel System/ Combined System	X	X	X	X	
All	2000	V40	B4204T2	Fuel System/ Combined System	X	X	X	X	
All	2000	V40	D4192T2	Fuel System/ Combined System	X	X	X	X	
All	2000	V40	AW50-42	Transmission Control Module(TCM)	X	X	X	X	
All	2000	V40		Anti-brake System Module(ABS/BCM)	X	X	X	X	
All	2000	V40		Climate Control Module(CCM)	X	X	X	X	
All	2000	V40		Supplemental Restraint System Module(SRS)	X	X	X		
All	2000	V40		Driver Information Module(DIM)	X	X	X	X	
All	2000	V40		Immobilizer	X	X	X	X	
All	2000	V40		Lock and alarm	X	X	X	X	
All	2001	V40		Resetting the service reminder indicator(SRI)					X
All	2001	V40	B4164S2	Fuel System/ Combined System	X	X	X	X	
All	2001	V40	B4184S2	Fuel System/ Combined System	X	X	X	X	
All	2001	V40	B4184S3	Fuel System/ Combined System	X	X	X	X	
All	2001	V40	B4184S9	Fuel System/ Combined System	X	X	X	X	
All	2001	V40	B4184S10	Fuel System/ Combined System	X	X	X	X	
All	2001	V40	B4184SM	Fuel System/ Combined System	X	X	X	X	
All	2001	V40	B4184SJ	Fuel System/ Combined System	X	X	X	X	
All	2001	V40	B4204S2	Fuel System/ Combined System	X	X	X	X	
All	2001	V40	B4204T3	Fuel System/ Combined System	X	X	X	X	
All	2001	V40	B4204T5	Fuel System/ Combined System	X	X	X	X	
All	2001	V40	D4192T3	Fuel System/ Combined System	X	X	X	X	
All	2001	V40	D4192T4	Fuel System/ Combined System	X	X	X	X	
All	2001	V40	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	
All	2001	V40		Anti-brake System Module(ABS/BCM)	X	X	X	X	
All	2001	V40		Climate Control Module(CCM)	X	X	X	X	
All	2001	V40		Supplemental Restraint System Module(SRS)	X	X	X		
All	2001	V40		Driver Information Module(DIM)	X	X	X	X	
All	2001	V40		Immobilizer	X	X	X	X	
All	2001	V40		Lock and alarm	X	X	X	X	
All	2002	V40		Resetting the service reminder indicator(SRI)					X
All	2002	V40	B4164S2	Fuel System/ Combined System	X	X	X	X	
All	2002	V40	B4184S2	Fuel System/ Combined System	X	X	X	X	
All	2002	V40	B4184S3	Fuel System/ Combined System	X	X	X	X	
All	2002	V40	B4184S9	Fuel System/ Combined System	X	X	X	X	
All	2002	V40	B4184S10	Fuel System/ Combined System	X	X	X	X	
All	2002	V40	B4184SJ	Fuel System/ Combined System	X	X	X	X	
All	2002	V40	B4204S2	Fuel System/ Combined System	X	X	X	X	
All	2002	V40	B4204T3	Fuel System/ Combined System	X	X	X	X	
All	2002	V40	B4204T5	Fuel System/ Combined System	X	X	X	X	
All	2002	V40	D4192T3	Fuel System/ Combined System	X	X	X	X	
All	2002	V40	D4192T4	Fuel System/ Combined System	X	X	X	X	

All	2002	V40	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	
All	2002	V40		Anti-brake System Module(ABS/BCM)	X	X	X	X	
All	2002	V40		Climate Control Module(CCM)	X	X	X	X	
All	2002	V40		Supplemental Restraint System Module(SRS)	X	X	X		
All	2002	V40		Driver Information Module(DIM)	X	X	X	X	
All	2002	V40		Immobilizer	X	X	X	X	
All	2002	V40		Lock and alarm	X	X	X	X	
All	2003	V40		Resetting the service reminder indicator(SRI)				X	
All	2003	V40	B4164S2	Fuel System/ Combined System	X	X	X	X	
All	2003	V40	B4184S2	Fuel System/ Combined System	X	X	X	X	
All	2003	V40	B4184S3	Fuel System/ Combined System	X	X	X	X	
All	2003	V40	B4184S9	Fuel System/ Combined System	X	X	X	X	
All	2003	V40	B4184S10	Fuel System/ Combined System	X	X	X	X	
All	2003	V40	B4184SJ	Fuel System/ Combined System	X	X	X	X	
All	2003	V40	B4204S2	Fuel System/ Combined System	X	X	X	X	
All	2003	V40	B4204T3	Fuel System/ Combined System	X	X	X	X	
All	2003	V40	B4204T5	Fuel System/ Combined System	X	X	X	X	
All	2003	V40	D4192T3	Fuel System/ Combined System	X	X	X	X	
All	2003	V40	D4192T4	Fuel System/ Combined System	X	X	X	X	
All	2003	V40	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	
All	2003	V40		Anti-brake System Module(ABS/BCM)	X	X	X	X	
All	2003	V40		Climate Control Module(CCM)	X	X	X	X	
All	2003	V40		Supplemental Restraint System Module(SRS)	X	X	X		
All	2003	V40		Driver Information Module(DIM)	X	X	X	X	
All	2003	V40		Immobilizer	X	X	X	X	
All	2003	V40		Lock and alarm	X	X	X	X	
All	2004	V40		Resetting the service reminder indicator(SRI)				X	
All	2004	V40	B4164S2	Fuel System/ Combined System	X	X	X	X	
All	2004	V40	B4184S2	Fuel System/ Combined System	X	X	X	X	
All	2004	V40	B4184S3	Fuel System/ Combined System	X	X	X	X	
All	2004	V40	B4184S9	Fuel System/ Combined System	X	X	X	X	
All	2004	V40	B4184S10	Fuel System/ Combined System	X	X	X	X	
All	2004	V40	B4184SJ	Fuel System/ Combined System	X	X	X	X	
All	2004	V40	B4204S2	Fuel System/ Combined System	X	X	X	X	
All	2004	V40	B4204T3	Fuel System/ Combined System	X	X	X	X	
All	2004	V40	D4192T3	Fuel System/ Combined System	X	X	X	X	
All	2004	V40	D4192T4	Fuel System/ Combined System	X	X	X	X	
All	2004	V40	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	
All	2004	V40		Anti-brake System Module(ABS/BCM)	X	X	X	X	
All	2004	V40		Climate Control Module(CCM)	X	X	X	X	
All	2004	V40		Supplemental Restraint System Module(SRS)	X	X	X		
All	2004	V40		Driver Information Module(DIM)	X	X	X	X	
All	2004	V40		Immobilizer	X	X	X	X	

All	2004	V40		Lock and alarm	X	X	X	X	
All	2004	V50		Resetting the service reminder indicator(SRI)					X
All	2004	V50	B5244S4	Engine Control Module(ECM)	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
All	2004	V50	B5244S5	Engine Control Module(ECM)	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
All	2004	V50	B5254T3	Engine Control Module(ECM)	X	X	X	X	1.Readiness Code 2.Adaptation of the throttle unit 3.Quick test of exhaust camshaft control 4.Quick test of intake camshaft control 5.Quick test of fuel pump(FP) 6.Quick test of the fuel tank system(USA/CDN)
All	2004	V50	D4204T	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap
All	2004	V50	D4204T2	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap
All	2004	V50	D4204T	Additive Dosing Module(ADM)	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
All	2004	V50	D4204T2	Additive Dosing Module(ADM)	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
All	2004	V50	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	
All	2004	V50		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Calibration(Cars with DSTC)
All	2004	V50		Climate Control Module(CCM)	X	X	X		
All	2004	V50		Combustion Preheater Module(CPM)	X	X	X	X	
All	2004	V50		Driver Door Module(DDM)	X	X	X	X	
All	2004	V50		Passenger Door Module(PDM)	X	X	X	X	
All	2004	V50		Power Seat Module(PSM)	X	X	X	X	
All	2004	V50		Supplemental Restraint System Module(SRS)	X	X	X		
All	2004	V50		Trailer Module(TRM)	X	X	X		
All	2004	V50		Accessory Electronic Module(AEM)	X	X	X	X	
All	2004	V50		Central Electronic Module(CEM)	X	X	X	X	
All	2004	V50		Driver Information Module(DIM)	X	X	X	X	
All	2004	V50		Phone Module(PHM)	X	X	X		
All	2004	V50		Steering Wheel Module(SWM)	X	X	X		
All	2004	V50		AM/FM Tuner Module(AFM)	X	X	X		
All	2004	V50		Global Positioning System Module(GPS)	X	X	X		
All	2004	V50		Infotainment Control Module(ICM)	X	X	X	X	
All	2004	V50		Media Player Module(MPM)	X	X	X	X	
All	2004	V50		Multimedia Module(MMM)	X	X	X	X	
All	2004	V50		Traffic Message Channel Module(TMC)	X	X	X		
All	2004	V50		Audio Module(AUD)	X	X			
All	2005	V50		Resetting the service reminder indicator(SRI)					X
All	2005	V50	B4164S3	Engine Control Module(ECM)	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)

All	2005	V50	B4184S11	Engine Control Module(ECM)	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
All	2005	V50	B5244S4	Engine Control Module(ECM)	X	X	X	X	2.Quick test of the fuel tank system(USA/CDN)
All	2005	V50	B5244S5	Engine Control Module(ECM)	X	X	X	X	3.Quick test of the fuel tank system(USA/CDN)
All	2005	V50	B5254T3	Engine Control Module(ECM)	X	X	X	X	4.Quick test of the fuel tank system(USA/CDN)
All	2005	V50	D4164T	Engine Control Module(ECM)	X	X	X	X	5.Quick test of the fuel tank system(USA/CDN)
All	2005	V50	D4204T	Engine Control Module(ECM)	X	X	X	X	6.Quick test of the fuel tank system(USA/CDN)
All	2005	V50	D4204T2	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters
All	2005	V50	D4204T2	Engine Control Module(ECM)	X	X	X	X	2.Resetting the adaptation values
All	2005	V50	D4204T2	Engine Control Module(ECM)	X	X	X	X	3.Resetting the odometer particle trap
All	2005	V50	D4164T	Additive Dosing Module(ADM)	X	X	X		1.Refilling the feed hose with additive
All	2005	V50	D4204T	Additive Dosing Module(ADM)	X	X	X		2.Resetting the tank level gauge
All	2005	V50	D4204T2	Additive Dosing Module(ADM)	X	X	X		1.Refilling the feed hose with additive
All	2005	V50	D4204T2	Additive Dosing Module(ADM)	X	X	X		2.Resetting the tank level gauge
All	2005	V50	AW50/51AWD	Transmission Control Module(TCM)	X	X	X	X	
All	2005	V50	M66AWD	Transmission Control Module(TCM)	X	X	X	X	
All	2005	V50	AW50/51AWD	Differential Electronic Module (DEM)	X	X	X		
All	2005	V50	AW55-50/51SN	Differential Electronic Module (DEM)	X	X	X		
All	2005	V50		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Calibration(Cars with DSTC)
All	2005	V50		Climate Control Module(CCM)	X	X	X		
All	2005	V50		Combustion Preheater Module(CPM)	X	X	X	X	
All	2005	V50		Driver Door Module(DDM)	X	X	X	X	
All	2005	V50		Passenger Door Module(PDM)	X	X	X	X	
All	2005	V50		Power Seat Module(PSM)	X	X	X	X	
All	2005	V50		Supplemental Restraint System Module(SRS)	X	X	X		
All	2005	V50		Trailer Module(TRM)	X	X	X		
All	2005	V50		Accessory Electronic Module(AEM)	X	X	X	X	
All	2005	V50		Central Electronic Module(CEM)	X	X	X	X	
All	2005	V50		Driver Information Module(DIM)	X	X	X	X	
All	2005	V50		Phone Module(PHM)	X	X	X		
All	2005	V50		AM/FM Tuner Module(AFM)	X	X	X		
All	2005	V50		Global Positioning System Module(GPS)	X	X	X		
All	2005	V50		Infotainment Control Module(ICM)	X	X	X	X	

All	2005	V50		Media Player Module(MPM)	X	X	X	X	
All	2005	V50		Multimedia Module(MMM)	X	X	X	X	
All	2005	V50		Traffic Message Channel Module(TMC)	X	X	X		
All	2005	V50		Audio Module(AUD)	X	X			
All	2006	V50		Resetting the service reminder indicator(SRI)					X
All	2006	V50	B4164S3	Engine Control Module(ECM)	X	X	X	X	1.Quick test of the fuel tank 2.Quick test(USA/CDN) fuel tank
All	2006	V50	B4184S11	Engine Control Module(ECM)	X	X	X	X	1.Quick test(USA/CDN) fuel tank
All	2006	V50	B5244S4	Engine Control Module(ECM)	X	X	X	X	1.Quick test(USA/CDN) fuel tank
All	2006	V50	B5244S5	Engine Control Module(ECM)	X	X	X	X	1.Quick test(USA/CDN) fuel tank system(USA/CDN)
All	2006	V50	B5254T3	Engine Control Module(ECM)	X	X	X	X	1.Readiness Code 2.Adaptation of the throttle unit 3.Quick test of exhaust camshaft control 4.Quick test of intake camshaft control 5.Quick test of fuel pump(FP) 6.Quick test of the fuel tank system(USA/CDN)
All	2006	V50	D4164T	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap
All	2006	V50	D4204T	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap
All	2006	V50	D4204T2	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap
All	2006	V50	D4164T	Additive Dosing Module(ADM)	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
All	2006	V50	D4204T	Additive Dosing Module(ADM)	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
All	2006	V50	D4204T2	Additive Dosing Module(ADM)	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
All	2006	V50	AW50/51AWD	Transmission Control Module(TCM)	X	X	X	X	
All	2006	V50	M66AWD	Transmission Control Module(TCM)	X	X	X	X	
All	2006	V50	AW50/51AWD	Differential Electronic Module (DEM)	X	X	X		
All	2006	V50	AW55-50/51SN	Differential Electronic Module (DEM)	X	X	X		
All	2006	V50		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Calibration(Cars with DSTC)
All	2006	V50		Climate Control Module(CCM)	X	X	X		
All	2006	V50		Combustion Preheater Module(CPM)	X	X	X	X	
All	2006	V50		Driver Door Module(DDM)	X	X	X	X	
All	2006	V50		Passenger Door Module(PDM)	X	X	X	X	
All	2006	V50		Power Seat Module(PSM)	X	X	X	X	
All	2006	V50		Supplemental Restraint System Module(SRS)	X	X	X		
All	2006	V50		Trailer Module(TRM)	X	X	X		
All	2006	V50		Accessory Electronic Module(AEM)	X	X	X	X	

All	2006	V50		Central Electronic Module(CEM)	X	X	X	X	
All	2006	V50		Driver Information Module(DIM)	X	X	X	X	
All	2006	V50		Phone Module(PHM)	X	X	X		
All	2006	V50		AM/FM Tuner Module(AFM)	X	X	X		
All	2006	V50		Global Positioning System Module(GPS)	X	X	X		
All	2006	V50		Infotainment Control Module(ICM)	X	X	X	X	
All	2006	V50		Media Player Module(MPM)	X	X	X	X	
All	2006	V50		Multimedia Module(MMM)	X	X	X	X	
All	2006	V50		Traffic Message Channel Module(TMC)	X	X	X		
All	2006	V50		Audio Module(AUD)	X	X			
All	2007	V50		Resetting the service reminder indicator(SRI)					X
All	2007	V50	B4164S3	Engine Control Module(ECM)	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
All	2007	V50	B4184S11	Engine Control Module(ECM)	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
All	2007	V50	B5244S4	Engine Control Module(ECM)	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
All	2007	V50	B5244S5	Engine Control Module(ECM)	X	X	X	X	1.Quick test of the fuel tank system(USA/CDN)
All	2007	V50	B5254T3	Engine Control Module(ECM)	X	X	X	X	1.Readiness Code 2.Adaptation of the throttle unit 3.Quick test of exhaust camshaft control 4.Quick test of intake camshaft control 5.Quick test of fuel pump(FP) 6.Quick test of the fuel tank system(USA/CDN)
All	2007	V50	D4164T	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap
All	2007	V50	D4204T	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap
All	2007	V50	D4204T2	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap
All	2007	V50	D4164T	Additive Dosing Module(ADM)	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
All	2007	V50	D4204T	Additive Dosing Module(ADM)	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
All	2007	V50	D4204T2	Additive Dosing Module(ADM)	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
All	2007	V50	AW50/51AWD	Transmission Control Module(TCM)	X	X	X	X	
All	2007	V50	M66AWD	Transmission Control Module(TCM)	X	X	X	X	
All	2007	V50	AW50/51AWD	Differential Electronic Module (DEM)	X	X	X		
All	2007	V50	AW55-50/51SN	Differential Electronic Module (DEM)	X	X	X		
All	2007	V50		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Calibration(Cars with DSTC)
All	2007	V50		Climate Control Module(CCM)	X	X	X		
All	2007	V50		Combustion Preheater Module(CPM)	X	X	X	X	

All	2007	V50		Driver Door Module(DDM)	X	X	X	X	
All	2007	V50		Passenger Door Module(PDM)	X	X	X	X	
All	2007	V50		Power Seat Module(PSM)	X	X	X	X	
All	2007	V50		Supplemental Restraint System Module(SRS)	X	X	X		
All	2007	V50		Trailer Module(TRM)	X	X	X		
All	2007	V50		Accessory Electronic Module(AEM)	X	X	X	X	
All	2007	V50		Central Electronic Module(CEM)	X	X	X	X	
All	2007	V50		Driver Information Module(DIM)	X	X	X	X	
All	2007	V50		Phone Module(PHM)	X	X	X		
All	2007	V50		AM/FM Tuner Module(AFM)	X	X	X		
All	2007	V50		Global Positioning System Module(GPS)	X	X	X		
All	2007	V50		Infotainment Control Module(ICM)	X	X	X	X	
All	2007	V50		Media Player Module(MPM)	X	X	X	X	
All	2007	V50		Multimedia Module(MMM)	X	X	X	X	
All	2007	V50		Traffic Message Channel Module(TMC)	X	X	X		
All	2007	V50		Audio Module(AUD)	X	X			
All	2008	V50		Resetting the service reminder indicator(SRI)					X
All	2008	V50	B4164S3	Engine Control Module(ECM)	X	X	X	X	1.Quick test of the fuel tank
All	2008	V50	B4184S11	Engine Control Module(ECM)	X	X	X	X	1.Quick test of the fuel tank
All	2008	V50	B5244S4	Engine Control Module(ECM)	X	X	X	X	1.Quick test of the fuel tank
All	2008	V50	B5244S5	Engine Control Module(ECM)	X	X	X	X	1.Quick test of the fuel tank
All	2008	V50	B5254T3	Engine Control Module(ECM)	X	X	X	X	1.Readiness Code 2.Adaptation of the throttle unit 3.Quick test of exhaust camshaft control 4.Quick test of intake camshaft control 5.Quick test of fuel pump(FP) 6.Quick test of the fuel tank system(USA/CDN)
All	2008	V50	D4164T	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap
All	2008	V50	D4204T	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap
All	2008	V50	D4204T2	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap
All	2008	V50	D4164T	Additive Dosing Module(ADM)	X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
All	2008	V50	D4204T		X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
All	2008	V50	D4204T2		X	X	X		1.Refilling the feed hose with additive 2.Resetting the tank level gauge
All	2008	V50	AW50/51AWD	Transmission Control Module(TCM)	X	X	X	X	

All	2008	V50	M66AWD	Transmission Control Module(TCM)	X	X	X	X	
All	2008	V50	AW50/51AWD	Differential Electronic Module (DEM)	X	X	X		
All	2008	V50	AW55-50/51SN	Differential Electronic Module (DEM)	X	X	X		
All	2008	V50		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Calibration(Cars with DSTC)
All	2008	V50		Climate Control Module(CCM)	X	X	X		
All	2008	V50		Combustion Preheater Module(CPM)	X	X	X	X	
All	2008	V50		Driver Door Module(DDM)	X	X	X	X	
All	2008	V50		Passenger Door Module(PDM)	X	X	X	X	
All	2008	V50		Power Seat Module(PSM)	X	X	X	X	
All	2008	V50		Supplemental Restraint System Module(SRS)	X	X	X		
All	2008	V50		Trailer Module(TRM)	X	X	X		
All	2008	V50		Accessory Electronic Module(AEM)	X	X	X	X	
All	2008	V50		Central Electronic Module(CEM)	X	X	X	X	
All	2008	V50		Driver Information Module(DIM)	X	X	X	X	
All	2008	V50		Phone Module(PHM)	X	X	X		
All	2008	V50		AM/FM Tuner Module(AFM)	X	X	X		
All	2008	V50		Global Positioning System Module(GPS)	X	X	X		
All	2008	V50		Infotainment Control Module(ICM)	X	X	X	X	
All	2008	V50		Media Player Module(MPM)	X	X	X	X	
All	2008	V50		Multimedia Module(MMM)	X	X	X	X	
All	2008	V50		Traffic Message Channel Module(TMC)	X	X	X		
All	2008	V50		Audio Module(AUD)	X	X			
All	2009	V50		Subwoofer Module(SUB)	X	X			
All	2009	V50	MPS6	Transmission Control Module(TCM)	X	X	X		
All	2010	V50		Subwoofer Module(SUB)	X	X			
All	2010	V50	MPS6	Transmission Control Module(TCM)	X	X	X		
All	1997	V70(-00)		Resetting the service reminder indicator(SRI)				X	
All	1997	V70(-00)	B5202FS	Fuel System/ Combined System	X	X	X		
All	1997	V70(-00)	B5204T2	Fuel System/ Combined System	X	X	X		
All	1997	V70(-00)	B5204T3	Fuel System/ Combined System	X	X	X		
All	1997	V70(-00)	B5234FS	Fuel System/ Combined System	X	X	X		
All	1997	V70(-00)	B5234T2	Fuel System/ Combined System	X	X	X		
All	1997	V70(-00)	B5234T3	Fuel System/ Combined System	X	X	X		
All	1997	V70(-00)	B5252FS	Fuel System/ Combined System	X	X	X		
All	1997	V70(-00)	B5254FS M4.4	Fuel System/ Combined System	X	X	X		
All	1997	V70(-00)	B5254T	Fuel System/ Combined System	X	X	X		
All	1997	V70(-00)	D5252T MSA 15.7	Fuel System/ Combined System	X	X	X		
All	1997	V70(-00)	AW42AWD	Transmission Control Module(TCM)	X	X	X		
All	1997	V70(-00)	AW50-42	Transmission Control Module(TCM)	X	X	X		
All	1997	V70(-00)		Anti-brake System Module(ABS/BCM)	X	X	X	X	
All	1997	V70(-00)		Climate Control Module(CCM)	X	X	X		
All	1997	V70(-00)		Supplemental Restraint System Module(SRS)	X	X	X		
All	1997	V70(-00)		Power Seat Module,Left(PSL)	X	X	X	X	

All	1997	V70(-00)		Road Traffic Information Module(RTI)	X	X	X		
All	1997	V70(-00)		Immobilizer	X	X	X		
All	1998	V70(-00)		Resetting the service reminder indicator(SRI)				X	
All	1998	V70(-00)	B5202FS	Fuel System/ Combined System	X	X	X		
All	1998	V70(-00)	B5204T2	Fuel System/ Combined System	X	X	X		
All	1998	V70(-00)	B5204T3	Fuel System/ Combined System	X	X	X		
All	1998	V70(-00)	B5234FS	Fuel System/ Combined System	X	X	X		
All	1998	V70(-00)	B5234T2	Fuel System/ Combined System	X	X	X		
All	1998	V70(-00)	B5234T3	Fuel System/ Combined System	X	X	X		
All	1998	V70(-00)	B5234T4	Fuel System/ Combined System	X	X	X		
All	1998	V70(-00)	B5234T6	Fuel System/ Combined System	X	X	X		
All	1998	V70(-00)	B5234T7	Fuel System/ Combined System	X	X	X		
All	1998	V70(-00)	B5252FS	Fuel System/ Combined System	X	X	X		
All	1998	V70(-00)	B5254FS M4.4	Fuel System/ Combined System	X	X	X		
All	1998	V70(-00)	B5254T	Fuel System/ Combined System	X	X	X		
All	1998	V70(-00)	D5252T MSA 15.7	Fuel System/ Combined System	X	X	X		
All	1998	V70(-00)	GB5252S	Fuel System/ Combined System	X	X	X	X	
All	1998	V70(-00)	AW42AWD	Transmission Control Module(TCM)	X	X	X	X	
All	1998	V70(-00)	AW50-42	Transmission Control Module(TCM)	X	X	X		
All	1998	V70(-00)		Anti-brake System Module(ABS/BCM)	X	X	X	X	
All	1998	V70(-00)		Climate Control Module(CCM)	X	X	X		
All	1998	V70(-00)		Supplemental Restraint System Module(SRS)	X	X	X		
All	1998	V70(-00)		Power Seat Module,Left(PSL)	X	X	X	X	
All	1998	V70(-00)		Road Traffic Information Module(RTI)	X	X	X		
All	1998	V70(-00)		Immobilizer	X	X	X		
All	1999	V70(-00)		Resetting the service reminder indicator(SRI)				X	
All	1999	V70(-00)	B5202FS	Fuel System/ Combined System	X	X	X		
All	1999	V70(-00)	B5204T3	Fuel System/ Combined System	X	X	X		
All	1999	V70(-00)	B5204T4	Fuel System/ Combined System	X	X	X		
All	1999	V70(-00)	B5234FS	Fuel System/ Combined System	X	X	X		
All	1999	V70(-00)	B5234T3	Fuel System/ Combined System	X	X	X		
All	1999	V70(-00)	B5234T7	Fuel System/ Combined System	X	X	X		
All	1999	V70(-00)	B5234T8	Fuel System/ Combined System	X	X	X		
All	1999	V70(-00)	B5252FS	Fuel System/ Combined System	X	X	X		
All	1999	V70(-00)	B5254S DENSO	Fuel System/ Combined System	X	X	X		
All	1999	V70(-00)	B5254T	Fuel System/ Combined System	X	X	X		
All	1999	V70(-00)	D5252T MSA 15.7	Fuel System/ Combined System	X	X	X		
All	1999	V70(-00)	D5252T MSA 15.8	Fuel System/ Combined System	X	X	X		
All	1999	V70(-00)	GB5252S	Fuel System/ Combined System	X	X	X		
All	1999	V70(-00)	GB5252S2	Fuel System/ Combined System	X	X	X		
All	1999	V70(-00)	AW42AWD	Transmission Control Module(TCM)	X	X	X		
All	1999	V70(-00)	AW50-42	Transmission Control Module(TCM)	X	X	X		
All	1999	V70(-00)		Anti-brake System Module(ABS/BCM)	X	X	X		

All	1999	V70(-00)		Climate Control Module(CCM)	X	X	X		
All	1999	V70(-00)		Combustion Preheater Module(CPM)	X	X	X		
All	1999	V70(-00)		Supplemental Restraint System Module(SRS)	X	X	X		
All	1999	V70(-00)		Power Seat Module,Left(PSL)	X	X	X	X	
All	1999	V70(-00)		Power Seat Module,Right(PSR)	X	X	X	X	
All	1999	V70(-00)		Road Traffic Information Module(RTI)	X	X	X		
All	1999	V70(-00)		Immobilizer	X	X	X	X	
All	1999	V70(-00)		Lock and alarm	X	X	X	X	
All	2000	V70(-00)		Resetting the service reminder indicator(SRI)				X	
All	2000	V70(-00)	B5204T3	Fuel System/ Combined System	X	X	X		
All	2000	V70(-00)	B5204T4	Fuel System/ Combined System	X	X	X		
All	2000	V70(-00)	B5234T3	Fuel System/ Combined System	X	X	X		
All	2000	V70(-00)	B5234T7	Fuel System/ Combined System	X	X	X		
All	2000	V70(-00)	B5244S	Fuel System/ Combined System	X	X	X		
All	2000	V70(-00)	B5244S2	Fuel System/ Combined System	X	X	X		
All	2000	V70(-00)	B5244SG	Fuel System/ Combined System	X	X	X		
All	2000	V70(-00)	B5244T	Fuel System/ Combined System	X	X	X		
All	2000	V70(-00)	B5244T2	Fuel System/ Combined System	X	X	X		
All	2000	V70(-00)	D5252T MSA 15.8	Fuel System/ Combined System	X	X	X		
All	2000	V70(-00)	AW42AWD	Transmission Control Module(TCM)	X	X	X		
All	2000	V70(-00)	AW50-42	Transmission Control Module(TCM)	X	X	X		
All	2000	V70(-00)	AW50/51AWD	Transmission Control Module(TCM)	X	X	X		
All	2000	V70(-00)	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X		
All	2000	V70(-00)		Anti-brake System Module(ABS/BCM)	X	X	X		
All	2000	V70(-00)		Climate Control Module(CCM)	X	X	X		
All	2000	V70(-00)		Combustion Preheater Module(CPM)	X	X	X		
All	2000	V70(-00)		Supplemental Restraint System Module(SRS)	X	X	X		
All	2000	V70(-00)		Power Seat Module,Left(PSL)	X	X	X	X	
All	2000	V70(-00)		Power Seat Module,Right(PSR)	X	X	X	X	
All	2000	V70(-00)		Road Traffic Information Module(RTI)	X	X	X		
All	2000	V70(-00)		Immobilizer	X	X	X	X	
All	2000	V70(-00)		Lock and alarm	X	X	X	X	
All	2000	V70(00-)		Resetting the service reminder indicator(SRI)				X	
All	2000	V70(00-)	B5204T5	Engine Control Module(ECM)	X	X	X	X	
All	2000	V70(00-)	B5234T3	Engine Control Module(ECM)	X	X	X	X	
All	2000	V70(00-)	B5244T3	Engine Control Module(ECM)	X	X	X	X	
All	2000	V70(00-)	D5252T MSA 15.8	Fuel system/combined system	X	X	X		
All	2000	V70(00-)	AW50/51AWD	Transmission Control Module(TCM)	X	X	X	X	
All	2000	V70(00-)	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	
All	2000	V70(00-)	AW50/51AWD	Differential Electronic Module(DEM)	X	X	X		
All	2000	V70(00-)		Anti-brake System Module(ABS/BCM)	X	X	X	X	
All	2000	V70(00-)		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2000	V70(00-)		Climate Control Module(CCM)	X	X	X		

All	2000	V70(00-)		Combustion Preheater Module(CPM)	X	X	X		
All	2000	V70(00-)		Driver Door Module(DDM)	X	X	X	X	
All	2000	V70(00-)		Passenger Door Module(PDM)	X	X	X	X	
All	2000	V70(00-)		Power Seat Module(PSM)	X	X	X	X	
All	2000	V70(00-)		Supplemental Restraint System Module(SRS)	X	X			1.Calibrating the occupant weight sensor(OWS)
All	2000	V70(00-)		Accessory Electronic Module(AEM)	X	X	X		
All	2000	V70(00-)		Audio Module(AUM)	X	X	X		
All	2000	V70(00-)		Central Electronic Module(CEM)	X	X	X	X	
All	2000	V70(00-)		Driver Information Module(DIM)	X	X	X	X	
All	2000	V70(00-)		Phone Module(PHM)	X	X	X		
All	2000	V70(00-)		Rear Electronic Module(REM)	X	X	X	X	
All	2000	V70(00-)		Road Traffic Information Module(RTI)	X	X			
All	2000	V70(00-)		Upper Electronic Module(UEM)	X	X	X	X	
All	2000	V70(00-)		Steering Wheel Module(SWM)	X	X	X		
All	2001	V70(00-)		Resetting the service reminder indicator(SRI)				X	
All	2001	V70(00-)	B5204T5	Engine Control Module(ECM)	X	X	X	X	
All	2001	V70(00-)	B5234T3	Engine Control Module(ECM)	X	X	X	X	
All	2001	V70(00-)	B5234T7	Engine Control Module(ECM)	X	X	X	X	
All	2001	V70(00-)	B5244S	Engine Control Module(ECM)	X	X	X	X	
All	2001	V70(00-)	B5244S2	Engine Control Module(ECM)	X	X	X	X	
All	2001	V70(00-)	B5244SG	Engine Control Module(ECM)	X	X	X	X	
All	2001	V70(00-)	B5244T3	Engine Control Module(ECM)	X	X	X	X	
All	2001	V70(00-)	D5244T	Fuel system/combined system	X	X	X		
All	2001	V70(00-)	D5252T MSA 15.8	Fuel system/combined system	X	X	X		
All	2001	V70(00-)	AW50/51AWD	Transmission Control Module(TCM)	X	X	X	X	
All	2001	V70(00-)	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	
All	2001	V70(00-)	AW50/51AWD	Differential Electronic Module(DEM)	X	X	X		
All	2001	V70(00-)		Anti-brake System Module(ABS/BCM)	X	X	X	X	
All	2001	V70(00-)		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2001	V70(00-)		Climate Control Module(CCM)	X	X	X		
All	2001	V70(00-)		Combustion Preheater Module(CPM)	X	X	X		
All	2001	V70(00-)		Driver Door Module(DDM)	X	X	X	X	
All	2001	V70(00-)		Passenger Door Module(PDM)	X	X	X	X	
All	2001	V70(00-)		Power Seat Module(PSM)	X	X	X	X	
All	2001	V70(00-)		Supplemental Restraint System Module(SRS)	X	X			1.Calibrating the occupant weight sensor(OWS)
All	2001	V70(00-)		Accessory Electronic Module(AEM)	X	X	X		
All	2001	V70(00-)		Audio Module(AUM)	X	X	X		
All	2001	V70(00-)		Central Electronic Module(CEM)	X	X	X	X	
All	2001	V70(00-)		Driver Information Module(DIM)	X	X	X	X	
All	2001	V70(00-)		Phone Module(PHM)	X	X	X		
All	2001	V70(00-)		Rear Electronic Module(REM)	X	X	X	X	
All	2001	V70(00-)		Road Traffic Information Module(RTI)	X	X			
All	2001	V70(00-)		Upper Electronic Module(UEM)	X	X	X	X	

All	2001	V70(00-)		Steering Wheel Module(SWM)	X	X	X		
All	2002	V70(00-)		Resetting the service reminder indicator(SRI)				X	
All	2002	V70(00-)	B5204T5	Engine Control Module(ECM)	X	X	X		
All	2002	V70(00-)	B5234T3	Engine Control Module(ECM)	X	X	X		
All	2002	V70(00-)	B5234T7	Engine Control Module(ECM)	X	X	X		
All	2002	V70(00-)	B5244S	Engine Control Module(ECM)	X	X	X		
All	2002	V70(00-)	B5244S2	Engine Control Module(ECM)	X	X	X		
All	2002	V70(00-)	B5244SG	Engine Control Module(ECM)	X	X	X		
All	2002	V70(00-)	B5244SG2	Engine Control Module(ECM)	X	X	X		
All	2002	V70(00-)	B5244T3	Engine Control Module(ECM)	X	X	X		
All	2002	V70(00-)	D5244T	Fuel system/combined system	X	X	X		
All	2002	V70(00-)	D5244T2	Fuel system/combined system	X	X	X		
All	2002	V70(00-)	AW50/51AWD	Transmission Control Module(TCM)	X	X	X		
All	2002	V70(00-)	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X		
All	2002	V70(00-)	AW50/51AWD	Differential Electronic Module(DEM)	X	X	X		
All	2002	V70(00-)		Anti-brake System Module(ABS/BCM)	X	X	X		
All	2002	V70(00-)		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2002	V70(00-)		Climate Control Module(CCM)	X	X	X		
All	2002	V70(00-)		Combustion Preheater Module(CPM)	X	X	X		
All	2002	V70(00-)		Driver Door Module(DDM)	X	X	X		
All	2002	V70(00-)		Passenger Door Module(PDM)	X	X	X		
All	2002	V70(00-)		Power Seat Module(PSM)	X	X	X		
All	2002	V70(00-)		Supplemental Restraint System Module(SRS)	X	X			1.Calibrating the occupant weight sensor(OWS)
All	2002	V70(00-)		Accessory Electronic Module(AEM)	X	X	X		
All	2002	V70(00-)		Audio Module(AUM)	X	X	X		
All	2002	V70(00-)		Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2002	V70(00-)		Driver Information Module(DIM)	X	X	X		
All	2002	V70(00-)		Phone Module(PHM)	X	X	X		
All	2002	V70(00-)		Rear Electronic Module(REM)	X	X	X		
All	2002	V70(00-)		Road Traffic Information Module(RTI)	X	X			
All	2002	V70(00-)		Upper Electronic Module(UEM)	X	X	X		
All	2002	V70(00-)		Steering Wheel Module(SWM)	X	X	X		
All	2003	V70(00-)		Resetting the service reminder indicator(SRI)					X
All	2003	V70(00-)	B5204T5	Engine Control Module(ECM)	X	X	X		
All	2003	V70(00-)	B5234T3	Engine Control Module(ECM)	X	X	X		
All	2003	V70(00-)	B5234T7	Engine Control Module(ECM)	X	X	X		
All	2003	V70(00-)	B5244S	Engine Control Module(ECM)	X	X	X		
All	2003	V70(00-)	B5244S2	Engine Control Module(ECM)	X	X	X		
All	2003	V70(00-)	B5244SG	Engine Control Module(ECM)	X	X	X		
All	2003	V70(00-)	B5244SG2	Engine Control Module(ECM)	X	X	X		

All	2003	V70(00-)	B5244T3	Engine Control Module(ECM)	X	X	X		
All	2003	V70(00-)	B5254T2	Engine Control Module(ECM)	X	X	X		
All	2003	V70(00-)	D5244T	Fuel system/combined system	X	X	X		
All	2003	V70(00-)	D5244T2	Fuel system/combined system	X	X	X		
All	2003	V70(00-)	AW50/51AWD	Transmission Control Module(TCM)	X	X	X		
All	2003	V70(00-)	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X		
All	2003	V70(00-)	AW50/51AWD	Differential Electronic Module(DEM)	X	X	X		
All	2003	V70(00-)		Anti-brake System Module(ABS/BCM)	X	X	X		
All	2003	V70(00-)		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2003	V70(00-)		Climate Control Module(CCM)	X	X	X		
All	2003	V70(00-)		Combustion Preheater Module(CPM)	X	X	X		
All	2003	V70(00-)		Driver Door Module(DDM)	X	X	X		
All	2003	V70(00-)		Passenger Door Module(PDM)	X	X	X		
All	2003	V70(00-)		Power Seat Module(PSM)	X	X	X		
All	2003	V70(00-)		Supplemental Restraint System Module(SRS)	X	X		1.Calibrating the occupant weight sensor(OWS)	
All	2003	V70(00-)		Accessory Electronic Module(AEM)	X	X	X		
All	2003	V70(00-)		Audio Module(AUM)	X	X	X		
All	2003	V70(00-)		Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2003	V70(00-)		Driver Information Module(DIM)	X	X	X		
All	2003	V70(00-)		Phone Module(PHM)	X	X	X		
All	2003	V70(00-)		Rear Electronic Module(REM)	X	X	X		
All	2003	V70(00-)		Road Traffic Information Module(RTI)	X	X			
All	2003	V70(00-)		Upper Electronic Module(UEM)	X	X	X		
All	2003	V70(00-)		Steering Wheel Module(SWM)	X	X	X		
All	2004	V70(00-)		Resetting the service reminder indicator(SRI)				X	
All	2004	V70(00-)	B5204T5	Engine Control Module(ECM)	X	X	X		
All	2004	V70(00-)	B5234T3	Engine Control Module(ECM)	X	X	X		
All	2004	V70(00-)	B5234T7	Engine Control Module(ECM)	X	X	X		
All	2004	V70(00-)	B5244S	Engine Control Module(ECM)	X	X	X		
All	2004	V70(00-)	B5244S2	Engine Control Module(ECM)	X	X	X		
All	2004	V70(00-)	B5244SG	Engine Control Module(ECM)	X	X	X		
All	2004	V70(00-)	B5244SG2	Engine Control Module(ECM)	X	X	X		
All	2004	V70(00-)	B5254T2	Engine Control Module(ECM)	X	X	X		
All	2004	V70(00-)	B5254T4	Engine Control Module(ECM)	X	X	X		
All	2004	V70(00-)	D5244T	Fuel system/combined system	X	X	X		
All	2004	V70(00-)	D5244T2	Fuel system/combined system	X	X	X		
All	2004	V70(00-)	D5244T3	Fuel system/combined system	X	X	X		
All	2004	V70(00-)	AW50/51AWD	Transmission Control Module(TCM)	X	X	X		
All	2004	V70(00-)	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X		
All	2004	V70(00-)	AW50/51AWD	Differential Electronic Module(DEM)	X	X	X		

All	2004	V70(00-)	M66AWD	Differential Electronic Module(DEM)	X	X	X		
All	2004	V70(00-)		Anti-brake System Module(ABS/BCM)	X	X	X		
All	2004	V70(00-)		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2004	V70(00-)		Climate Control Module(CCM)	X	X	X		
All	2004	V70(00-)		Combustion Preheater Module(CPM)	X	X	X		
All	2004	V70(00-)		Driver Door Module(DDM)	X	X	X		
All	2004	V70(00-)		Passenger Door Module(PDM)	X	X	X		
All	2004	V70(00-)		Power Seat Module(PSM)	X	X	X		
All	2004	V70(00-)		Supplemental Restraint System Module(SRS)	X	X			1.Calibrating the occupant weight sensor(OWS)
All	2004	V70(00-)		Accessory Electronic Module(AEM)	X	X	X		
All	2004	V70(00-)		Audio Module(AUM)	X	X	X		
All	2004	V70(00-)		Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2004	V70(00-)		Driver Information Module(DIM)	X	X	X		
All	2004	V70(00-)		Phone Module(PHM)	X	X	X		
All	2004	V70(00-)		Rear Electronic Module(REM)	X	X	X		
All	2004	V70(00-)		Road Traffic Information Module(RTI)	X	X			
All	2004	V70(00-)		Upper Electronic Module(UEM)	X	X	X		
All	2004	V70(00-)		Steering Wheel Module(SWM)	X	X	X		
All	2004	V70(00-)		Suspension Module(SUM)	X	X	X		
All	2005	V70(00-)		Resetting the service reminder indicator(SRI)					X
All	2005	V70(00-)	B5204T5	Engine Control Module(ECM)	X	X	X		
All	2005	V70(00-)	B5244S	Engine Control Module(ECM)	X	X	X		
All	2005	V70(00-)	B5244S2	Engine Control Module(ECM)	X	X	X		
All	2005	V70(00-)	B5244SG	Engine Control Module(ECM)	X	X	X		
All	2005	V70(00-)	B5244SG2	Engine Control Module(ECM)	X	X	X		
All	2005	V70(00-)	B5244T4	Engine Control Module(ECM)	X	X	X		
All	2005	V70(00-)	B5244T5	Engine Control Module(ECM)	X	X	X		
All	2005	V70(00-)	B5254T2	Engine Control Module(ECM)	X	X	X		
All	2005	V70(00-)	B5254T4	Engine Control Module(ECM)	X	X	X		
All	2005	V70(00-)	D5244T	Fuel system/combined system	X	X	X		
All	2005	V70(00-)	D5244T2	Fuel system/combined system	X	X	X		
All	2005	V70(00-)	D5244T3	Fuel system/combined system	X	X	X		
All	2005	V70(00-)	AW50/51AWD	Transmission Control Module(TCM)	X	X	X		
All	2005	V70(00-)	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X		
All	2005	V70(00-)	AW50/51AWD	Differential Electronic Module(DEM)	X	X	X		
All	2005	V70(00-)	M66AWD	Differential Electronic Module(DEM)	X	X	X		
All	2005	V70(00-)		Anti-brake System Module(ABS/BCM)	X	X	X		
All	2005	V70(00-)		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2005	V70(00-)		Climate Control Module(CCM)	X	X	X		
All	2005	V70(00-)		Combustion Preheater Module(CPM)	X	X	X		

All	2005	V70(00-)		Driver Door Module(DDM)	X	X	X		
All	2005	V70(00-)		Passenger Door Module(PDM)	X	X	X		
All	2005	V70(00-)		Power Seat Module(PSM)	X	X	X		
All	2005	V70(00-)		Supplemental Restraint System Module(SRS)	X	X			1.Calibrating the occupant weight sensor(OWS)
All	2005	V70(00-)		Accessory Electronic Module(AEM)	X	X	X		
All	2005	V70(00-)		Audio Module(AUM)	X	X	X		
All	2005	V70(00-)		Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2005	V70(00-)		Driver Information Module(DIM)	X	X	X		
All	2005	V70(00-)		Phone Module(PHM)	X	X	X		
All	2005	V70(00-)		Rear Electronic Module(REM)	X	X	X		
All	2005	V70(00-)		Road Traffic Information Module(RTI)	X	X			
All	2005	V70(00-)		Upper Electronic Module(UEM)	X	X	X		
All	2005	V70(00-)		Suspension Module(SUM)	X	X	X		
All	2006	V70(00-)		Resetting the service reminder indicator(SRI)					X
All	2006	V70(00-)	B5204T5	Engine Control Module(ECM)	X	X	X		
All	2006	V70(00-)	B5244S	Engine Control Module(ECM)	X	X	X		
All	2006	V70(00-)	B5244S2	Engine Control Module(ECM)	X	X	X		
All	2006	V70(00-)	B5244SG	Engine Control Module(ECM)	X	X	X		
All	2006	V70(00-)	B5244SG2	Engine Control Module(ECM)	X	X	X		
All	2006	V70(00-)	B5244T4	Engine Control Module(ECM)	X	X	X		
All	2006	V70(00-)	B5244T5	Engine Control Module(ECM)	X	X	X		
All	2006	V70(00-)	B5254T2	Engine Control Module(ECM)	X	X	X		
All	2006	V70(00-)	B5254T4	Engine Control Module(ECM)	X	X	X		
All	2006	V70(00-)	D5244T	Fuel system/combined system	X	X	X		
All	2006	V70(00-)	D5244T2	Fuel system/combined system	X	X	X		
All	2006	V70(00-)	D5244T3	Fuel system/combined system	X	X	X		
All	2006	V70(00-)	D5244T4	Fuel system/combined system	X	X	X	X	1.Resetting counter oil
All	2006	V70(00-)	AW50/51AWD	Transmission Control Module(TCM)	X	X	X		
All	2006	V70(00-)	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X		
All	2006	V70(00-)	AW50/51AWD	Differential Electronic Module(DEM)	X	X	X		
All	2006	V70(00-)	M66AWD	Differential Electronic Module(DEM)	X	X	X		
All	2006	V70(00-)		Anti-brake System Module(ABS/BCM)	X	X	X		
All	2006	V70(00-)		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2006	V70(00-)		Climate Control Module(CCM)	X	X	X		
All	2006	V70(00-)		Combustion Preheater Module(CPM)	X	X	X		
All	2006	V70(00-)		Driver Door Module(DDM)	X	X	X		
All	2006	V70(00-)		Passenger Door Module(PDM)	X	X	X		
All	2006	V70(00-)		Power Seat Module(PSM)	X	X	X		
All	2006	V70(00-)		Supplemental Restraint System Module(SRS)	X	X			1.Calibrating the occupant weight sensor(OWS)
All	2006	V70(00-)		Accessory Electronic Module(AEM)	X	X	X		

All	2006	V70(00-)		Audio Module(AUM)	X	X	X		
All	2006	V70(00-)		Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2006	V70(00-)		Driver Information Module(DIM)	X	X	X		
All	2006	V70(00-)		Phone Module(PHM)	X	X	X		
All	2006	V70(00-)		Rear Electronic Module(REM)	X	X	X		
All	2006	V70(00-)		Road Traffic Information Module(RTI)	X	X			
All	2006	V70(00-)		Upper Electronic Module(UEM)	X	X	X		
All	2006	V70(00-)		Suspension Module(SUM)	X	X	X		
All	2007	V70(00-)		Resetting the service reminder indicator(SRI)				X	
All	2007	V70(00-)	B5204T5	Engine Control Module(ECM)	X	X	X		
All	2007	V70(00-)	B5244S	Engine Control Module(ECM)	X	X	X		
All	2007	V70(00-)	B5244S2	Engine Control Module(ECM)	X	X	X		
All	2007	V70(00-)	B5244SG	Engine Control Module(ECM)	X	X	X		
All	2007	V70(00-)	B5244SG2	Engine Control Module(ECM)	X	X	X		
All	2007	V70(00-)	B5244T4	Engine Control Module(ECM)	X	X	X		
All	2007	V70(00-)	B5244T5	Engine Control Module(ECM)	X	X	X		
All	2007	V70(00-)	B5254T2	Engine Control Module(ECM)	X	X	X		
All	2007	V70(00-)	B5254T4	Engine Control Module(ECM)	X	X	X		
All	2007	V70(00-)	D5244T	Fuel system/combined system	X	X	X		
All	2007	V70(00-)	D5244T2	Fuel system/combined system	X	X	X		
All	2007	V70(00-)	D5244T3	Fuel system/combined system	X	X	X		
All	2007	V70(00-)	AW50/51AWD	Transmission Control Module(TCM)	X	X	X		
All	2007	V70(00-)	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X		
All	2007	V70(00-)	AW50/51AWD	Differential Electronic Module(DEM)	X	X	X		
All	2007	V70(00-)	M66AWD	Differential Electronic Module(DEM)	X	X	X		
All	2007	V70(00-)		Anti-brake System Module(ABS/BCM)	X	X	X		
All	2007	V70(00-)		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2007	V70(00-)		Climate Control Module(CCM)	X	X	X		
All	2007	V70(00-)		Combustion Preheater Module(CPM)	X	X	X		
All	2007	V70(00-)		Driver Door Module(DDM)	X	X	X		
All	2007	V70(00-)		Passenger Door Module(PDM)	X	X	X		
All	2007	V70(00-)		Power Seat Module(PSM)	X	X	X		
All	2007	V70(00-)		Supplemental Restraint System Module(SRS)	X	X			1.Calibrating the occupant weight sensor(OWS)
All	2007	V70(00-)		Accessory Electronic Module(AEM)	X	X	X		
All	2007	V70(00-)		Audio Module(AUM)	X	X	X		
All	2007	V70(00-)		Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2007	V70(00-)		Driver Information Module(DIM)	X	X	X		

All	2007	V70(00-)		Phone Module(PHM)	X	X	X		
All	2007	V70(00-)		Rear Electronic Module(REM)	X	X	X		
All	2007	V70(00-)		Road Traffic Information Module(RTI)	X	X			
All	2007	V70(00-)		Upper Electronic Module(UEM)	X	X	X		
All	2007	V70(00-)		Suspension Module(SUM)	X	X	X		
All	2008	V70(00-)		Resetting the service reminder indicator(SRI)				X	
All	2008	V70(00-)	B5204T5	Engine Control Module(ECM)	X	X	X		
All	2008	V70(00-)	B5244S	Engine Control Module(ECM)	X	X	X		
All	2008	V70(00-)	B5244S2	Engine Control Module(ECM)	X	X	X		
All	2008	V70(00-)	B5244SG	Engine Control Module(ECM)	X	X	X		
All	2008	V70(00-)	B5244SG2	Engine Control Module(ECM)	X	X	X		
All	2008	V70(00-)	B5244T4	Engine Control Module(ECM)	X	X	X		
All	2008	V70(00-)	B5244T5	Engine Control Module(ECM)	X	X	X		
All	2008	V70(00-)	B5254T2	Engine Control Module(ECM)	X	X	X		
All	2008	V70(00-)	B5254T4	Engine Control Module(ECM)	X	X	X		
All	2008	V70(00-)	D5244T	Fuel system/combined system	X	X	X		
All	2008	V70(00-)	D5244T2	Fuel system/combined system	X	X	X		
All	2008	V70(00-)	D5244T3	Fuel system/combined system	X	X	X		
All	2008	V70(00-)	AW50/51AWD	Transmission Control Module(TCM)	X	X	X		
All	2008	V70(00-)	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X		
All	2008	V70(00-)	AW50/51AWD	Differential Electronic Module(DEM)	X	X	X		
All	2008	V70(00-)	M66AWD	Differential Electronic Module(DEM)	X	X	X		
All	2008	V70(00-)		Anti-brake System Module(ABS/BCM)	X	X	X		
All	2008	V70(00-)		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2008	V70(00-)		Climate Control Module(CCM)	X	X	X		
All	2008	V70(00-)		Combustion Preheater Module(CPM)	X	X	X		
All	2008	V70(00-)		Driver Door Module(DDM)	X	X	X		
All	2008	V70(00-)		Passenger Door Module(PDM)	X	X	X		
All	2008	V70(00-)		Power Seat Module(PSM)	X	X	X		
All	2008	V70(00-)		Supplemental Restraint System Module(SRS)	X	X			1.Calibrating the occupant weight sensor(OWS)
All	2008	V70(00-)		Accessory Electronic Module(AEM)	X	X	X		
All	2008	V70(00-)		Audio Module(AUM)	X	X	X		
All	2008	V70(00-)		Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2008	V70(00-)		Driver Information Module(DIM)	X	X	X		
All	2008	V70(00-)		Phone Module(PHM)	X	X	X		
All	2008	V70(00-)		Rear Electronic Module(REM)	X	X	X		
All	2008	V70(00-)		Road Traffic Information Module(RTI)	X	X			
All	2008	V70(00-)		Upper Electronic Module(UEM)	X	X	X		
All	2008	V70(00-)		Suspension Module(SUM)	X	X	X		
All	2009	V70(00-)		Resetting the service reminder indicator(SRI)				X	

All	2009	V70(00-)	B5204T5	Engine Control Module(ECM)	X	X	X		
All	2009	V70(00-)	B5244S	Engine Control Module(ECM)	X	X	X		
All	2009	V70(00-)	B5244S2	Engine Control Module(ECM)	X	X	X		
All	2009	V70(00-)	B5244SG	Engine Control Module(ECM)	X	X	X		
All	2009	V70(00-)	B5244SG2	Engine Control Module(ECM)	X	X	X		
All	2009	V70(00-)	B5244T4	Engine Control Module(ECM)	X	X	X		
All	2009	V70(00-)	B5244T5	Engine Control Module(ECM)	X	X	X		
All	2009	V70(00-)	B5254T2	Engine Control Module(ECM)	X	X	X		
All	2009	V70(00-)	B5254T4	Engine Control Module(ECM)	X	X	X		
All	2009	V70(00-)	D5244T	Fuel system/combined system	X	X	X		
All	2009	V70(00-)	D5244T2	Fuel system/combined system	X	X	X		
All	2009	V70(00-)	D5244T3	Fuel system/combined system	X	X	X		
All	2009	V70(00-)	AW50/51AWD	Transmission Control Module(TCM)	X	X	X		
All	2009	V70(00-)	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X		
All	2009	V70(00-)	AW50/51AWD	Differential Electronic Module(DEM)	X	X	X		
All	2009	V70(00-)	M66AWD	Differential Electronic Module(DEM)	X	X	X		
All	2009	V70(00-)		Anti-brake System Module(ABS/BCM)	X	X	X		
All	2009	V70(00-)		Steering Wheel Angle Sensor Module(SAS)	x	x	x		
All	2009	V70(00-)		Climate Control Module(CCM)	X	X	X		
All	2009	V70(00-)		Combustion Preheater Module(CPM)	X	X	X		
All	2009	V70(00-)		Driver Door Module(DDM)	X	X	X		
All	2009	V70(00-)		Passenger Door Module(PDM)	X	X	X		
All	2009	V70(00-)		Power Seat Module(PSM)	X	X	X		
All	2009	V70(00-)		Supplemental Restraint System Module(SRS)	x	x	x		
All	2009	V70(00-)		Power Operated Tailgate (POT)	x	x	x		
All	2009	V70(00-)		Infotainment Control Module(ICM)	x	x	x		
All	2009	V70(00-)		Integrated Audio Module(IAM)	x	x			
All	2009	V70(00-)		Accessory Electronic Module(AEM)	X	X	X		
All	2009	V70(00-)		Audio Module(AUM)	X	X	X		
All	2009	V70(00-)		Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2009	V70(00-)		Driver Information Module(DIM)	X	X	X		
All	2009	V70(00-)		Phone Module(PHM)	X	X	X		
All	2009	V70(00-)		Rear Electronic Module(REM)	X	X	X		
All	2009	V70(00-)		Road Traffic Information Module(RTI)	X	X			
All	2009	V70(00-)		Upper Electronic Module(UEM)	X	X	X		
All	2009	V70(00-)		Suspension Module(SUM)	X	X	X		
All	2010	V70(00-)		Additive Dosing Module(ADM)	X	X	X		
All	2010	V70(00-)	B4204T2	Fuel System/ Combined System	X	X	X		
All	2010	V70(00-)	D4164T	Fuel System/ Combined System	X	X	X		
All	2010	V70(00-)	B4204S3	Fuel System/ Combined System	X	X	X		

All	2010	V70(00-)	D4204T	Fuel System/ Combined System	X	X	X		
All	2010	V70(00-)	B5254T6	Fuel System/ Combined System	X	X	X		
All	2010	V70(00-)	B6324S	Fuel System/ Combined System	X	X	X		
All	2010	V70(00-)	D5244T4	Fuel System/ Combined System	X	X	X		
All	2010	V70(00-)	D5244T5	Fuel System/ Combined System	X	X	X		
All	2010	V70(00-)	B4204S4	Fuel System/ Combined System	X	X	X		
All	2010	V70(00-)	B5254T8	Fuel System/ Combined System	X	X	X		
All	2010	V70(00-)	D5244T10	Fuel System/ Combined System	X	X	X		
All	2010	V70(00-)	B4204T6	Fuel System/ Combined System	X	X	X		
All	2010	V70(00-)	D5244T14	Fuel System/ Combined System	X	X	X		
All	2010	V70(00-)	B4204S7	Fuel System/ Combined System	X	X	X		
All	2010	V70(00-)	B5254T10	Fuel System/ Combined System	X	X	X		
All	2010	V70(00-)	B5254T11	Fuel System/ Combined System	X	X	X		
All	2010	V70(00-)	D5244T19	Fuel System/ Combined System	X	X	X		
All	2010	V70(00-)	B6304T2	Fuel System/ Combined System	X	X	X		
All	2010	V70(00-)		Central Electronic Module(CEM)	X	X	X	X	
All	2010	V70(00-)		Keyless vehicle module (KVM)	X	X	X		
All	2010	V70(00-)		Audio Module(AUM)	X	X	X		
All	2010	V70(00-)		Headlamp Control Module(HCM)	X	X	X		
All	2010	V70(00-)		High level Display Front(HLDF)	X	X	X		
All	2010	V70(00-)		Park Assist Module (PAM)	X	X	X		
All	2010	V70(00-)		Power Operated Tailgate (POT)	X	X	X		
All	2010	V70(00-)		Forward Sensing Module(FSM)	X	X	X		
All	2010	V70(00-)		Parking Assistance Camera(PAC)	X	X	X		
All	2010	V70(00-)		Phone Module(PHM)	X	X	X		
All	2010	V70(00-)		Infotainment Control Module(ICM)	X	X	X		
All	2010	V70(00-)		Driver Information Module(DIM)	X	X	X		
All	2010	V70(00-)		Power Steering Control Module(PSCM)	X	X	X		
All	2010	V70(00-)	MPS6	Transmission Control Module(TCM)	X	X	X		
All	2010	V70(00-)	M66AWD	Differential Electronic Module(DEM)	X	X	X		
All	2010	V70(00-)	TF-80SC AWD	Differential Electronic Module(DEM)	X	X	X		
All	2010	V70(00-)		Brake Control Module (BCM)	X	X	X		
All	2010	V70(00-)		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2010	V70(00-)		Park Brake Module(PBM)	X	X	X		
All	2010	V70(00-)		Driver Door Module(DDM)	X	X	X		
All	2010	V70(00-)		Passenger Door Module(PDM)	X	X	X		
All	2010	V70(00-)		Combustion Preheater Module(CPM)	X	X	X		
All	2010	V70(00-)		Trailer Module (TRM)	X	X	X		
All	2010	V70(00-)		Power Seat Module(PSM)	X	X	X		
All	2010	V70(00-)		Supplemental Restraint System Module(SRS)	X	X	X		
All	2010	V70(00-)		Climate Control Module(CCM)	X	X	X		
All	1998	V70XC(-00)		Resetting the service reminder indicator(SRI)					X
All	1998	V70XC(-00)	B5204T3	Fuel System/ Combined System	X	X	X		

All	1998	V70XC(-00)	B5254T	Fuel System/ Combined System	X	X	X		
All	1998	V70XC(-00)	AW42AWD	Transmission Control Module(TCM)	X	X	X		
All	1998	V70XC(-00)		Anti-brake System Module(ABS/BCM)	X	X	X		
All	1998	V70XC(-00)		Climate Control Module(CCM)	X	X	X		
All	1998	V70XC(-00)		Supplemental Restraint System Module(SRS)	X	X	X		
All	1998	V70XC(-00)		Power Seat Module,Left(PSL)	X	X	X	X	
All	1998	V70XC(-00)		Road Traffic Information Module(RTI)	X	X	X	X	
All	1998	V70XC(-00)		Immobilizer	X	X	X	X	
All	1999	V70XC(-00)		Resetting the service reminder indicator(SRI)					X
All	1999	V70XC(-00)	B5204T3	Fuel System/ Combined System	X	X	X		
All	1999	V70XC(-00)	B5254T	Fuel System/ Combined System	X	X	X		
All	1999	V70XC(-00)	AW42AWD	Transmission Control Module(TCM)	X	X	X		
All	1999	V70XC(-00)		Anti-brake System Module(ABS/BCM)	X	X	X		
All	1999	V70XC(-00)		Climate Control Module(CCM)	X	X	X		
All	1999	V70XC(-00)		Combustion Preheater Module(CPM)	X	X	X	X	
All	1999	V70XC(-00)		Supplemental Restraint System Module(SRS)	X	X	X		
All	1999	V70XC(-00)		Power Seat Module,Left(PSL)	X	X	X	X	
All	1999	V70XC(-00)		Power Seat Module,Right(PSR)	X	X	X	X	
All	1999	V70XC(-00)		Road Traffic Information Module(RTI)	X	X	X	X	
All	1999	V70XC(-00)		Immobilizer	X	X	X	X	
All	1999	V70XC(-00)		Lock and alarm	X	X	X	X	
All	2000	V70XC(-00)		Resetting the service reminder indicator(SRI)					X
All	2000	V70XC(-00)	B5244T	Fuel System/ Combined System	X	X	X		
All	2000	V70XC(-00)	AW42AWD	Transmission Control Module(TCM)	X	X	X		
All	2000	V70XC(-00)		Anti-brake System Module(ABS/BCM)	X	X	X		
All	2000	V70XC(-00)		Climate Control Module(CCM)	X	X	X		
All	2000	V70XC(-00)		Combustion Preheater Module(CPM)	X	X	X	X	
All	2000	V70XC(-00)		Supplemental Restraint System Module(SRS)	X	X	X		
All	2000	V70XC(-00)		Power Seat Module,Left(PSL)	X	X	X	X	
All	2000	V70XC(-00)		Power Seat Module,Right(PSR)	X	X	X	X	
All	2000	V70XC(-00)		Road Traffic Information Module(RTI)	X	X	X	X	
All	2000	V70XC(-00)		Immobilizer	X	X	X	X	
All	2000	V70XC(-00)		Lock and alarm	X	X	X	X	
All	2001	V70XC(01-)/XC70		Resetting the service reminder indicator(SRI)					X
All	2001	V70XC(01-)	B5234T7	Engine Control Module(ECM)	X	X	X		
All	2001	V70XC(01-)	B5244T3	Engine Control Module(ECM)	X	X	X		
All	2001	V70XC(01-)	AW50/51AWD	Transmission Control Module(TCM)	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
All	2001	V70XC(01-)	AW50/51AWD	Differential Electronic Module(DEM)	X	X	X		
All	2001	V70XC(01-)/XC70		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
All	2001	V70XC(01-)/XC70		Steering Wheel Angle Sensor Module(SAS)	X	X	X		

All	2001	V70XC(01-)/XC70	Climate Control Module(CCM)	X	X	X		1.Adjusting ECC parameters
All	2001	V70XC(01-)/XC70	Combustion Preheater Module(CPM)	X	X	X	X	
All	2001	V70XC(01-)/XC70	Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
All	2001	V70XC(01-)/XC70	Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2001	V70XC(01-)/XC70	Power Seat Module(PSM)	X	X	X	X	1.Programming the remote control setting
All	2001	V70XC(01-)/XC70	Supplemental Restraint System Module(SRS)	X	X	X		1.Calibrating the occupant weight sensor(OWS)
All	2001	V70XC(01-)/XC70	Accessory Electronic Module(AEM)	X	X	X		
All	2001	V70XC(01-)/XC70	Audio Module(AUM)	X	X			
All	2001	V70XC(01-)/XC70	Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2001	V70XC(01-)/XC70	Driver Information Module(DIM)	X	X	X	X	1.Resetting all needles and lamps in the dashboard 2.Programming the dirver information module(DIM)
All	2001	V70XC(01-)/XC70	Phone Module(PHM)	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
All	2001	V70XC(01-)/XC70	Rear Electronic Module(REM)	X	X	X		
All	2001	V70XC(01-)/XC70	Road Traffic Information Module(RTI)	X	X			
All	2001	V70XC(01-)/XC70	Steering Wheel Module(SWM)	X	X	X		
All	2001	V70XC(01-)/XC70	Upper Electronic Module(UEM)	X	X	X	X	
All	2002	V70XC(01-)/XC70	Resetting the service reminder indicator(SRI)					X
All	2002	V70XC(01-)/B5234T7	Engine Control Module(ECM)	X	X	X		
All	2002	V70XC(01-)/B5244T3	Engine Control Module(ECM)	X	X	X		
All	2002	V70XC(01-)/AW50/51AWD	Transmission Control Module(TCM)	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
All	2002	V70XC(01-)/AW50/51AWD	Differential Electronic Module(DEM)	X	X	X		
All	2002	V70XC(01-)/XC70	Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
All	2002	V70XC(01-)/XC70	Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2002	V70XC(01-)/XC70	Climate Control Module(CCM)	X	X	X		1.Adjusting ECC parameters
All	2002	V70XC(01-)/XC70	Combustion Preheater Module(CPM)	X	X	X	X	
All	2002	V70XC(01-)/XC70	Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
All	2002	V70XC(01-)/XC70	Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2002	V70XC(01-)/XC70	Power Seat Module(PSM)	X	X	X	X	1.Programming the remote control setting
All	2002	V70XC(01-)/XC70	Supplemental Restraint System Module(SRS)	X	X	X		1.Calibrating the occupant weight sensor(OWS)
All	2002	V70XC(01-)/XC70	Accessory Electronic Module(AEM)	X	X	X		
All	2002	V70XC(01-)/XC70	Audio Module(AUM)	X	X			

All	2002	V70XC(01-)/XC70	Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2002	V70XC(01-)/XC70	Driver Information Module(DIM)	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
All	2002	V70XC(01-)/XC70	Phone Module(PHM)	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
All	2002	V70XC(01-)/XC70	Rear Electronic Module(REM)	X	X	X		
All	2002	V70XC(01-)/XC70	Road Traffic Information Module(RTI)	X	X			
All	2002	V70XC(01-)/XC70	Steering Wheel Module(SWM)	X	X	X		
All	2002	V70XC(01-)/XC70	Upper Electronic Module(UEM)	X	X	X	X	
All	2003	V70XC(01-)/XC70	Resetting the service reminder indicator(SRI)					X
All	2003	V70XC(01-)/B5234T7	Engine Control Module(ECM)	X	X	X		
All	2003	V70XC(01-)/B5254T2	Engine Control Module(ECM)	X	X	X		
All	2003	V70XC(01-)/D5244T	Fuel system/combined system	X	X	X		
All	2003	V70XC(01-)/AW50/51AWD	Transmission Control Module(TCM)	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
All	2003	V70XC(01-)/AW50/51AWD	Differential Electronic Module(DEM)	X	X	X		
All	2003	V70XC(01-)/XC70	Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
All	2003	V70XC(01-)/XC70	Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2003	V70XC(01-)/XC70	Climate Control Module(CCM)	X	X	X		1.Adjusting ECC parameters
All	2003	V70XC(01-)/XC70	Combustion Preheater Module(CPM)	X	X	X	X	
All	2003	V70XC(01-)/XC70	Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
All	2003	V70XC(01-)/XC70	Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2003	V70XC(01-)/XC70	Power Seat Module(PSM)	X	X	X	X	1.Programming the remote control setting
All	2003	V70XC(01-)/XC70	Supplemental Restraint System Module(SRS)	X	X	X		1.Calibrating the occupant weight sensor(OWS)
All	2003	V70XC(01-)/XC70	Accessory Electronic Module(AEM)	X	X	X		
All	2003	V70XC(01-)/XC70	Audio Module(AUM)	X	X			
All	2003	V70XC(01-)/XC70	Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2003	V70XC(01-)/XC70	Driver Information Module(DIM)	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)

All	2003	V70XC(01-)/XC70	Phone Module(PHM)	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
All	2003	V70XC(01-)/XC70	Rear Electronic Module(REM)	X	X	X		
All	2003	V70XC(01-)/XC70	Road Traffic Information Module(RTI)	X	X			
All	2003	V70XC(01-)/XC70	Steering Wheel Module(SWM)	X	X	X		
All	2003	V70XC(01-)/XC70	Upper Electronic Module(UEM)	X	X	X	X	
All	2004	V70XC(01-)/XC70	Resetting the service reminder indicator(SRI)					X
All	2004	V70XC(01-)/B5234T7	Engine Control Module(ECM)	X	X	X		
All	2004	V70XC(01-)/B5254T2	Engine Control Module(ECM)	X	X	X		
All	2004	V70XC(01-)/D5244T	Fuel system/combined system	X	X	X		
All	2004	V70XC(01-)/AW50/51AWD	Transmission Control Module(TCM)	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
All	2004	V70XC(01-)/AW50/51AWD	Differential Electronic Module(DEM)	X	X	X		
All	2004	V70XC(01-)/XC70	Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
All	2004	V70XC(01-)/XC70	Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2004	V70XC(01-)/XC70	Climate Control Module(CCM)	X	X	X		1.Adjusting ECC parameters
All	2004	V70XC(01-)/XC70	Combustion Preheater Module(CPM)	X	X	X	X	
All	2004	V70XC(01-)/XC70	Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
All	2004	V70XC(01-)/XC70	Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2004	V70XC(01-)/XC70	Power Seat Module(PSM)	X	X	X	X	1.Programming the remote control setting
All	2004	V70XC(01-)/XC70	Supplemental Restraint System Module(SRS)	X	X	X		1.Calibrating the occupant weight sensor(DWC)
All	2004	V70XC(01-)/XC70	Accessory Electronic Module(AEM)	X	X	X		
All	2004	V70XC(01-)/XC70	Audio Module(AUM)	X	X			
All	2004	V70XC(01-)/XC70	Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2004	V70XC(01-)/XC70	Driver Information Module(DIM)	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
All	2004	V70XC(01-)/XC70	Phone Module(PHM)	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
All	2004	V70XC(01-)/XC70	Rear Electronic Module(REM)	X	X	X		
All	2004	V70XC(01-)/XC70	Road Traffic Information Module(RTI)	X	X			
All	2004	V70XC(01-)/XC70	Steering Wheel Module(SWM)	X	X	X		
All	2004	V70XC(01-)/XC70	Upper Electronic Module(UEM)	X	X	X	X	
All	2005	V70XC(01-)/XC70	Resetting the service reminder indicator(SRI)					X
All	2005	V70XC(01-)/B5244T4	Engine Control Module(ECM)	X	X	X		

All	2005	V70XC(01-)	B5254T2	Engine Control Module(ECM)	X	X	X		
All	2005	V70XC(01-)	D5244T	Fuel system/combined system	X	X	X		
All	2005	V70XC(01-)	AW50/51AWD	Transmission Control Module(TCM)	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
All	2005	V70XC(01-)	AW50/51AWD	Differential Electronic Module(DEM)	X	X	X		
All	2005	V70XC(01-)	M66AWD	Differential Electronic Module(DEM)	X	X	X		
All	2005	V70XC(01-)/XC70		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
All	2005	V70XC(01-)/XC70		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2005	V70XC(01-)/XC70		Climate Control Module(CCM)	X	X	X		1.Adjusting ECC parameters
All	2005	V70XC(01-)/XC70		Combustion Preheater Module(CPM)	X	X	X	X	
All	2005	V70XC(01-)/XC70		Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
All	2005	V70XC(01-)/XC70		Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2005	V70XC(01-)/XC70		Power Seat Module(PSM)	X	X	X	X	1.Programming the remote control setting
All	2005	V70XC(01-)/XC70		Supplemental Restraint System Module(SRS)	X	X	X		1.Calibrating the occupant weight sensor(OWS)
All	2005	V70XC(01-)/XC70		Accessory Electronic Module(AEM)	X	X	X		
All	2005	V70XC(01-)/XC70		Audio Module(AUM)	X	X			
All	2005	V70XC(01-)/XC70		Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2005	V70XC(01-)/XC70		Driver Information Module(DIM)	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
All	2005	V70XC(01-)/XC70		Phone Module(PHM)	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
All	2005	V70XC(01-)/XC70		Rear Electronic Module(REM)	X	X	X		
All	2005	V70XC(01-)/XC70		Road Traffic Information Module(RTI)	X	X			
All	2005	V70XC(01-)/XC70		Upper Electronic Module(UEM)	X	X	X	X	
All	2006	V70XC(01-)/XC70		Resetting the service reminder indicator(SRI)				X	
All	2006	V70XC(01-)	B5244T4	Engine Control Module(ECM)	X	X	X		
All	2006	V70XC(01-)	B5254T2	Engine Control Module(ECM)	X	X	X		
All	2006	V70XC(01-)	D5244T	Fuel system/combined system	X	X	X		
All	2006	V70XC(01-)	AW50/51AWD	Transmission Control Module(TCM)	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
All	2006	V70XC(01-)	AW50/51AWD	Differential Electronic Module(DEM)	X	X	X		
All	2006	V70XC(01-)	M66AWD	Differential Electronic Module(DEM)	X	X	X		
All	2006	V70XC(01-)/XC70		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Check brake light switch adjustment 2.Calibration

All	2006	V70XC(01-)/XC70	Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2006	V70XC(01-)/XC70	Climate Control Module(CCM)	X	X	X		1.Adjusting ECC parameters
All	2006	V70XC(01-)/XC70	Combustion Preheater Module(CPM)	X	X	X	X	
All	2006	V70XC(01-)/XC70	Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
All	2006	V70XC(01-)/XC70	Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2006	V70XC(01-)/XC70	Power Seat Module(PSM)	X	X	X	X	1.Programming the remote control setting
All	2006	V70XC(01-)/XC70	Supplemental Restraint System Module(SRS)	X	X	X		1.Calibrating the occupant weight sensor(OWS)
All	2006	V70XC(01-)/XC70	Accessory Electronic Module(AEM)	X	X	X		
All	2006	V70XC(01-)/XC70	Audio Module(AUM)	X	X			
All	2006	V70XC(01-)/XC70	Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2006	V70XC(01-)/XC70	Driver Information Module(DIM)	X	X	X	X	1.Resetting all needles and lamps in the dashboard 2.Programming the driver information module(DIM)
All	2006	V70XC(01-)/XC70	Phone Module(PHM)	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
All	2006	V70XC(01-)/XC70	Rear Electronic Module(REM)	X	X	X		
All	2006	V70XC(01-)/XC70	Road Traffic Information Module(RTI)	X	X			
All	2006	V70XC(01-)/XC70	Upper Electronic Module(UEM)	X	X	X	X	
All	2007	V70XC(01-)/XC70	Resetting the service reminder indicator(SRI)					X
All	2007	V70XC(01-)/B5244T4	Engine Control Module(ECM)	X	X	X		
All	2007	V70XC(01-)/B5254T2	Engine Control Module(ECM)	X	X	X		
All	2007	V70XC(01-)/D5244T	Fuel system/combined system	X	X	X		
All	2007	V70XC(01-)/AW50/51AWD	Transmission Control Module(TCM)	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
All	2007	V70XC(01-)/AW50/51AWD	Differential Electronic Module(DEM)	X	X	X		
All	2007	V70XC(01-)/M66AWD	Differential Electronic Module(DEM)	X	X	X		
All	2007	V70XC(01-)/XC70	Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
All	2007	V70XC(01-)/XC70	Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2007	V70XC(01-)/XC70	Climate Control Module(CCM)	X	X	X		1.Adjusting ECC parameters
All	2007	V70XC(01-)/XC70	Combustion Preheater Module(CPM)	X	X	X	X	
All	2007	V70XC(01-)/XC70	Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
All	2007	V70XC(01-)/XC70	Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2007	V70XC(01-)/XC70	Power Seat Module(PSM)	X	X	X	X	1.Programming the remote control setting
All	2007	V70XC(01-)/XC70	Supplemental Restraint System Module(SRS)	X	X	X		1.Calibrating the occupant weight sensor(OWS)
All	2007	V70XC(01-)/XC70	Accessory Electronic Module(AEM)	X	X	X		

All	2007	V70XC(01-)/XC70	Audio Module(AUM)	X	X			
All	2007	V70XC(01-)/XC70	Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2007	V70XC(01-)/XC70	Driver Information Module(DIM)	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the dirver information module(DIM)
All	2007	V70XC(01-)/XC70	Phone Module(PHM)	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
All	2007	V70XC(01-)/XC70	Rear Electronic Module(REM)	X	X	X		
All	2007	V70XC(01-)/XC70	Road Traffic Information Module(RTI)	X	X			
All	2007	V70XC(01-)/XC70	Upper Electronic Module(UEM)	X	X	X	X	
All	2008	V70XC(01-)/XC70	Resetting the service reminder indicator(SRI)					X
All	2008	V70XC(01-)/B5244T4	Engine Control Module(ECM)	X	X	X		
All	2008	V70XC(01-)/B5254T2	Engine Control Module(ECM)	X	X	X		
All	2008	V70XC(01-)/D5244T	Fuel system/combined system	X	X	X		
All	2008	V70XC(01-)/AW50/51AWD	Transmission Control Module(TCM)	X	X	X	X	1.Control module adaptation 2.Resetting adaptation to zero 3.Resetting the counter for -Gearbox oil change
All	2008	V70XC(01-)/AW50/51AWD	Differential Electronic Module(DEM)	X	X	X		
All	2008	V70XC(01-)/M66AWD	Differential Electronic Module(DEM)	X	X	X		
All	2008	V70XC(01-)/XC70	Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
All	2008	V70XC(01-)/XC70	Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2008	V70XC(01-)/XC70	Climate Control Module(CCM)	X	X	X		1.Adjusting ECC parameters
All	2008	V70XC(01-)/XC70	Combustion Preheater Module(CPM)	X	X	X	X	
All	2008	V70XC(01-)/XC70	Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
All	2008	V70XC(01-)/XC70	Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2008	V70XC(01-)/XC70	Power Seat Module(PSM)	X	X	X	X	1.Programming the remote control setting
All	2008	V70XC(01-)/XC70	Supplemental Restraint System Module(SRS)	X	X	X		1.Calibrating the occupant weight sensor(OWS)
All	2008	V70XC(01-)/XC70	Accessory Electronic Module(AEM)	X	X	X		
All	2008	V70XC(01-)/XC70	Audio Module(AUM)	X	X			
All	2008	V70XC(01-)/XC70	Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2008	V70XC(01-)/XC70	Driver Information Module(DIM)	X	X	X	X	1.Testing all needles and lamps in the dashboard 2.Programming the dirver information module(DIM)

All	2008	V70XC(01-)/XC70	Phone Module(PHM)	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code	
All	2008	V70XC(01-)/XC70	Rear Electronic Module(REM)	X	X	X			
All	2008	V70XC(01-)/XC70	Road Traffic Information Module(RTI)	X	X				
All	2008	V70XC(01-)/XC70	Upper Electronic Module(UEM)	X	X	X	X		
All	2007	C30	B4184S8	Engine Control Module(ECM)	X	X	X	X	1.Resetting adaptation
All	2007	C30	B4164S3	Engine Control Module(ECM)	X	X	X	X	1.Resetting adaptation
All	2007	C30	B4184S11	Engine Control Module(ECM)	X	X	X	X	1.Resetting adaptation
All	2007	C30	B5244S4	Engine Control Module(ECM)	X	X	X	X	1.Readiness Code 2.Quick test of the fuel pump(FP) 3.Resetting adaptation
All	2007	C30	B4204S3	Engine Control Module(ECM)	X	X	X	X	1.Resetting adaptation
All	2007	C30	B5254T3	Engine Control Module(ECM)	X	X	X	X	
All	2007	C30	D4204T	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation (EGR) valve
All	2007	C30	D4164T	Engine Control Module(ECM)	X	X	X	X	
All	2007	C30	D5244T8	Engine Control Module(ECM)	X	X	X	X	
All	2007	C30	D5244T9	Engine Control Module(ECM)	X	X	X	X	
All	2007	C30	D4204T	Additive Dosing Module(ADM)	X	X	X	X	1.Refilling the feed hose with additive 2.Resetting the tank level gauge
All	2007	C30	D4164T	Additive Dosing Module(ADM)	X	X	X	X	1.Refilling the feed hose with additive 2.Resetting the tank level gauge
All	2007	C30	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	
All	2007	C30		Driver information module (DIM)	X	X	X	X	1.Resetting the service reminder indicator
All	2007	C30		Global Positioning System Module (GPS)	X	X	X		
All	2007	C30		Brake Control Module (BCM)	X	X	X		
All	2007	C30		Traffic Message Channel Module (TMC)	X	X	X		
All	2007	C30		Steering wheel module (SWM)	X	X	X		
All	2007	C30		Keyless vehicle module (KVM)	X	X	X	X	
All	2007	C30		Telephone (PHM)	X	X	X		
All	2007	C30		Multimedia module (MMM)	X	X	X	X	1.Reinstalling the reserve battery
All	2007	C30		Electric Power Steering (EPS)	X	X	X		
All	2007	C30		Park Assist Module (PAM)	X	X	X		
All	2007	C30		Audio Module(AUD)	X	X			
All	2007	C30		Airbag (SRS)	X	X	X		
All	2007	C30		Driver door module (DDM)	X	X	X	X	
All	2007	C30		Passenger door module (PDM)	X	X	X	X	
All	2007	C30		Power seat module, left (PSL)	X	X	X		
All	2007	C30		Power seat module, right (PSR)	X	X	X		

All	2007	C30		Remote Digital Audio Receiver (RDAR)	X	X	X		
All	2007	C30		Integrated Audio module (IAM)	X	X	X	X	
All	2007	C30		Trailer Module (TRM)	X	X	X		
All	2007	C30		Infotainment Control Module (ICM)	X	X	X	X	
All	2007	C30		Climate control unit (CCM)	X	X	X		
All	2007	C30		Central Electronic Module(CEM)	X	X	X	X	
All	2007	C30		Combustion preheater Module(CPM)	X	X	X	X	
All	2008	C30	B4184S8	Engine Control Module(ECM)	X	X	X	X	1.Resetting adaptation
All	2008	C30	B4164S3	Engine Control Module(ECM)	X	X	X	X	1.Resetting adaptation
All	2008	C30	B4184S11	Engine Control Module(ECM)	X	X	X	X	1.Resetting adaptation
All	2008	C30	B5244S4	Engine Control Module(ECM)	X	X	X	X	1.Readiness Code 2.Quick test of the fuel pump(FP) 3.Resetting adaptation
All	2008	C30	B4204S3	Engine Control Module(ECM)	X	X	X	X	1.Resetting adaptation
All	2008	C30	B5254T7	Engine Control Module(ECM)	X	X	X	X	
All	2008	C30	D4204T	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters 2.Resetting the adaptation values 3.Resetting the odometer particle trap 4.Adaptation of the exhaust gas recirculation (EGR) valve
All	2008	C30	D4164T	Engine Control Module(ECM)	X	X	X	X	
All	2008	C30	D5244T8	Engine Control Module(ECM)	X	X	X	X	
All	2008	C30	D5244T9	Engine Control Module(ECM)	X	X	X	X	
All	2008	C30	D5244T13	Engine Control Module(ECM)	X	X	X	X	
All	2008	C30	D4204T	Additive Dosing Module(ADM)	X	X	X	X	1.Refilling the feed hose with additive 2.Resetting the tank level gauge
All	2008	C30	D4164T	Additive Dosing Module(ADM)	X	X	X	X	1.Refilling the feed hose with additive 2.Resetting the tank level gauge
All	2008	C30	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X	X	1.Resetting the service reminder indicator
All	2008	C30	MPS6	Transmission Control Module(TCM)	X	X	X	X	
All	2008	C30		Central Electronic Module(CEM)	X	X	X	X	
All	2008	C30		Brake Control Module (BCM)	X	X	X	X	
All	2008	C30		Electric Power Steering (EPS)	X	X	X		
All	2008	C30		Park Assist Module (PAM)	X	X	X		
All	2008	C30		Audio Module(AUD)	X	X			
All	2008	C30		Airbag (SRS)	X	X	X		
All	2008	C30		Driver door module (DDM)	X	X	X	X	
All	2008	C30		Passenger door module (PDM)	X	X	X		
All	2008	C30		Power seat module, left (PSL)	X	X	X		
All	2008	C30		Power seat module, right (PSR)	X	X	X		
All	2008	C30		Accessory USB Unit (AUU)	X	X	X		
All	2008	C30		Trailer Module (TRM)	X	X	X		
All	2008	C30		Steering wheel module (SWM)	X	X	X	X	

All	2008	C30		Integrated Audio module (IAM)	X	X	X	X	
All	2008	C30		Climate control unit (CCM)	X	X	X		
All	2008	C30		Driver information module (DIM)	X	X	X	X	1.Resetting the service reminder indicator
All	2008	C30		Telephone (PHM)	X	X	X		
All	2008	C30		Remote Digital Audio Receiver (RDAR)	X	X	X		
All	2008	C30		Keyless vehicle module (KVM)	X	X	X	X	
All	2008	C30		Infotainment Control Module (ICM)	X	X	X		
All	2008	C30		Multimedia module (MMM)	X	X	X	X	
All	2008	C30		Combustion preheater Module(CPM)	X	X	X	X	
All	2009	C30	B4184S8	Engine Control Module(ECM)	X	X	X		
All	2009	C30	B4164S3	Engine Control Module(ECM)	X	X	X		
All	2009	C30	B4184S11	Engine Control Module(ECM)	X	X	X		
All	2009	C30	B5244S4	Engine Control Module(ECM)	X	X	X		
All	2009	C30	B4204S3	Engine Control Module(ECM)	X	X	X		
All	2009	C30	B5254T7	Engine Control Module(ECM)	X	X	X		
All	2009	C30	D4204T	Engine Control Module(ECM)	X	X	X		
All	2009	C30	D4164T	Engine Control Module(ECM)	X	X	X		
All	2009	C30	D5244T8	Engine Control Module(ECM)	X	X	X		
All	2009	C30	D5244T9	Engine Control Module(ECM)	X	X	X		
All	2009	C30	D5244T13	Engine Control Module(ECM)	X	X	X		
All	2009	C30	D4204T	Additive Dosing Module(ADM)	X	X	X		
All	2009	C30	D4164T	Additive Dosing Module(ADM)	X	X	X		
All	2009	C30	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X		
All	2009	C30	MPS6	Transmission Control Module(TCM)	X	X	X		
All	2009	C30		Central Electronic Module(CEM)	X	X	X	X	1.Ignition switch key position 2.Reading off programmed values
All	2009	C30		Accessory electronic module (AEM)	X	X	X	X	1.Reading off the configuration
All	2009	C30		Electric Power Steering (EPS)	X	X	X		
All	2009	C30		Park Assist Module (PAM)	X	X	X		
All	2009	C30		Audio Module(AUD)	X	X			
All	2009	C30		Airbag (SRS)	X	X	X		
All	2009	C30		Driver door module (DDM)	X	X	X	X	
All	2009	C30		Passenger door module (PDM)	X	X	X		
All	2009	C30		Accessory USB Unit (AUU)	X	X	X		
All	2009	C30		Trailer Module (TRM)	X	X	X		
All	2009	C30		Steering wheel module (SWM)	X	X	X		
All	2009	C30		Integrated Audio module (IAM)	X	X	X		
All	2009	C30		Brake Control Module (BCM)	X	X	X	X	
All	2009	C30		Remote Digital Audio Receiver (RDAR)	X	X	X		
All	2009	C30		Keyless vehicle module (KVM)	X	X	X	X	
All	2009	C30		Bluetooth Phone Module (BPM)	X	X	X		
All	2009	C30		Climate control unit (CCM)	X	X	X		
All	2009	C30		Power seat module, left (PSL)	X	X	X		

All	2009	C30		Power seat module, right (PSR)	X	X	X		
All	2009	C30		Combustion preheater Module(CPM)	X	X	X		
All	2009	C30		Telephone (PHM)	X	X	X		
All	2009	C30		Infotainment Control Module (ICM)	X	X	X	X	
All	2009	C30		Driver information module (DIM)	X	X	X	X	1.Resetting the service reminder indicator
All	2009	C30		Multimedia module (MMM)	X	X	X	X	
All	1998	C70 Coupe		Resetting the service reminder indicator(SRI)					X
All	1998	C70 Coupe	B5204T2	Fuel System/ Combined System	X	X	X		
All	1998	C70 Coupe	B5204T3	Fuel System/ Combined System	X	X	X		
All	1998	C70 Coupe	B5234T3	Fuel System/ Combined System	X	X	X		
All	1998	C70 Coupe	B5254T	Fuel System/ Combined System	X	X	X		
All	1998	C70 Coupe	AW50-42	Transmission Control Module(TCM)	X	X	X		
All	1998	C70 Coupe		Anti-brake System Module(ABS/BCM)	X	X	X		
All	1998	C70 Coupe		Climate Control Module(CCM)	X	X	X		
All	1998	C70 Coupe		Supplemental Restraint System Module(SRS)	X	X	X		
All	1998	C70 Coupe		Power Seat Module,Left(PSL)	X	X	X	X	
All	1998	C70 Coupe		Road Traffic Information Module(RTI)	X	X	X	X	
All	1998	C70 Coupe		Immobilizer	X	X	X	X	
All	1999	C70 Coupe		Resetting the service reminder indicator(SRI)					X
All	1999	C70 Coupe	B5204T3	Fuel System/ Combined System	X	X	X		
All	1999	C70 Coupe	B5204T4	Fuel System/ Combined System	X	X	X		
All	1999	C70 Coupe	B5234T3	Fuel System/ Combined System	X	X	X		
All	1999	C70 Coupe	B5254S DENSO	Fuel System/ Combined System	X	X	X		
All	1999	C70 Coupe	B5254T	Fuel System/ Combined System	X	X	X		
All	1999	C70 Coupe	AW50-42	Transmission Control Module(TCM)	X	X	X		
All	1999	C70 Coupe		Anti-brake System Module(ABS/BCM)	X	X	X		
All	1999	C70 Coupe		Climate Control Module(CCM)	X	X	X		
All	1999	C70 Coupe		Combustion Preheater Module(CPM)	X	X	X	X	
All	1999	C70 Coupe		Supplemental Restraint System Module(SRS)	X	X	X		
All	1999	C70 Coupe		Power Seat Module,Left(PSL)	X	X	X	X	
All	1999	C70 Coupe		Power Seat Module,Right(PSR)	X	X	X	X	
All	1999	C70 Coupe		Road Traffic Information Module(RTI)	X	X	X	X	
All	1999	C70 Coupe		Immobilizer	X	X	X	X	
All	1999	C70 Coupe		Lock and alarm	X	X	X	X	
All	2000	C70 Coupe		Resetting the service reminder indicator(SRI)					X
All	2000	C70 Coupe	B5204T3	Fuel System/ Combined System	X	X	X		
All	2000	C70 Coupe	B5204T4	Fuel System/ Combined System	X	X	X		
All	2000	C70 Coupe	B5234T3	Fuel System/ Combined System	X	X	X		
All	2000	C70 Coupe	B5244S	Fuel System/ Combined System	X	X	X		
All	2000	C70 Coupe	B5244T	Fuel System/ Combined System	X	X	X		
All	2000	C70 Coupe	AW50-42	Transmission Control Module(TCM)	X	X	X		
All	2000	C70 Coupe	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X		
All	2000	C70 Coupe		Anti-brake System Module(ABS/BCM)	X	X	X		

All	2000	C70 Coupe		Climate Control Module(CCM)	X	X	X		
All	2000	C70 Coupe		Combustion Preheater Module(CPM)	X	X	X	X	
All	2000	C70 Coupe		Supplemental Restraint System Module(SRS)	X	X	X		
All	2000	C70 Coupe		Power Seat Module,Left(PSL)	X	X	X	X	
All	2000	C70 Coupe		Power Seat Module,Right(PSR)	X	X	X	X	
All	2000	C70 Coupe		Road Traffic Information Module(RTI)	X	X	X	X	
All	2000	C70 Coupe		Immobilizer	X	X	X	X	
All	2000	C70 Coupe		Lock and alarm	X	X	X	X	
All	2001	C70 Coupe		Resetting the service reminder indicator(SRI)				X	
All	2001	C70 Coupe	B5204T4	Fuel System/ Combined System	X	X	X		
All	2001	C70 Coupe	B5234T3	Fuel System/ Combined System	X	X	X		
All	2001	C70 Coupe	B5244T	Fuel System/ Combined System	X	X	X		
All	2001	C70 Coupe	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X		
All	2001	C70 Coupe		Anti-brake System Module(ABS/BCM)	X	X	X		
All	2001	C70 Coupe		Climate Control Module(CCM)	X	X	X		
All	2001	C70 Coupe		Combustion Preheater Module(CPM)	X	X	X	X	
All	2001	C70 Coupe		Supplemental Restraint System Module(SRS)	X	X	X		
All	2001	C70 Coupe		Power Seat Module,Left(PSL)	X	X	X	X	
All	2001	C70 Coupe		Power Seat Module,Right(PSR)	X	X	X	X	
All	2001	C70 Coupe		Road Traffic Information Module(RTI)	X	X	X	X	
All	2001	C70 Coupe		Immobilizer	X	X	X	X	
All	2001	C70 Coupe		Lock and alarm	X	X	X	X	
All	2002	C70 Coupe		Resetting the service reminder indicator(SRI)				X	
All	2002	C70 Coupe	B5204T4	Fuel System/ Combined System	X	X	X		
All	2002	C70 Coupe	B5234T3	Fuel System/ Combined System	X	X	X		
All	2002	C70 Coupe	B5244T	Fuel System/ Combined System	X	X	X		
All	2002	C70 Coupe	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X		
All	2002	C70 Coupe		Anti-brake System Module(ABS/BCM)	X	X	X		
All	2002	C70 Coupe		Climate Control Module(CCM)	X	X	X		
All	2002	C70 Coupe		Combustion Preheater Module(CPM)	X	X	X	X	
All	2002	C70 Coupe		Supplemental Restraint System Module(SRS)	X	X	X		
All	2002	C70 Coupe		Power Seat Module,Left(PSL)	X	X	X	X	
All	2002	C70 Coupe		Power Seat Module,Right(PSR)	X	X	X	X	
All	2002	C70 Coupe		Road Traffic Information Module(RTI)	X	X	X	X	
All	2002	C70 Coupe		Immobilizer	X	X	X	X	
All	2002	C70 Coupe		Lock and alarm	X	X	X	X	
All	1998	C70 Conv		Resetting the service reminder indicator(SRI)				X	
All	1998	C70 Conv	B5204T2	Fuel System/ Combined System	X	X	X		
All	1998	C70 Conv	B5204T3	Fuel System/ Combined System	X	X	X		
All	1998	C70 Conv	B5234T3	Fuel System/ Combined System	X	X	X		
All	1998	C70 Conv	B5254T	Fuel System/ Combined System	X	X	X		
All	1998	C70 Conv	AW50-42	Transmission Control Module(TCM)	X	X	X		
All	1998	C70 Conv		Anti-brake System Module(ABS/BCM)	X	X	X		

All	1998	C70 Conv		Climate Control Module(CCM)	X	X	X		
All	1998	C70 Conv		Supplemental Restraint System Module(SRS)	X	X	X		
All	1998	C70 Conv		Power Seat Module,Left(PSL)	X	X	X	X	
All	1998	C70 Conv		Road Traffic Information Module(RTI)	X	X	X	X	
All	1998	C70 Conv		Immobilizer	X	X	X	X	
All	1999	C70 Conv		Resetting the service reminder indicator(SRI)					X
All	1999	C70 Conv	B5204T2	Fuel System/ Combined System	X	X	X		
All	1999	C70 Conv	B5204T3	Fuel System/ Combined System	X	X	X		
All	1999	C70 Conv	B5234T3	Fuel System/ Combined System	X	X	X		
All	1999	C70 Conv	B5254T	Fuel System/ Combined System	X	X	X		
All	1999	C70 Conv	AW50-42	Transmission Control Module(TCM)	X	X	X		
All	1999	C70 Conv		Anti-brake System Module(ABS/BCM)	X	X	X		
All	1999	C70 Conv		Climate Control Module(CCM)	X	X	X		
All	1999	C70 Conv		Combustion Preheater Module(CPM)	X	X	X	X	
All	1999	C70 Conv		Supplemental Restraint System Module(SRS)	X	X	X		
All	1999	C70 Conv		Power Seat Module,Left(PSL)	X	X	X	X	
All	1999	C70 Conv		Power Seat Module,Right(PSR)	X	X	X	X	
All	1999	C70 Conv		Road Traffic Information Module(RTI)	X	X	X	X	
All	1999	C70 Conv		Immobilizer	X	X	X	X	
All	1999	C70 Conv		Lock and alarm	X	X	X	X	
All	2000	C70 Conv		Resetting the service reminder indicator(SRI)					X
All	2000	C70 Conv	B5204T2	Fuel System/ Combined System	X	X	X		
All	2000	C70 Conv	B5204T3	Fuel System/ Combined System	X	X	X		
All	2000	C70 Conv	B5234T3	Fuel System/ Combined System	X	X	X		
All	2000	C70 Conv	B5244S	Fuel System/ Combined System	X	X	X		
All	2000	C70 Conv	B5254T	Fuel System/ Combined System	X	X	X		
All	2000	C70 Conv	AW50-42	Transmission Control Module(TCM)	X	X	X		
All	2000	C70 Conv	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X		
All	2000	C70 Conv		Anti-brake System Module(ABS/BCM)	X	X	X		
All	2000	C70 Conv		Climate Control Module(CCM)	X	X	X		
All	2000	C70 Conv		Combustion Preheater Module(CPM)	X	X	X	X	
All	2000	C70 Conv		Supplemental Restraint System Module(SRS)	X	X	X		
All	2000	C70 Conv		Power Seat Module,Left(PSL)	X	X	X	X	
All	2000	C70 Conv		Power Seat Module,Right(PSR)	X	X	X	X	
All	2000	C70 Conv		Road Traffic Information Module(RTI)	X	X	X	X	
All	2000	C70 Conv		Immobilizer	X	X	X	X	
All	2000	C70 Conv		Lock and alarm	X	X	X	X	
All	2001	C70 Conv		Resetting the service reminder indicator(SRI)					X
All	2001	C70 Conv	B5204T4	Fuel System/ Combined System	X	X	X		
All	2001	C70 Conv	B5234T3	Fuel System/ Combined System	X	X	X		
All	2001	C70 Conv	B5244T	Fuel System/ Combined System	X	X	X		
All	2001	C70 Conv	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X		
All	2001	C70 Conv		Anti-brake System Module(ABS/BCM)	X	X	X		

All	2001	C70 Conv		Climate Control Module(CCM)	X	X	X		
All	2001	C70 Conv		Combustion Preheater Module(CPM)	X	X	X	X	
All	2001	C70 Conv		Supplemental Restraint System Module(SRS)	X	X	X		
All	2001	C70 Conv		Power Seat Module,Left(PSL)	X	X	X	X	
All	2001	C70 Conv		Power Seat Module,Right(PSR)	X	X	X	X	
All	2001	C70 Conv		Road Traffic Information Module(RTI)	X	X	X	X	
All	2001	C70 Conv		Immobilizer	X	X	X	X	
All	2001	C70 Conv		Lock and alarm	X	X	X	X	
All	2002	C70 Conv		Resetting the service reminder indicator(SRI)				X	
All	2002	C70 Conv	B5204T4	Fuel System/ Combined System	X	X	X		
All	2002	C70 Conv	B5234T3	Fuel System/ Combined System	X	X	X		
All	2002	C70 Conv	B5244T	Fuel System/ Combined System	X	X	X		
All	2002	C70 Conv	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X		
All	2002	C70 Conv		Anti-brake System Module(ABS/BCM)	X	X	X		
All	2002	C70 Conv		Climate Control Module(CCM)	X	X	X		
All	2002	C70 Conv		Combustion Preheater Module(CPM)	X	X	X	X	
All	2002	C70 Conv		Supplemental Restraint System Module(SRS)	X	X	X		
All	2002	C70 Conv		Power Seat Module,Left(PSL)	X	X	X	X	
All	2002	C70 Conv		Power Seat Module,Right(PSR)	X	X	X	X	
All	2002	C70 Conv		Road Traffic Information Module(RTI)	X	X	X	X	
All	2002	C70 Conv		Immobilizer	X	X	X	X	
All	2002	C70 Conv		Lock and alarm	X	X	X	X	
All	2003	C70 Conv		Resetting the service reminder indicator(SRI)				X	
All	2003	C70 Conv	B5204T4	Fuel System/ Combined System	X	X	X		
All	2003	C70 Conv	B5234T9	Fuel System/ Combined System	X	X	X		
All	2003	C70 Conv	B5244T7	Fuel System/ Combined System	X	X	X		
All	2003	C70 Conv	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X		
All	2003	C70 Conv		Anti-brake System Module(ABS/BCM)	X	X	X		
All	2003	C70 Conv		Climate Control Module(CCM)	X	X	X		
All	2003	C70 Conv		Combustion Preheater Module(CPM)	X	X	X	X	
All	2003	C70 Conv		Supplemental Restraint System Module(SRS)	X	X	X		
All	2003	C70 Conv		Power Seat Module,Left(PSL)	X	X	X	X	
All	2003	C70 Conv		Power Seat Module,Right(PSR)	X	X	X	X	
All	2003	C70 Conv		Road Traffic Information Module(RTI)	X	X	X	X	
All	2003	C70 Conv		Immobilizer	X	X	X	X	
All	2003	C70 Conv		Lock and alarm	X	X	X	X	
All	2004	C70 Conv		Resetting the service reminder indicator(SRI)				X	
All	2004	C70 Conv	B5204T4	Fuel System/ Combined System	X	X	X		
All	2004	C70 Conv	B5234T9	Fuel System/ Combined System	X	X	X		
All	2004	C70 Conv	B5244T7	Fuel System/ Combined System	X	X	X		
All	2004	C70 Conv	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X		
All	2004	C70 Conv		Anti-brake System Module(ABS/BCM)	X	X	X		
All	2004	C70 Conv		Climate Control Module(CCM)	X	X	X		

All	2004	C70 Conv		Combustion Preheater Module(CPM)	X	X	X	X	
All	2004	C70 Conv		Supplemental Restraint System Module(SRS)	X	X	X		
All	2004	C70 Conv		Power Seat Module,Left(PSL)	X	X	X	X	
All	2004	C70 Conv		Power Seat Module,Right(PSR)	X	X	X	X	
All	2004	C70 Conv		Road Traffic Information Module(RTI)	X	X	X	X	
All	2004	C70 Conv		Immobilizer	X	X	X	X	
All	2004	C70 Conv		Lock and alarm	X	X	X	X	
All	2005	C70 Conv		Resetting the service reminder indicator(SRI)				X	
All	2005	C70 Conv	B5204T4	Fuel System/ Combined System	X	X	X		
All	2005	C70 Conv	B5234T9	Fuel System/ Combined System	X	X	X		
All	2005	C70 Conv	B5244T7	Fuel System/ Combined System	X	X	X		
All	2005	C70 Conv	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X		
All	2005	C70 Conv		Anti-brake System Module(ABS/BCM)	X	X	X		
All	2005	C70 Conv		Climate Control Module(CCM)	X	X	X		
All	2005	C70 Conv		Combustion Preheater Module(CPM)	X	X	X	X	
All	2005	C70 Conv		Supplemental Restraint System Module(SRS)	X	X	X		
All	2005	C70 Conv		Power Seat Module,Left(PSL)	X	X	X	X	
All	2005	C70 Conv		Power Seat Module,Right(PSR)	X	X	X	X	
All	2005	C70 Conv		Road Traffic Information Module(RTI)	X	X	X	X	
All	2005	C70 Conv		Immobilizer	X	X	X	X	
All	2005	C70 Conv		Lock and alarm	X	X	X	X	
All	2006	C70 Conv		Resetting the service reminder indicator(SRI)				X	
All	2006	C70 Conv	B5204T4	Fuel System/ Combined System	X	X	X		
All	2006	C70 Conv	B5234T9	Fuel System/ Combined System	X	X	X		
All	2006	C70 Conv	B5244T7	Fuel System/ Combined System	X	X	X		
All	2006	C70 Conv	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X		
All	2006	C70 Conv		Anti-brake System Module(ABS/BCM)	X	X	X		
All	2006	C70 Conv		Climate Control Module(CCM)	X	X	X		
All	2006	C70 Conv		Combustion Preheater Module(CPM)	X	X	X	X	
All	2006	C70 Conv		Supplemental Restraint System Module(SRS)	X	X	X		
All	2006	C70 Conv		Power Seat Module,Left(PSL)	X	X	X	X	
All	2006	C70 Conv		Power Seat Module,Right(PSR)	X	X	X	X	
All	2006	C70 Conv		Road Traffic Information Module(RTI)	X	X	X	X	
All	2006	C70 Conv		Immobilizer	X	X	X	X	
All	2006	C70 Conv		Lock and alarm	X	X	X	X	
All	2007	C70 Conv		Resetting the service reminder indicator(SRI)				X	
All	2007	C70 Conv	B5204T4	Fuel System/ Combined System	X	X	X		
All	2007	C70 Conv	B5234T9	Fuel System/ Combined System	X	X	X		
All	2007	C70 Conv	B5244T7	Fuel System/ Combined System	X	X	X		
All	2007	C70 Conv	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X		
All	2007	C70 Conv		Anti-brake System Module(ABS/BCM)	X	X	X		
All	2007	C70 Conv		Climate Control Module(CCM)	X	X	X		
All	2007	C70 Conv		Combustion Preheater Module(CPM)	X	X	X	X	

All	2007	C70 Conv		Supplemental Restraint System Module(SRS)	X	X	X		
All	2007	C70 Conv		Power Seat Module,Left(PSL)	X	X	X	X	
All	2007	C70 Conv		Power Seat Module,Right(PSR)	X	X	X	X	
All	2007	C70 Conv		Road Traffic Information Module(RTI)	X	X	X	X	
All	2007	C70 Conv		Immobilizer	X	X	X	X	
All	2007	C70 Conv		Lock and alarm	X	X	X	X	
All	2008	C70 Conv		Resetting the service reminder indicator(SRI)				X	
All	2008	C70 Conv	B5204T4	Fuel System/ Combined System	X	X	X		
All	2008	C70 Conv	B5234T9	Fuel System/ Combined System	X	X	X		
All	2008	C70 Conv	B5244T7	Fuel System/ Combined System	X	X	X		
All	2008	C70 Conv	AW55-50/51SN	Transmission Control Module(TCM)	X	X	X		
All	2008	C70 Conv		Anti-brake System Module(ABS/BCM)	X	X	X		
All	2008	C70 Conv		Climate Control Module(CCM)	X	X	X		
All	2008	C70 Conv		Combustion Preheater Module(CPM)	X	X	X	X	
All	2008	C70 Conv		Supplemental Restraint System Module(SRS)	X	X	X		
All	2008	C70 Conv		Power Seat Module,Left(PSL)	X	X	X	X	
All	2008	C70 Conv		Power Seat Module,Right(PSR)	X	X	X	X	
All	2008	C70 Conv		Road Traffic Information Module(RTI)	X	X	X	X	
All	2008	C70 Conv		Immobilizer	X	X	X	X	
All	2008	C70 Conv		Lock and alarm	X	X	X	X	
All	2009	C70 Conv	B5244S4	Engine	X	X	X	X	1.Resetting the adaptation values
All	2009	C70 Conv	B5244S5	Engine	X	X	X	X	1.Resetting the adaptation values
All	2009	C70 Conv	B5254T7	Engine	X	X	X	X	1. Readiness Code 2. Adaptation of the throttle unit 3. Quick test of exhaust camshaft control 4. Quick test of intake camshaft control 5. Quick test of the fuel pump(FP)
All	2009	C70 Conv	D4204T	Engine	X	X	X	X	1. Programming the optimizing parameters 2. Resetting the adaptation values 3. Resetting the odometer particle trap 4. Adaptation of the exhaust gas recirculation (EGR) valve 5. Combustion of soot particle, particle trap 6. Quick-test injectors
All	2009	C70 Conv	D5244T13	Engine	X	X	X	X	
All	2009	C70 Conv	D5244T8	Engine	X	X	X	X	
All	2009	C70 Conv	D5244T9	Engine	X	X	X	X	
All	2009	C70 Conv		Accessory electronic module (AEM)	X	X	X	X	
All	2009	C70 Conv		Audio module (AUD)	X	X			
All	2009	C70 Conv		Integrated Audio Module(IAM)	X	X	X	X	
All	2009	C70 Conv		Subwoofer Module(SUB)	X	X			
All	2009	C70 Conv		Airbag	X	X	X		
All	2009	C70 Conv		Convertible Roof Module(CRM)	X	X	X		

All	2010	C70 Conv		Immobilizer	X	X	X	X	
All	2010	C70 Conv		Lock and alarm	X	X	X	X	
All	2010	C70 Conv	B5244S4	Engine	X	X	X	X	
All	2010	C70 Conv	B5244S5	Engine	X	X	X	X	
All	2010	C70 Conv	B5254T7	Engine	X	X	X	X	
All	2010	C70 Conv	D4204T	Engine	X	X	X	X	
All	2010	C70 Conv	D5244T13	Engine	X	X	X	X	
All	2010	C70 Conv	D5244T8	Engine	X	X	X	X	
All	2010	C70 Conv	D5244T9	Engine	X	X			
All	2010	C70 Conv		Accessory electronic module (AEM)	X	X	X	X	
All	2010	C70 Conv		Audio module (AUD)	X	X			
All	2010	C70 Conv		Integrated Audio Module(IAM)	X	X	X		
All	2010	C70 Conv		Subwoofer Module(SUB)	X	X	X		
All	2010	C70 Conv		Airbag					
All	2010	C70 Conv		Convertible Roof Module(CRM)					
All	2003	XC90		Resetting the service reminder indicator(SRI)					X
All	2003	XC90	B5254T2	Engine Control Module(ECM)	X	X	X	X	
All	2003	XC90	B6294T	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
All	2003	XC90	D5244T	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters
All	2003	XC90	4T65AWD	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change 3.Calibration
All	2003	XC90	AW50/51AWD	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change 3.Calibration
All	2003	XC90	4T65AWD	Differential Electronic Module(DEM)	X	X	X		
All	2003	XC90	AW50/51AWD	Differential Electronic Module(DEM)	X	X	X		
All	2003	XC90		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
All	2003	XC90		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2003	XC90		Climate Control Module(CCM)	X	X	X		1.Adjusting ECC parameters
All	2003	XC90		Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
All	2003	XC90		Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2003	XC90		Power Seat Module(PSM)	X	X	X	X	1.Checking current values 2.Programming the remote control setting
All	2003	XC90		Supplemental Restraint System Module(SRS)	X	X	X		1.Calibrating the occupant weight sensor(OWS)
All	2003	XC90		Audio Module(AUM)	X	X			

All	2003	XC90		Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2003	XC90		Driver Information Module(DIM)	X	X	X	X	1.Resetting the service reminder indicator 2.Testing all needles and lamps in the dashboard 3.Programming the driver information module(DIM)
All	2003	XC90		Phone Module(PHM)	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
All	2003	XC90		Rear Electronic Module(REM)	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
All	2003	XC90		Steering Wheel Module(SWM)	X	X	X		
All	2003	XC90		Upper Electronic Module(UEM)	X	X	X	X	
All	2003	XC90		Infotainment control Module(ICM)	X	X	X	X	
All	2003	XC90		Multimedia Module(MMM)	X	X			
All	2003	XC90		Subwoofer Module(SUB)	X	X			
All	2003	XC90		Antenna Module(ATM)	X	X	X		
All	2003	XC90		CD Player Module(MP2)	X	X	X	X	
All	2003	XC90		MD Player Module(MP1)	X	X	X	X	
All	2004	XC90		Resetting the service reminder indicator(SRI)					X
All	2004	XC90	B5254T2	Engine Control Module(ECM)	X	X	X	X	
All	2004	XC90	B6294T	Engine Control Module(ECM)	X	X	X	X	1.Adaptation of the throttle unit 2.Quick test of exhaust camshaft control 3.Quick test of intake camshaft control 4.Quick test of the fuel tank system 5.Readiness Code
All	2004	XC90	D5244T	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters
All	2004	XC90	4T65AWD	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change
All	2004	XC90	AW50/51AWD	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adantation
All	2004	XC90	4T65AWD	Differential Electronic Module(DEM)	X	X	X		
All	2004	XC90	AW50/51AWD	Differential Electronic Module(DEM)	X	X	X		
All	2004	XC90	M66AWD	Differential Electronic Module(DEM)	X	X	X		
All	2004	XC90		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
All	2004	XC90		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2004	XC90		Climate Control Module(CCM)	X	X	X		1.Adjusting ECC parameters
All	2004	XC90		Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting

All	2004	XC90		Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2004	XC90		Power Seat Module(PSM)	X	X	X	X	1.Checking current values 2.Programming the remote control setting
All	2004	XC90		Supplemental Restraint System Module(SRS)	X	X	X		1.Calibrating the occupant weight sensor(OWS)
All	2004	XC90		Audio Module(AUM)	X	X			
All	2004	XC90		Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2004	XC90		Driver Information Module(DIM)	X	X	X	X	1.Resetting the service reminder indicator 2.Testing all needles and lamps in the dashboard 3.Programming the driver information module(DIM)
All	2004	XC90		Phone Module(PHM)	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
All	2004	XC90		Rear Electronic Module(REM)	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
All	2004	XC90		Steering Wheel Module(SWM)	X	X	X		
All	2004	XC90		Upper Electronic Module(UEM)	X	X	X	X	
All	2004	XC90		Infotainment control Module(ICM)	X	X	X	X	
All	2004	XC90		Multimedia Module(MMM)	X	X			
All	2004	XC90		Subwoofer Module(SUB)	X	X			
All	2004	XC90		Antenna Module(ATM)	X	X	X		
All	2004	XC90		CD Player Module(MP2)	X	X	X	X	
All	2004	XC90		MD Player Module(MP1)	X	X	X	X	
All	2005	XC90		Resetting the service reminder indicator(SRI)					X
All	2005	XC90	B5254T2	Engine Control Module(ECM)	X	X	X	X	
All	2005	XC90	B6294T	Engine Control Module(ECM)	X	X	X	X	
All	2005	XC90	D5244T	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters 1.Resetting adaption to zero
All	2005	XC90	4T65AWD	Transmission Control Module(TCM)	X	X	X	X	2.Resetting the counter for - Gearbox oil change 1.Resetting adaption to zero
All	2005	XC90	AW50/51AWD	Transmission Control Module(TCM)	X	X	X	X	2.Resetting the counter for - Gearbox oil change 3.Control module adaption 1.Resetting adaption to zero
All	2005	XC90	M66AWD	Transmission Control Module(TCM)	X	X	X	X	2.Resetting the counter for - Gearbox oil change 3.Control module adaption
All	2005	XC90	4T65AWD	Differential Electronic Module(DEM)	X	X	X		
All	2005	XC90	AW50/51AWD	Differential Electronic Module(DEM)	X	X	X		
All	2005	XC90	M66AWD	Differential Electronic Module(DEM)	X	X	X		
All	2005	XC90		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Check brake light switch adjustment 2.Calibration

All	2005	XC90		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2005	XC90		Climate Control Module(CCM)	X	X	X		1.Adjusting ECC parameters
All	2005	XC90		Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
All	2005	XC90		Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2005	XC90		Power Seat Module(PSM)	X	X	X	X	1.Checking current values 2.Programming the remote control setting
All	2005	XC90		Supplemental Restraint System Module(SRS)	X	X	X		1.Calibrating the occupant weight sensor(OWS) 2.Storing the ID number for the occupant weight sensor (OWS)
All	2005	XC90		Audio Module(AUM)	X	X			
All	2005	XC90		Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2005	XC90		Driver Information Module(DIM)	X	X	X	X	1.Resetting the service reminder indicator 2.Testing all needles and lamps in the dashboard 3.Programming the driver information module(DIM)
All	2005	XC90		Phone Module(PHM)	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
All	2005	XC90		Rear Electronic Module(REM)	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
All	2005	XC90		Steering Wheel Module(SWM)	X	X	X		
All	2005	XC90		Upper Electronic Module(UEM)	X	X	X	X	
All	2005	XC90		Infotainment control Module(ICM)	X	X	X	X	
All	2005	XC90		Multimedia Module(MMM)	X	X			
All	2005	XC90		Subwoofer Module(SUB)	X	X			
All	2005	XC90		Antenna Module(ATM)	X	X	X		
All	2005	XC90		CD Player Module(MP2)	X	X	X	X	
All	2005	XC90		MD Player Module(MP1)	X	X	X	X	
All	2006	XC90		Resetting the service reminder indicator(SRI)					X
All	2006	XC90	B5254T2	Engine Control Module(ECM)	X	X	X	X	
All	2006	XC90	B6294T	Engine Control Module(ECM)	X	X	X	X	
All	2006	XC90	D5244T	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters
All	2006	XC90	4T65AWD	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change
All	2006	XC90	AW50/51AWD	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaption

All	2006	XC90	M66AWD	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaption
All	2006	XC90	4T65AWD	Differential Electronic Module(DEM)	X	X	X		
All	2006	XC90	AW50/51AWD	Differential Electronic Module(DEM)	X	X	X		
All	2006	XC90	M66AWD	Differential Electronic Module(DEM)	X	X	X		
All	2006	XC90		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
All	2006	XC90		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2006	XC90		Climate Control Module(CCM)	X	X	X		1.Adjusting ECC parameters
All	2006	XC90		Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
All	2006	XC90		Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2006	XC90		Power Seat Module(PSM)	X	X	X	X	1.Checking current values 2.Programming the remote control setting
All	2006	XC90		Supplemental Restraint System Module(SRS)	X	X	X		1.Calibrating the occupant weight sensor(OWS) 2.Storing the ID number for the occupant weight sensor (OWS)
All	2006	XC90		Audio Module(AUM)	X	X			
All	2006	XC90		Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2006	XC90		Driver Information Module(DIM)	X	X	X	X	1.Resetting the service reminder indicator 2.Testing all needles and lamps in the dashboard 3.Programming the driver information module(DIM)
All	2006	XC90		Phone Module(PHM)	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
All	2006	XC90		Rear Electronic Module(REM)	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
All	2006	XC90		Steering Wheel Module(SWM)	X	X	X		
All	2006	XC90		Upper Electronic Module(UEM)	X	X	X	X	
All	2006	XC90		Infotainment control Module(ICM)	X	X	X	X	
All	2006	XC90		Multimedia Module(MMM)	X	X			
All	2006	XC90		Subwoofer Module(SUB)	X	X			
All	2006	XC90		Antenna Module(ATM)	X	X	X		
All	2006	XC90		CD Player Module(MP2)	X	X	X	X	
All	2006	XC90		MD Player Module(MP1)	X	X	X	X	
All	2007	XC90		Resetting the service reminder indicator(SRI)					X
All	2007	XC90	B5254T2	Engine Control Module(ECM)	X	X	X	X	
All	2007	XC90	B6294T	Engine Control Module(ECM)	X	X	X	X	

All	2007	XC90	B6324S	Engine Control Module(ECM)	X	X	X	X	
All	2007	XC90	D5244T	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters
All	2007	XC90	4T65AWD	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change
All	2007	XC90	AW50/51AWD	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaption
All	2007	XC90	M66AWD	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaption
All	2007	XC90	TF-80SC AWD	Transmission Control Module(TCM)	X	X	X	X	
All	2007	XC90	4T65AWD	Differential Electronic Module(DEM)	X	X	X		
All	2007	XC90	AW50/51AWD	Differential Electronic Module(DEM)	X	X	X		
All	2007	XC90	M66AWD	Differential Electronic Module(DEM)	X	X	X		
All	2007	XC90		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
All	2007	XC90		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2007	XC90		Climate Control Module(CCM)	X	X	X		1.Adjusting ECC parameters
All	2007	XC90		Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
All	2007	XC90		Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2007	XC90		Power Seat Module(PSM)	X	X	X	X	1.Checking current values 2.Programming the remote control setting
All	2007	XC90		Supplemental Restraint System Module(SRS)	X	X	X		1.Calibrating the occupant weight sensor(OWS) 2.Storing the ID number for the occupant weight sensor (OWS)
All	2007	XC90		Audio Module(AUM)	X	X			
All	2007	XC90		Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2007	XC90		Driver Information Module(DIM)	X	X	X	X	1.Resetting the service reminder indicator 2.Testing all needles and lamps in the dashboard 3.Programming the driver information module(DIM)
All	2007	XC90		Phone Module(PHM)	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
All	2007	XC90		Rear Electronic Module(REM)	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
All	2007	XC90		Steering Wheel Module(SWM)	X	X	X		
All	2007	XC90		Upper Electronic Module(UEM)	X	X	X	X	
All	2007	XC90		Infotainment control Module(ICM)	X	X	X	X	

All	2007	XC90		Multimedia Module(MMM)	X	X			
All	2007	XC90		Subwoofer Module(SUB)	X	X			
All	2007	XC90		Antenna Module(ATM)	X	X	X		
All	2007	XC90		CD Player Module(MP2)	X	X	X	X	
All	2007	XC90		MD Player Module(MP1)	X	X	X	X	
All	2008	XC90		Resetting the service reminder indicator(SRI)					X
All	2008	XC90	B5254T2	Engine Control Module(ECM)	X	X	X	X	
All	2008	XC90	B6294T	Engine Control Module(ECM)	X	X	X	X	
All	2008	XC90	B6324S	Engine Control Module(ECM)	X	X	X	X	
All	2008	XC90	D5244T	Engine Control Module(ECM)	X	X	X	X	1.Programming optimising parameters
All	2008	XC90	4T65AWD	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change
All	2008	XC90	AW50/51AWD	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaption
All	2008	XC90	M66AWD	Transmission Control Module(TCM)	X	X	X	X	1.Resetting adaption to zero 2.Resetting the counter for - Gearbox oil change 3.Control module adaption
All	2008	XC90	TF-80SC AWD	Transmission Control Module(TCM)	X	X	X	X	
All	2008	XC90	4T65AWD	Differential Electronic Module(DEM)	X	X	X		
All	2008	XC90	AW50/51AWD	Differential Electronic Module(DEM)	X	X	X		
All	2008	XC90	M66AWD	Differential Electronic Module(DEM)	X	X	X		
All	2008	XC90		Anti-brake System Module(ABS/BCM)	X	X	X	X	1.Check brake light switch adjustment 2.Calibration
All	2008	XC90		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2008	XC90		Climate Control Module(CCM)	X	X	X		1.Adjusting ECC parameters
All	2008	XC90		Driver Door Module(DDM)	X	X	X	X	1.Initializing the window position 2.Programming the remote control setting
All	2008	XC90		Passenger Door Module(PDM)	X	X	X	X	1.Initializing the window position
All	2008	XC90		Power Seat Module(PSM)	X	X	X	X	1.Checking current values 2.Programming the remote control setting
All	2008	XC90		Supplemental Restraint System Module(SRS)	X	X	X		1.Calibrating the occupant weight sensor(OWS) 2.Storing the ID number for the occupant weight sensor (OWS)
All	2008	XC90		Audio Module(AUM)	X	X			
All	2008	XC90		Central Electronic Module(CEM)	X	X	X	X	1.Resetting factory settings 2.Programming the control module 3.Reading off the alarm cause 4.Resetting the car
All	2008	XC90		Driver Information Module(DIM)	X	X	X	X	1.Resetting the service reminder indicator 2.Testing all needles and lamps in the dashboard 3.Programming the driver information module(DIM)

All	2008	XC90		Phone Module(PHM)	X	X	X		1.Volvo On call service check 2.Reinstalling the spare battery 3.Resetting the carphone code
All	2008	XC90		Rear Electronic Module(REM)	X	X	X	X	1.Calibrating the position sensor for Bi-Xenon lamps
All	2008	XC90		Steering Wheel Module(SWM)	X	X	X		
All	2008	XC90		Upper Electronic Module(UEM)	X	X	X	X	
All	2008	XC90		Infotainment control Module(ICM)	X	X	X	X	
All	2008	XC90		Multimedia Module(MMM)	X	X			
All	2008	XC90		Subwoofer Module(SUB)	X	X			
All	2008	XC90		Antenna Module(ATM)	X	X	X		
All	2008	XC90		CD Player Module(MP2)	X	X	X	X	
All	2008	XC90		MD Player Module(MP1)	X	X	X	X	
All	2009	XC90	B5254T2	Engine Control Module(ECM)	X	X	X	X	
All	2009	XC90		Driver information module(DIM)	X	X	X	X	
All	2009	XC90		Upper Electronic Module(UEM)	X	X	X	X	
All	2009	XC90	B6324S	Engine Control Module(ECM)	X	X	X	X	
All	2009	XC90	B8444S	Engine Control Module(ECM)	X	X	X	X	
All	2009	XC90		Anti-brake System Module(ABS/BCM)	X	X	X		
All	2009	XC90		Headlamp Control Module(HCM)	X	X	X		
All	2009	XC90		Steering angle sensor(SAS)	X	X	X		
All	2009	XC90		Infotainment Control Module(ICM)	X	X	X	X	
All	2009	XC90		Climate Control Module(CCM)	X	X	X		
All	2010	XC90	B5254T2	Engine Control Module(ECM)	X	X	X	X	
All	2010	XC90		Driver information module(DIM)	X	X	X	X	
All	2010	XC90		Upper Electronic Module(UEM)	X	X	X	X	
All	2010	XC90	B6324S	Engine Control Module(ECM)	X	X	X	X	
All	2010	XC90	B8444S	Engine Control Module(ECM)	X	X	X	X	
All	2010	XC90		Anti-brake System Module(ABS/BCM)	X	X	X		
All	2010	XC90		Headlamp Control Module(HCM)	X	X	X		
All	2010	XC90		Steering angle sensor(SAS)	X	X	X		
All	2010	XC90		Infotainment Control Module(ICM)	X	X	X	X	
All	2010	XC90		Climate Control Module(CCM)	X	X	X		
All	2009	XC60		Resetting the service reminder indicator(SRI)					X
All	2009	XC60	B6304T2	Engine Control Module(ECM)	X	X	X	X	1.Resetting adaptation
All	2009	XC60	B5244T4	Engine Control Module(ECM)	X	X	X	X	1.Resetting adaptation
All	2009	XC60	B5244T5	Engine Control Module(ECM)	X	X	X	X	1.Resetting adaptation
All	2009	XC60		Differential Electronic Module(DEM)	X	X	X		
All	2009	XC60		Anti-brake System Module(ABS/BCM)	X	X	X		
All	2009	XC60		Steering Wheel Angle Sensor Module(SAS)	X	X			
All	2009	XC60		Park Brake Module(PBM)	X	X	X		1. Activation and service
All	2009	XC60		Climate Control Module(CCM)	X	X	X	X	
All	2009	XC60		Driver Door Module(DDM)	X	X			

All	2009	XC60		Passenger Door Module(PDM)	X	X			
All	2009	XC60		Power Seat Module(PSM)	X	X	X		
All	2009	XC60		Supplemental Restraint System Module(SRS)	X	X	X		
All	2009	XC60		Combustion Preheater Module(CPM)	X	X			
All	2009	XC60		Trailer Module (TRM)	X	X			
All	2009	XC60		Central Electronic Module(CEM)	X	X	X	X	
All	2009	XC60		Driver Information Module(DIM)	X	X	X	X	
All	2009	XC60		Phone Module(PHM)	X	X	X		
All	2009	XC60		Infotainment control Module(ICM)	X	X	X	X	
All	2009	XC60		Keyless Vehicle Module(KVM)	X	X	X		
All	2009	XC60		Park Assist Module (PAM)	X	X			
All	2009	XC60		Forward Sensing Module(FSM)	X	X	X		
All	2009	XC60		Parking Assistance Camera(PAC)	X	X	X		
All	2009	XC60		Headlamp Control Module(HCM)	X	X	X		
All	2009	XC60		High level Display Front(HLDF)	X	X	X		
All	2009	XC60		Suspension Module(SUM)	X	X			
All	2009	XC60		Closing Velocity Module(CVM)	X	X			
All	2009	XC60		Power Operated Tailgate(POT)	X	X	X		
All	2010	XC60		Resetting the service reminder indicator(SRI)				X	
All	2010	XC60	B4204T6	Engine Control Module(ECM)	X	X	X	X	1.Resetting adaptation
All	2010	XC60	B4204T7	Engine Control Module(ECM)	X	X	X	X	1.Resetting adaptation
All	2010	XC60	B6304T2	Engine Control Module(ECM)	X	X	X	X	1.Resetting adaptation
All	2010	XC60	B6324S	Engine Control Module(ECM)	X	X	X	X	1.Resetting adaptation
All	2010	XC60	D5244T10	Engine Control Module(ECM)	X	X	X	X	
All	2010	XC60	D5244T14	Engine Control Module(ECM)	X	X	X	X	
All	2010	XC60	D5244T16	Engine Control Module(ECM)	X	X	X	X	
All	2010	XC60	D5244T4	Engine Control Module(ECM)	X	X	X	X	
All	2010	XC60	D5244T5	Engine Control Module(ECM)	X	X	X	X	
All	2010	XC60		Differential Electronic Module(DEM)	X	X	X		
All	2010	XC60		Transmission Control Module(TCM)	X	X			1 Initial adaptation
All	2010	XC60		Anti-brake System Module(ABS/BCM)	X	X	X		
All	2010	XC60		Steering Wheel Angle Sensor Module(SAS)	X	X	X		
All	2010	XC60		Park Brake Module(PBM)	X	X	X		1. Activation and service
All	2010	XC60		Climate Control Module(CCM)	X	X	X	X	
All	2010	XC60		Driver Door Module(DDM)	X	X			
All	2010	XC60		Passenger Door Module(PDM)	X	X			
All	2010	XC60		Power Seat Module(PSM)	X	X	X		
All	2010	XC60		Supplemental Restraint System Module(SRS)	X	X	X		
All	2010	XC60		Combustion Preheater Module(CPM)	X	X			
All	2010	XC60		Trailer Module (TRM)	X	X			
All	2010	XC60		Central Electronic Module(CEM)	X	X	X	X	
All	2010	XC60		Driver Information Module(DIM)	X	X	X	X	
All	2010	XC60		Phone Module(PHM)	X	X	X		

All	2010	XC60		Infotainment control Module(ICM)	X	X	X	X	
All	2010	XC60		Keyless Vehicle Module(KVM)	X	X	X		
All	2010	XC60		Park Assist Module (PAM)	X	X			
All	2010	XC60		Forward Sensing Module(FSM)	X	X	X		
All	2010	XC60		Parking Assistance Camera(PAC)	X	X			
All	2010	XC60		Headlamp Control Module(HCM)	X	X	X		
All	2010	XC60		High level Display Front(HLDF)	X	X	X		
All	2010	XC60		Suspension Module(SUM)	X	X			
All	2010	XC60		Closing Velocity Module(CVM)	X	X			
All	2010	XC60		Power Operated Tailgate(POT)	X	X	X		